Forward

Thank you for your purchasing our product. For best results and ensure that you are able to employ the features and functions of this product to their fullest, please read this manual carefully and keep it on hand for future reference.

Important

You are strongly recommended to keep a separate record of all-important data by other means to protect against its loss. We assume no responsibility for any damages or losses caused by deletion of data as a result of malfunction, repair or battery replacement. We also assume no responsibility for any loss or claim by the third parties, which may arise from the use of this product.

CONTENT

CHAPTER 1 OPERATION GUIDE

1.1 Brief of Function

1.2 General Operation Guide
1.2.1 Unit On/Off
1.2.2 About Power Supply
1.2.3 Keyboard Layout
1.2.4 Touch-and-go Icons
1.2.5 Input Methods
1.2.6 Categories of Contents
1.2.7 Cautions
1.2.8 System Initialization
1.2.9 Auto-power-off / Backlight Function
1.2.10 Trouble-shooting
1.2.11 General Principles
1.2.12 Specification Parameters

CHAPTER 2 Dictionary

2.1 E-C Dictionary
2.1.1 General Search
2.1.2 Nearest Word & Spelling Alternative
2.1.3 User's Dictionary
2.1.4 Wild-card Search
2.1.5 Cross-search
2.1.6 Saving Record
2.1.7 Dictionary History List
2.1.8 Function Key
2.1.9 Repeat & Follow
2.1.10 Fonts Zoom-in

2.2 Oxford Dictionary
2.2.1 General Search

2.2.2 Nearest Word, Spelling Alternative and Enter E-C Dict Directly.
2.2.3 User's Dictionary
2.2.4 Wild-card Search
2.2.5 Computer & New Technology Glossary
2.2.6 Cross-search
2.2.7 Saving Record
2.2.8 Dictionary History List
2.2.9 Function Key
2.2.10 Repeat & Follow
2.2.11 Oxford Paradigm
2.2.12 Fonts Zoom-in

2.3 C-E Dictionary
2.3.1 General Search
2.3.2 Nearest Word
2.3.3 Wild-card Search
2.3.4 User's Dictionary
2.3.5 Cross-search
2.3.6 Saving Record
2.3.7 Dictionary History List
2.3.8 Function Key
2.3.9 Repeat & Follow
2.3.10 Fonts Zoom-in

2.4 E-E Dictionary
2.4.1 General Search
2.4.2 Nearest Word & Spelling Alternative
2.4.3 Wild-card Search
2.4.4 User's Dictionary
2.4.5 Cross-search
2.4.6 Dictionary History List
2.4.7 Function Key
2.4.8 Repeat & Follow
2.4.9 Fonts Zoom-in

2.5 Network Dictionary
2.5.1 General Search
2.5.2 Nearest Word & Spelling Alternative

2.5.3 Wild-card Search
2.5.4 Cross-search
2.5.5 Dictionary History List
2.5.6 Function Key
2.5.7 Repeat & Follow
2.5.8 Fonts Zoom-in

2.6 IELTS Dictionary
2.6.1 General Search
2.6.2 Spelling Alternative & Nearest Word
2.6.3 Wild-card Search
2.6.4 Cross-search
2.6.5 Dictionary History List
2.6.6 Function Key
2.6.7 Repeat & Follow
2.6.8 Fonts Zoom-in

2.7 Slang
2.7.1 General Search
2.7.2 Spelling Alternative & Nearest Word
2.7.3 Wild-card Search
2.7.4 Cross-search
2.7.5 Dictionary History List
2.7.6 Function Key
2.7.7 Fonts Zoom-in

2.8 Proverb
2.8.1 General Search
2.8.2 Nearest Word
2.8.3 Cross-search
2.8.4 Repeat & Follow
2.8.5 Fonts Zoom-in

2.9 Conversation
2.9.1 General Search
2.9.2 Cross-search
2.9.3 Saving Record
2.9.4 Repeat & Follow

2.9.5 Fonts Zoom-in

2.10 Vocabulary

2.10.1 General Search

2.10.2 Cross-search

2.10.3 Saving Record

2.10.4 Repeat & Follow

2.10.5 Fonts Zoom-in

2.11 Sentence Repository

2.11.1 General Search

2.11.2 Cross-search

2.11.3 Repeat & Follow

2.11.4 Fonts Zoom-in

CHAPTER 3 LEARNING

3.1 Recognize Through Picture

3.2 Guess Through Picture

3.3 Interactive Dialogue

3.4 Listen & Learn

3.5 English Rules

3.6 Chinese Knowledge

3.7 Sentence Making

3.8 User's Dictionary

3.9 Revision

3.10 Test

CHAPTER 4 PHOTO ALBUM

CHAPTER 5 REFERENCE

5.1 Past Dynasty

5.1.1 Rise and Fall of Dynasty

5.1.2 Past Dynasty

5.1.3 Gregorian Calendar to Dynasty

5.2 Travel Guide

5.2.1 Airlines

5.2.2 Airports
5.2.3 Temperature
5.2.4 General Information
5.2.5 Voltage & Frequency

5.3 Size Equivalent

5.4 Telephone Information

5.5 Health Guide
5.5.1 First Aid Knowledge
5.5.2 Vitamin Guide
5.5.3 Standard Weight
5.5.4 Cholesterin

5.6 World Festival

5.7 Science Knowledge
5.7.1 Mathematics Formula
5.7.2 Physics Formula
5.7.3 Chemistry Formula
5.7.4 Element

5.8 Calorie

5.9 Olympic Information

CHAPTER 6 ORGANIZER

6.1 Personal Information
6.1.1 Inputting Data
6.1.2 Editing and Deleting Data
6.1.3 Password
6.1.4 Picture

6.2 Telephone Directory
6.2.1 Inputting Data

6.2.2 Searching Data
6.2.3 Editing and Deleting Data
6.2.4 Password
6.2.5 Picture

6.3 Memorandum
6.3.1 Inputting Data
6.3.2 Searching Data
6.3.3 Editing and Deleting Data
6.3.4 Copying Data
6.3.5 Password

6.4 Schedule
6.4.1 Inputting Data
6.4.2 Searching Data
6.4.3 Editing and Deleting Data
6.4.4 Copying Data
6.4.5 Password

6.5 Commemoration
6.5.1 Inputting Data
6.5.2 Searching Data
6.5.3 Editing and Deleting Data
6.5.4 Copying Data
6.5.5 Password

6.6 Shorthand
6.6.1 Inputting Data
6.6.2 Editing and Deleting Data

6.7 Notepad
6.7.1 Inputting Data
6.7.2 Searching Data
6.7.3 Editing and Deleting Data

6.8 Schedule Class
6.8.1 Inputting Data
6.8.2 Searching Data

6.8.3 Editing and Deleting Data
6.8.4 Copying Data

6.9 Voice Memo

6.10 To Do List
6.10.1 Inputting Data
6.10.2 Searching Data
6.10.3 Editing and Deleting Data
6.10.4 Copying Data
6.10.5 Password

6.11 Scheduler
6.11.1 Searching Data
6.11.2 Editing Data
6.11.3 Copying Data

CHAPTER 7 CALCULATOR AND FINANCE

7.1 Simple Calculator

7.2 Scientific Calculator

7.3 Paperless Calculator

7.4 Metric Conversion

7.5 Unit Conversion

7.6 Currency Conversion

7.7 Financial Management
7.7.1 Inputting Data
7.7.2 Searching Data
7.7.3 Editing and Deleting Data

7.8 Loan Interest

7.9 Fixed Deposit
7.9.1 Periodically-Deposit Account
7.9.2 Fixed Deposit Account
7.9.3 Ordinary Account

7.10 Loan Bidding
7.10.1 Simple Bidding Calculation
7.10.2 Complex Bidding Calculation

CHAPTER 8 TIME

8.1 Local Time

8.2 World Time

8.3 Timer

CHAPTER 9 CALENDAR

CHAPTER 10 GAMES

10.1 Brick Game

10.2 Apple Chess

10.3 Mine Hunt

10.4 Pairs

10.5 Plot

10.6 5-Tile

10.7 Wisdom Chess

10.8 Pipe

10.9 Fireman

10.10 Racing Car

CHAPTER 11 SYSTEM

11.1 System Setting

11.1.1 Character Display
11.1.2 Contrast / Brightness
11.1.3 Time / Date Format
11.1.4 Touch Panel Sound
11.1.5 Speech Level
11.1.6 Game Password
11.1.7 Repeat Time
11.1.8 Power Saving Mode
11.1.9 Wallpaper
11.1.10 Recognition
11.1.11 Keytone
11.1.12 Password
11.1.13 Opening Melody
11.1.14 Color Setup
11.1.15 Calibration
11.1.16 Opening Screen

11.2 Data Deletion

11.3 Memory Check

11.4 Brief of Function

11.5 PC Sync.

CHAPTER 12 LEARNER

12.1 Methods for Downloading Data

12.2 Viewing Data

12.3 Deleting Data

12.4 Functions of Repeat & Follow

12.5 Functions of Bookmark

CHAPTER 13 DOWNLOAD

13.1 Methods for Downloading Files

13.2 Viewing Data

13.3 Deleting Data

13.4 Functions of Bookmark

CHAPTER 14 APPENDIX

14.1 PC Sync.

14.1.1 Installation
14.1.2 Uninstallation
14.1.3 Start-up
14.1.4 Operation Guide
14.1.5 Synchronization
14.1.6 Corresponding Table of the Unit & Outlook

14.2 Download

14.2.1 Installation
14.2.2 Uninstallation
14.2.3 Start-up

14.2.4 Operations in Download

14.3 Important

14.4 Chart of Cangjie Input Method

14.5 Radical Table for Difficult Radicals

14.6 Chart of WangMa-5 Input Method

14.7 Contrastive Chart between Pinyin and Zhuyin

CHAPTER 1 OPERATION GUIDE

1. Brief of Function

This unit is a high-technology product suiting for the improvement of the society and meeting the demand of customers. It builds in the New Oxford English-Chinese Dictionary authorized by Oxford Publishing House, there are up to 120,000 words and phrases with specific definition stored. In addition, it includes Chinese-English Dictionary, English-English and English-Chinese Dictionary, and the four dictionaries can be cross searched to each other, which enables convenient inquiry. The photo function available in the New Oxford English-Chinese Dictionary, English-English Dictionary and English-Chinese Dictionary is helpful for you to master the words. The unit uses "TruVoice™" and Voxware, two top pronunciation systems of USA. The articulate and accurate pronunciation is of great help to improve your English. To solidify your groundwork of Chinese, the unit is equipped with Mandarin and Cantonese pronunciation system. Besides dictionaries, the unit also includes powerful organizer, such as Schedule Class, Voice Memo and Schedule, etc.. In addition, quick search function and added copy function enables you to deal with daily life with ease and thus to improve efficiency on your study or work. The unit is mainly characterized by its color LCD, Handwriting Recognition and Touch-and-go operation as well as Key-entry operation, which makes it very easy for you to use. Furthermore, the unit also supports other useful functions, including Interactive Dialogue, Recognize through Pictures, Photo Album and Games. So, it is a powerful and necessary device for everyone.

8 most important and useful new functions are listed as follows:

(1) The New Oxford English-Chinese Dictionary
(2) TruVoice™
(3) Photo Album
(4) Voice Memo
(5) Interactive Dialogue
(6) Schedule Class
(7) Sentence Making
(8) Q9 Chinese Inputting System.

Besides the special functions above mentioned, it includes Dictionary, Learning, Photo Album, Reference, Organizer, Calculator, Time, Calendar, Games, System, Learner and Download, etc.. Hereunder is the brief of these functions.

1 . DICTIONARY

a. E-C Dictionary

-- Pronunciation of English, Mandarin and Cantonese.

-- Voxware pronunciation system.
-- Relative pictures are provided to deepen the impression on the words.
-- Wisdom input method.
-- Search for grammar, examples and others (including antonym and other relative words).
-- Can be cross-searched with E-E Dictionary.
-- Spelling alternative and Nearest Word.
-- Wild card and User's Dictionary.
-- Cross-search function is available.
-- Store important words for Learn & Listen, Revision and Test.

b. Oxford Dictionary

-- Pronunciation of English, Mandarin and Cantonese.
-- Voxware Pronunciation system.
-- All English words, phrases and examples can be pronounced.
-- TruVoice™, the top pronunciation system of USA, the pronunciation is clear and accurate.
-- Relevant pictures are provided to deepen the impression on the words.
-- Wisdom input method.
-- Inquiry of phrase, compound ,derivative and example and others (including antonym and other relative words).
-- Spelling alternative and Nearest Word Search.
-- Wild card search and User's Dictionary.
-- Can be cross-searched with the Eng-Eng Dictionary.
-- The latest computer and new technology glossary are included.
-- Cross-search function is available.
-- Store important words for Learn & Learn, Revision and Test.

c. C-E Dictionary

-- Pronunciation of English, Mandarin and Cantonese.
-- Wisdom input method.
-- English proverbs and Chinese idioms can be searched.
-- Nearest word inquiry.
-- Wild card and User's Dictionary.
-- Cross-search function is available.
-- Store important words for Listen & Learn, Revision and Test.

d. E-E Dictionary

-- English word or phrases with specific English definition.
-- English pronunciation.
– Voxware pronunciation system.
-- Pictures are provided to better understand the words.
-- Wisdom input method.
-- Spelling alternative and Nearest word.
-- Wild card and User's Dictionary.
-- Cross-search function is available.

e. Network Dictionary

-- More than one thousand of daily network-related words collected.
-- Pronunciation of English, Mandarin and Cantonese.
-- Wisdom input method.
-- Spelling check and Nearest word.

f. IELTS

-- Pronunciation of English, Mandarin and Cantonese.
-- Voxware Pronunciation system
-- Grammar information can be viewed.
-- Wisdom input method.
-- Spelling alternative and Nearest word**.**
-- Wild card search.
-- Cross-search function is available

g. Slang

-- Pronunciation of English, Mandarin and Cantonese.
-- Typical examples for slang are given in this section.
-- Wisdom input method.
-- Nearest word.
-- Wild card search.
-- Cross-search function is available

h. Proverb

-- Pronunciation of English, Mandarin and Cantonese.
-- Typical examples for some English words are given in this section.
-- Wisdom input method.
-- Cross-search function is available

i. Conversation

-- Collection of 8 languages: Chinese, English, Japanese, French, Spanish, German, Italian
and Dutch, divided into nine categories of daily conversation.
-- All of these languages can be pronounced.
-- Cross- search function is available.
-- The important conversations can be stored for Listen & Learn, Revision and Test.

j. Vocabulary

-- A great volume of various words is stored, which contains 17 categories.
-- Pronunciation of English, Mandarin and Cantonese.
-- Cross-search function is available.
-- The important words can be stored for Listen & Learn, Revision and Test.

k. Sentence Repository

-- Typical examples for some English words are given in this section.
-- Vocabulary of each group can be pronounced in English, Mandarin and Cantonese.

2. LISENTING & LEARNING

a. Recognize through picture

-- It provides abundant pictures of various objects and its English and Chinese name of its structure.
-- Pronunciation of English, Mandarin and Cantonese.

b. Guess through picture

-- With vivid pictures of various matter including world-wide historical places, plants, animals and other common things, and its corresponding English name and Chinese definition.
-- Pronunciation of English, Mandarin and Cantonese.

c. Interactive dialogue

-- User can listen to the Chinese and English pronunciation of the paragraph or single sentence.
-- Role playing function is provided.
-- Sentence can be selected to perform repeat and follow function.
--Cross-search function is also available.

d. Listen & Learn

-- Records can be saved in Oxford E-C Dictionary, E-C Dictionary, C-E Dictionary, Conversation and Vocabulary.
-- Set the play mode.
-- Listen to the relevant pronunciation.

e. English Rules

-- Two parts: Stress Rules and Grammar Notes.
-- Many rules in Stress Rules listed with examples.
-- Grammar Notes collects the important essentials of grammar.
-- Cross-search function is available.

f. Chinese Knowledge

--“ Past Poems”, “Rhetoric”, “Quantifier” and “Punctuation” are available in this part.

g. Sentence Making

-- With five levels.
-- It is helpful for you to master the structure of English sentences

h. User’s Dictionary

-- Eng-Chi User’s Dictionary, Chi-Eng User’s Dictionary and Eng-Eng User’s Dictionary
are included.
-- You can create and expand its vocabulary.
-- Directly search the user-defined words in Oxford Dictionary, E-C Dictionary, E-E Dictionary and C-E Dictionary.

i. Revision

-- Data can be saved at any time for revision when you look up in Oxford Dictionary, Eng-Chi Dictionary, Chi-Eng Dictionary, Eng-Eng Dictionary, Conversation and Vocabulary.
-- Oxford Dictionary Review, Eng-Chi Dictionary Review, Chi-Eng Review, Conversation Review and Vocabulary Review are included.
-- Available to inquire relevant records.
-- You can delete the records.

j. Test

-- Data can be saved at any time for revision test when you look up in Oxford Dictionary, Eng-Chi Dictionary and Vocabulary.
-- Eng-Chi Dictionary Test, Oxford Dictionary Test, Vocabulary Test, Oxford Listening Test are included.
-- Available to inquire relevant records.
-- You can delete the records.

3. PHOTO ALBUM

-- You can search a picture in list mode and view it.
-- Slide show function enables you to play the selected pictures at certain speed randomly or repeatedly.
-- You can view, delete a picture and make a partial change to the picture information.

4. REFERENCE

a. Past Dynasty

-- It includes three parts: Rise and Fall of Dynasty, Past Dynasty and Gregorian Calendar to Dynasty.
-- In Rise and Fall of Dynasty, you can inquire information about the first and the last emperor of every dynasty, its capital and the period.
-- In Past Dynasty, you can search for information about the period during which an emperor was on the throne.
-- In Gregorian Calendar to Dynasty, you can search for information about the corresponding dynasty during a certain time of Gregorian Calendar (BC2591-AD1911) and the emperor at that time.

b. Travel Guide

-- Airlines, Airports, Temperature, General Information and Voltage & Frequency are included.

c. Size Equivalent

-- The size of Men’s shirts and Shoes, Women’s Blouses and Shoes are listed for your reference.

d. Telephone Information

-- International codes and area codes of different cities all over the world are collected.

e. Health Guide

-- First Aid Knowledge, Vitamin Guide and Standard Weight are included.

-- In Standard Weight, you can enter the height to check the standard weight.

f. World Festival

-- Festivals all over the world are introduced.

g. Science Knowledge

-- Maths formula, physics formula, chemistry formula and element are collected.

h. Calorie

-- The calorie content of various food are provided.

i. Olympic Information

-- It introduces you the detailed information about Olympics.

5. ORGANIZER

a. Personal Information

-- Personal information can be inputted in Chinese, English, numbers or symbols.

-- You can enter name, sex, birthday, home address telephone no., mobile phone no., email address, company name, company address, company telephone no., company fax no., ID card no., passport and its expire date, driving license no. and its expire date, credit card no. and its expire date, saving account no., cheque account no., contact person, relation and his/her address, blood type, doctor's name, doctor's address, doctor's telephone no., dentist's name, dentist's address, dentist's telephone no. and remarks.

– Personal photo can be kept here.

-- You can edit and delete data.

-- It is easy to edit and view.

-- Record can be locked for security purpose.

b. Telephone Directory

-- Data can be input in Chinese, English, numbers and symbols.

-- You can keep a photo for one record.

--You can enter photo name, category, e-mail address, mobile phone no., pager, home telephone no., home fax no., home address, company name, title, direct line,

company telephone no., company fax no., company email, company address and notes.
-- Total 8 main categories: Relative, Friend, Classmate, Colleague, Customer, Emergency, Company and Others.
-- Two ways to search: keyword search and family name list search.
-- You can view, search, edit, save and delete record.
-- Record can be locked for security purpose.

c. Memorandum
-- Data can be inputted in Chinese, English, numbers and symbols.
-- Two ways to search: date search and search by keyword.
-- You can view, search, edit, copy and delete record.
-- Record can be locked for security purpose.

d. Schedule
-- Data can be inputted in Chinese, English, numbers and symbols.
-- You can enter the date, time and details of the appointment.
-- Two ways to search: date search and search by keyword.
-- Alarm function is available. When the set time is due, the alarm will ring automatically.
-- You can view, search, edit, copy and delete data.
-- Record can be locked for security purpose.

e. Commemoration
-- Data can be inputted in Chinese, English, numbers and symbols.
-- Two ways to access Commemoration: Solar and Lunar Commemoration.
-- You can enter the date and content.
-- There are two ways to search: date search and search by keyword.
-- You can view, search, edit, copy and delete the records
-- Record can be locked for security purpose.

f. Shorthand
-- In this application, you can write down the events or the notes on the screen directly.
-- it is very easy to search, view, edit, save and delete record.

g. Notepad
-- Write or draw directly on the screen.

-- You can view, edit, save and delete data.

h. Schedule Class

-- “Abbreviation” and “Color” are supported for quick search.
-- Data can be inputted in Chinese, English, numbers and symbols.
-- You can enter the time, lesson, abbreviation, teacher, place, remark and color.
-- Two ways to search: search by keyword and weekday search.
-- You can search, view, edit, copy and delete record.

i. Voice Memo

-- Can record and play.
-- Play mode: Non-stop, New, and Selected.
-- You can rename and delete the data.

j. To Do List

-- Data can be inputted in Chinese, English, numbers and symbols.
-- You can enter due date, category, priority, status and content.
-- Status falls into three sections: To be done, done or pending.
-- Two ways to search: date search and keyword search.
-- You can search, view, edit, copy and delete record.
-- Record can be locked for security purpose.

k. Scheduler

-- You can view the daily or weekly records in Schedule, To Do List or Commemoration.
-- Records can be searched by date.
-- You can view, search, edit, copy and delete the records

6. CALCULATOR

a. Simple Calculator

-- Basic memory functions are available.
-- Four operations: addition, subtraction, multiplication and division.
-- Switch between plus and minus.
-- Percentage (%) computation.

b. Scientific Calculator

-- Four operations.

-- Functions computation.

c. Paperless Calculator

-- You can enter many values to perform four operations.

-- You can inqire the series number and edit data.

d. Metric Conversion

--Common metric units are available.

-- Two-way conversion between different units.

-- View the exchange rate anytime.

e. Unit Conversion

-- 6 kinds of common units.

-- Two-way conversion between different units.

-- View the exchange rate at any time.

f. Currency Conversion

-- Various currencies stored for conversion.

-- Different currencies are convertible in accordance with the rate.

-- You can choose any currency to set the exchange rate.

-- You can create eight currencies for conversion.

g. Financial Management

-- You can store several accounts, handling credit and debit for calculating balance.

-- You can create, edit, delete, transfer accounts and view reports.

h. Loan Interest

-- Calculations on monthly payment and total interest.

-- Inquiry for interest paid, principal paid, total amount paid and loan left of particular year and month.

-- You can edit and renew the data.

i. Fixed Deposit

-- Include periodically-deposit account, fixed deposit account and ordinary account.

-- Calculations on interest, interest rate, term of annuity, principal, total amount and periodical payment.

-- You can edit and renew data.

j. Loan Bidding

-- Include simple Bidding Calculation and Complex Bidding Calculation.
-- You can enter number of loan raiser, number of bidders, principal and bidding offer to calculate the total gain, total gain, the annual interest rate and return rate.
-- You can edit and renew data.

7. TIME

a. Local Time

-- It displays the name, current date and time of the local city.
-- Switch time format between 12 hours and 24 hours.
-- You can set Daylight Saving Time.
-- The time and date can be set.
-- You can set the alarm time according to the local time.

b. World Time

-- It displays the name, current date and time of the world city.
-- It shows Daylight Saving Time.
-- Switch time format between 12 hours and 24 hours.

c. Timer

-- It is used to count down.

8. CALENDAR

-- You can search for dates in solar calendar from 1901 to 2059 and its corresponding dates in lunar calendar.
-- If a date is marked with a Schedule record or Commemoration record, the corresponding icon will be shown on the right of the date.
-- It displays an entire month on each page with marks of Commemoration and Schedule records, you can check them easily.
-- Date search.

9. GAMES

-- Brick game, apple chess, mine hunt, pairs, plot, 5-tile, wisdom chess, pipe, fireman

and racing car are available in this section.

10. SYSTEM

a. System Setting

-- Character Display: set display mode as English, Traditional and Simplified Chinese fonts.
-- Contrast / Brightness: adjust the contrast and brightness of the screen
-- Time /Date Format: set time/date format
-- Touch Panel Sound: set touch panel sound on/off
-- Speech Level: set the rate and frequency of speech
-- Game Password: install, set on/off or clear game password
-- Repeat Time: set the repeat time
-- Save Power Mode: set “Auto Power Off” or “Screen Dim Mode”
-- Wallpaper: set a picture as the wallpaper
-- Recognition: set “Recognition Glossary”, “Fonts Recognition” or “Recognition Rate”
-- Keytone: set keytone on or off
-- Password: set password, set password on/off or clear password for data
-- Opening Melody: set opening melody on/off
-- Color Setup: set the color for “Title bar of screen”, “Title bar of pop up window” or “Scroll bar”
-- Calibration: calibrate the location of the stylus
-- Opening Screen: set Entry Screen or Opening Screen

b. Data Deletion

-- You can select to remove the data of E-C User’s Dictionary, C-E User’s Dictionary, E-E User’s Dictionary, Oxford Revision, E-C Revision, C-E Revision, Conv. Revision, Vocab. Revision, Personal Information, Telephone Directory, Memo, Schedule, Solar Commemoration, Lunar Commemoration, Shorthand, Notepad, Schedule Class, To Do List, Voice Memo, Financial Management, Photo, All unmarked data, All marked data and all download files.

c. Memory Check

-- The percentage of occupied and remaining memory is displayed.
-- You can enter the data deletion function.

d. Brief of Function

-- Functions of this unit are introduced briefly.

e. PC Sync.

-- You can connect the unit with PC to synchronize data freely between them.

11. LEARNER

-- The Truvoice files that are downloaded from your computer are saved in the Learner of the unit. You can transmit new files including daily conversation, vocabulary and exercise, to the unit at any time. Repeat and follow function are supported in this section.

12. DOWNLOAD

-- The files that are downloaded from your computer are saved in the Download of the unit. You can transmit new files to the unit to expand its utility at any time.

13. OTHERS

Chinese Input Method

-- There are 12 input methods: Handwrite, Taiwan, Mandarin, Canton, Total Strokes, 5-Strokes, CangJie, Simple, DaYi, Q9, Wang Ma and Radical.

English input method

-- Touch-and-go operation, Handwriting Recognition and Key-entry.

1.2 General Operation Guide

1.2.1 Unit On/Off

Press the button in the front of the unit tenderly to open it. When you close the unit, just fold it softly and there will be a click that indicates it is closed well.

1.2.2 About Power Supply

The unit is powered by a rechargeable lithium battery. When the message “Low voltage! Turn off machine!” appears on the screen, it indicates the power supply is weak, please turn off the machine and recharge it.

Note: *Never replace the battery by yourself. If necessary, please send it to your*

nearest Customers Service Center.

Steps of recharging the battery:

--A built-in lithium battery is provided in the unit. New battery or the battery that has been not used for a long time requires to be charged for a period of 3 hours.

--After the adapter is securely connected to the outlet, the red indicator represents the unit is being charged. When the charge indicator turns green, the unit is completely charged.

--The charge period varies with the adapter and the battery.

About using adapter:

1. Press ⏻ to turn off the unit before plugging in the adapter.
2. Press ⏻ to turn off the unit before unplugging the adapter. If the unit hangs because of improper use, just re-plug the adapter. If nece RESET y, use .
3. Adapter Specification

Hong Kong:	Input :	AC220V-240V	50Hz
	Output:	DC6V	450mA
Taiwan :	Input :	AC100V-120V	60Hz
	Output:	DC6V	500mA
U.S.A :	Input :	AC100V-120V	60Hz
	Output:	DC6V	500mA

4. You are highly recommended to use the AC adapter provided by our agency or other
   qualified brands. We assume no responsibility for any damage to the unit arising from the use of AC adapters, which do not comply with the national standard.

2.3 Keyboard Layout

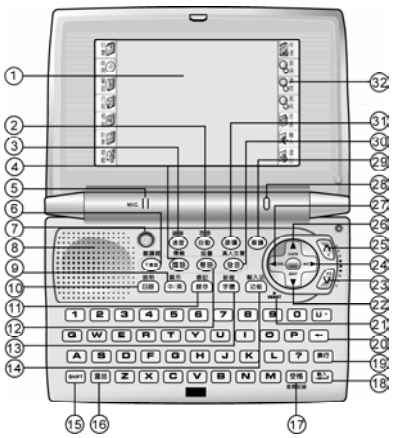

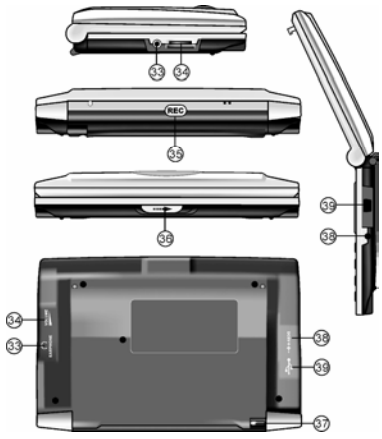

(1) LCD
(2) Auto repeat / Play
(3) Speech level / Record
(4) Mandarin pronunciation
(5) Microphone
(6) Download / Hot key of Learner
(7) Power on / off
(8) Speaker
(9) Switch display mode between Chinese and English / Switch between Chinese and English input method
(10) Menu / Help
(11) Save records of Dict. / Mark records of Organizer
(12) Cantonese pronunciation
(13) Fonts size / New
(14) Function / Input Method key
(15) SHIFT
(16) Exit
(17) Space / Dict. search history
(18) Enter / = / First tone of Taiwan &Mandarin input method
(19) Linefeed
(20) Backspace
(21) RESET
(22) Down arrow / Edit records of Organizer
(23) Page down
(24) Right / Character insert
(25) Page up
(26) Up arrow/ Switch between the upper case and lower letter
(27) Left / Delete
(28) Charge indicator
(29) Repeat key
(30) English pronunciation
(31) Follow key
(32) Touch icon
(33) Earphone jack
(34) Volume control
(35) Record hot key

(36) Unfold button
(37) Stylus jack
(38) Adapter jack
(39) Data link jack

Special Function Keys

The followings are special function keys. You should press SHIFT first and then press special function key to perform corresponding function instead of pressing them simultaneously.

1. SHIFT + 說明 目錄 — View operation instruction
2. SHIFT + 輸入法 功能 — Selection of Chinese and English Input method
3. SHIFT + 錄音 速度 — Record
4. SHIFT + 放音 自動 — Play
5. SHIFT + 聽讀區 下載區 — Enter Learner
6. SHIFT + 標籤 國語 — PC Synchronization
7. SHIFT + 插圖 粵語 — View the picture
8. SHIFT + 真人女聲 發音 — Listen to Voxware pronunciation
9. SHIFT + ← — Display local time
10. SHIFT + CAPS — Switch between upper case and lower letter
11. SHIFT + EDIT — Enter edit mode
12. SHIFT + DEL — Delete the character at the icon
13. SHIFT + INS — Switch between inserting and overwriting characters

1.2.4 Touch icons

The function of on-screen touch icons are as follows:

1.

Enter Oxford Dictionary

2.

Enter E-C Dictionary

3.

Enter C-E Dictionary

4.

Enter E-E Dictionary

5.

Return to main menu

6.

Confirm

7. Return to the previous screen

8. Enter Calendar

9. Enter Time

10. Enter Telephone Directory

11. Enter Schedule

12. Enter Photo Album

13. Enter Calculator

14. Enter Games

2.5 Input Methods

Chinese input methods

-- Press C/E or 顯示 中/英 to switch to Chinese input mode, and then input Chinese.
-- Tap 倉 on on-screen keyboard or press SHIFT + 輸入法 功能 to display Chinese input methods (12 input methods are provided, i.e. Taiwan, Mandarin, Cantonese, Total Strokes, 5-Strokes, CangJie, Simple, Radical, DaYi, Handwrite, Q9 and Wang Ma) , an icon, which represents a Chinese input method, will show on lower left screen after choosing 倉 red input method (e.g.) , so select one by key-entry or touching screen.

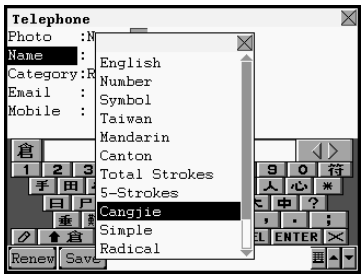

-- Press DEL INS to display more candidate characters
-- Press the corresponding numeric key to select the desired character or tap it with the

stylus slightly to choose it.

-- You can also tap to switch to Handwriting Recognition mode. In this mode, write

on the screen and then tap the desired character at the selection field to choose it.

Taiwan

Input characters by Taiwanese phonetic alphabets.
e.g. input "ㄑㄧㄥ" and then press 6 3 4 to input the first tone, press , , for the second, the third, the fourth tone respectively, press 7 for soft tone.

Mandarin

Input Mandarin phonetic alphabets.
e.g. input "QING", then press 輸入.
(It's the same as Taiwan to input tone.)

Cantonese

Input Cantonese phonetic alphabets,
e.g. input "CHING", then press 輸入 to confirm.

Total Strokes

Input characters by inputting total number of strokes. e.g. input "8", and then press 輸入 to confirm.

5-strokes

5-strokes is an input method through which input the codes of the first four strokes of the character and the last stroke. If a character has less than five strokes, just input the codes of the strokes it has accordingly.

Chart of 5-strokes code

Code	Stroke	Strokes	Description
1	horizontal	left→right	一 ㇀
2	vertical	upper→lower	丨 亅
3	left-falling	upper right→lower left	丿
4	right-falling	upper left→lower right	乀 丶
5	turning	with turning	乙 乛 𠃌 𠃍 乚 乁 𠄌

e.g. input "11211", and then press 輸入 to confirm.

CangJie (only exists in traditional Chinese and English mode)

Input the Cangjie codes of a character,
e.g. input "手一月", and press 輸入 or 空格 to confirm.
(*Please refer to Chart of Cangjie Input Method*)

Telephone
Photo :None
Name :青_
Category:Relative
Email :
Mobile :
倉
1 2 3 4 5 6 7 8 9 0 符
手 田 水 口 廿 卜 山 戈 人 心 艸
日 尸 木 火 土 竹 十 大 中 ?
重 難 金 女 月 弓 一 , . ;
C/E DEL ENTER
Renew Save

Simple (only exists in traditional Chinese and English mode)

It is similar to CangJie, but only needs to

input the first and the last code of the Chinese character.
e.g. input "手月".

Telephone
Photo :None
Name :_
Category:Relative
Email :
Mobile :
簡 1拐 2期 3掰 4需 5過 6掉 7滴 8末 9捎
1 2 3 4 5 6 7 8 9 0 符
手 田 水 口 廿 卜 山 戈 人 心 艸
日 尸 木 火 土 竹 十 大 中 ?
重 難 金 女 月 弓 一 , . ;
C/E DEL ENTER
Renew Save

Radical

Firstly input the number of strokes of the radical, then input number of remaining strokes after choosing the desired radical.
e.g. input “5” and press 輸入 to confirm.

Choose “玄” and input the remaining Strokes “6”, press 輸入 to confirm.

DaYi

Input character by DaYi codes.

e.g. input “日月”, and then press 輸入 to confirm.

Wang Ma (only exists in simplified Chinese mode)

Usually, to find a character, input the codes of first three roots and the last root. If the character has less than 4 roots, just input the codes of its roots plus a recognition code to make it 4 codes. If this still cannot make 4 codes, use SPACE key to make the balance.
e.g. input “QGTY” to find “稣”.

(*Please refer to Chart of Wang Ma 5-strokes Input Method.)*

Q9

Chinese character is composed of various strokes. There are five fundamental strokes in the pictograph system. These basic strokes are “horizon”, “vertical”, “left-falling” , “dot” and “turning”. Q9 Stroke Input takes these basic strokes and another 24 additional radicals to input every Chinese character. Before operating this input method, we should distinguish the kind of character by the structures first. They

are categorized as isolated characters and divisible characters. The latter can be differed from the former just by the possibility of left to right dividing the components.

The input rules:

* Taking two strokes as input codes from the top to the bottom, if meeting isolated characters.
* Taking two strokes on the left in sequence and then the first stroke on the right as input codes, if meeting divisible characters.
* Taking first the radicals ,if suitable.

Note: *Besides the basic strokes, "right-rising" is regarded as a "horizon" and "right-falling" as a "point".*

Examples:

天: taking two "horizon" strokes and selecting.

香: first taking a "left-falling" stroke , then finding a radical「禾」and selecting 香.

津: taking two "point" strokes on the left and than taking a "turning" stroke on the right.

湖: taking two "point" strokes on the left, omitting the middle part「古」and taking a "left-falling" stroke on the right.

Note: *Like the character divided into three parts, the middle part should be omitted.*

e.g. to input "港", just tap the first two codes of left part and the first code of right part sequentially.
" Dot (㇏) → Dot (㇏) → radical (艹) "

You can view the help of Q9 input method by tapping [說明].

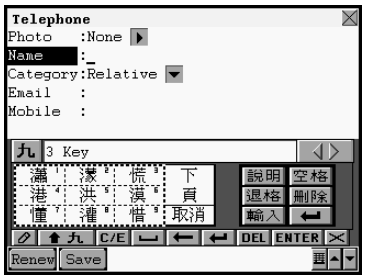

Handwriting Recognition

Tap to switch to Handwriting Recognition.
Write down the characters in the square on the screen. (The program will recognize the characters automatically.)
Tap the desired character at selection field.

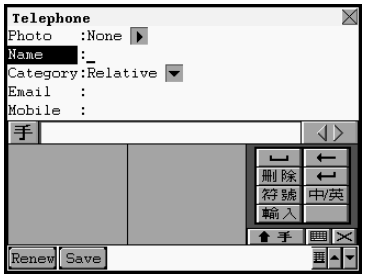

English Input Method

-- Press 顯示 中/英 to switch to English input mode.
-- Press SHIFT + CAPS to switch between uppercase and lowercase.
-- Press SHIFT to switch to capitalization temporarily.

-- You can also tap [ ] to switch to Handwriting Recognition and write on the square, and then choose the letter with stylus at selection field.

Special Symbols
-- In Chinese or English input mode, press [SHIFT] + [空格] or tap [SYM] , then tap the desired symbol at selection field to choose it.
-- The following symbols will be provided for selection:
!@ # $ % & / ( ) ’ < > [ ] - ? * ^ { } ” | = \ , . ; : + – × ÷ o ~ “

1.2.6 Categories of Contents
There are total 12 categories in the unit: Dictionary, Learning, Photo Album, Reference, Organizer, Calculator, Time, Calendar, Games, System, Learner and Download.

Main menu:
-- Press [CAPS] [EDIT] [DEL] [INS] to choose a desired item.
-- After you choose a category, press [CAPS] [EDIT] [DEL] [INS] to move the cursor and then press [輸入] to enter the application or tap the desired application to choose it directly.

1.2.7 Cautions
Please pay attention to the following items while you use the unit, otherwise we will charge the cost of materials for maintenance.
-- Avoid humidity, never let water or other liquid flow into the unit.
-- Don’t place the unit under direct sunlight or near heat.
-- Do not repair the unit by yourself, please contact our Customers Service Center for repair.
-- Prevent the unit from falling down on the ground, bending or strong impact which may
result in LCD crack.
-- Don’t apply strong detergent cleaning agents to clean the unit.
-- Don’t touch the screen with sharp-headed objects.
-- Charge the unit in time when the battery is flat.
-- Before doing reset or sending the unit for repair, please keep a copy of all important data so as to re-input them later.

System Initialization
If the unit malfunctions, the message “時間和其他設定可能已變. 如有需要, 請重新設定. 确定(Time and other settings may have been changed. Reset them if necessary. Enter)” will appear on the screen. Tap [确定] to enter main menu screen.

Press [退出] [RESET] , the message “系統重新設定? 是(Y)/ 否(N)(Initializing System? Y/N)” will appear on the screen. Press [Y] to reset the system, the screen will show a message “系統重新設定時用戶資料將被刪除! 是否繼續? 是(Y)/ 否(N)(The data may be deleted while initializing system! Continue? Y/N)”. Press [Y] to delete; [N]

data, press to keep it. After you press to confirm initialization, a alert message “所有用戶資料將被刪除! 是(Y)/ 否(N)(User’s data will be deleted! Initialize System? Y/N)” will be displayed on the screen. If you press , the data will be deleted and you are requested to renew the data; press to keep the data. After the system is reset and data is deleted, the system will prompt you to set the calibration. Once calibration is OK, a relevant message will be displayed on the screen. Following on-screen instructions, user can reset time and other settings.

Keeping record copy of important data

We strongly recommend that you keep separate written records of all important data, we assume no responsibility for any damage or loss caused by deletion of data as a result of improper use, repair or battery replacement. We also assume no responsibility for any loss or claim by the third parties, which may arise from the use of this product, e.g. the number of the credit card is stolen or data has been revised, etc..

1.2.8 Default System Setting

Language Setting: Traditional Chinese
Time Format: 12:00Hours
Date Format: D/M/Y
Local City: Hong Kong
Local Date: 01/01/2003
Local Time: 12:00AM
Alarm: Off
DST: Off
Keytone: On
Touch Panel Sound: On
Auto Off Period: 3 minutes
First Screen: Main Menu
Memory Check: 100%
Set Password: None

1.2.9 Auto-Power-Off / Backlight Function

1. If no key operation is made within the auto power-off period, the unit will be automatically switched off or the backlight will be turned on. While the unit is off, press
   ⓞ to restart it. While the backlight is on, press any key or touch any part of the screen
   with the stylus to return to normal.
2. If automatic power-off takes place while inputting or editing, the data you are working on will not be saved.
3. The alarm will still function upon the set time even if the unit is powered off.

Note: *The automatic power-off time / backlight function can be set in System Setting.*

1.2.10 Trouble-shooting

Q: The unit can not be switched on, why?
A: The possible cause is that the battery is out of supply.
So users are requested to charge the unit or use adapter.

Q: The pronunciation is too weak /loud, the speed is too slow /fast, and the tone is too low / high, why?
A: It's likely to set the volume too high / low, the speed too slow / fast, and the tone too
low / high, please adjust the volume, the rate and the frequency in Speech Level. In addition, you can adjust volume by using the volume button on the left side of unit.

Q: Why is the screen not clear?
A: The screen contrast or brightness is probably not adjusted well, user can adjust it in Contrast / Brightness or by pressing SHIFT then the C key or SHIFT then the AC key in any modes.

Q: Why does the calibration fail?
A: It's possible to calibrate improperly, please make the calibration again. You are highly recommended to use stylus instead of finger to avoid error that may lead to failure of touching the screen.

Q: Why is the unit often off automatically?
A: The auto-off period is too short. So, please set the Auto Off Period in System Setting again. The auto-off function helps you save electricity of battery. The longer is the auto off period, the more electricity is used.

Q: If the password is forgotten, what to do?
A: Please contact our Customer Service Center, we would remove the password as soon as possible, but you are requested to show the own certificate. And you are strongly recommended to keep a separate record of your password.

1.2.11 General Principles

Display: Color LCD

Power Supply: Battery (Built-in) – A rechargeable lithium battery

Adapter – Please refer to the part of **About Power Supply**

1.2.12 Specification Parameters

1. Flash Memory Size : 8MBytes (64Mbits)
2. Maskrom Size : 72 MBytes (576Mbits)
3. Color LCD Size : 320(W)x240(H)dots

CHAPTER 2 DICTIONARY

2.1 E-C Dictionary

The dictionary offers phonetic symbols and Chinese definitions of English words and phrases, which can be searched out by inputting them or by sequential search. You can also view the grammar information, such as Synonym, Antonym, Example and so on. Cross-search to Oxford Dictionary, E-C Dictionary, C-E Dictionary is available in this dictionary. And you can also listen to the English, Mandarin, and Cantonese pronunciation. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported)

***Note**: This dictionary covers vocabulary in Eng-Chi Dictionary and Oxford Dictionary. The symbol ">" before the headword represents E-C Dictionary, otherwise, it refers to Oxford Dictionary. The picture corresponding to some words can be viewed.*

2.1.1 General Search

Wisdom input method is available in this application. Input the first letter of desired word, a list of nearest words will be automatically displayed on the screen.

Press [Δ/C] [AC/V] or touch [▲] [▼] to turn pages to search.

Press [CAPS] [EDIT] to search sequentially or continue to input the desired word.

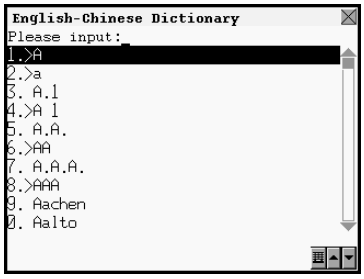

e.g. Input "earth", the word will be automatically shown on the screen.

While inputting the English letters, press [←] to delete the letter on the left of the cursor; Press [空格] to insert a space.

Press [輸入] to search the phonetic symbols and Chinese definitions of the English word.(or directly double click

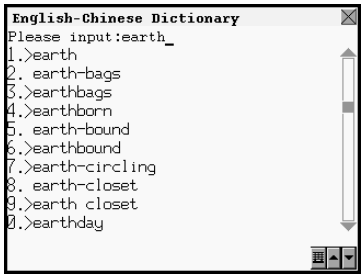

the desired word from the browse list.)

Press ▲ ▼ or touch ▲ ▼ to view the previous or next record.
Press CAPS EDIT 0 U to view the content of the record.
Touch [R.V.] to listen to TruVoice English pronunciation.
Press 真人女聲 發音 to listen to English pronunciation of the word.
Press 標準 國語 to listen to the Mandarin pronunciation.
Press 粵語 粵語 to listen to the Cantonese pronunciation.

Press SHIFT 粵語 or touch [PIC.] to view the picture corresponding to the word.
Press 退出 to return to the previous screen.

Touch [E-E] to view the definition of the word in Eng-Eng Dictionary.
In [E-E] dictionary mode, touch [E-C] to return to the Eng-Chi Dictionary screen.

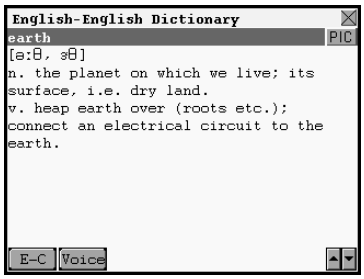
English-English Dictionary
earth
PIC
[ə:θ, ɜθ]
n. the planet on which we live; its surface, i.e. dry land.
v. heap earth over (roots etc.); connect an electrical circuit to the earth.
E-C
Voice

Touch [Gram.] to view its grammar information like synonym, antonym, example and so on.

2.1.2 Nearest Word and Spelling Alternative

The two functions are supported when the input word or phrase is wrongly spelt or unavailable in E-C Dictionary.

A. Nearest Word

The nearest words will be listed alphabetically according to the input word.

e.g. Input “Proscrib” (wrong spelling of “Proscribe”) and press [輸入] to confirm.

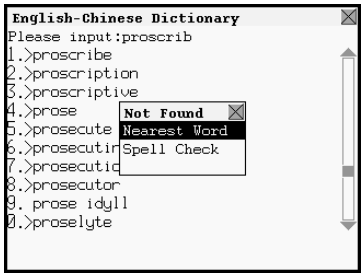

Choose “Nearest Word” and press [輸入] to view the nearest word.

B. Spelling Alternative

Correct words or phrases proofread by the program according to the inputted word or phrase will be listed.

e.g. Input “flowar” (wrong spelling of “flower”) and press [輸入] to confirm.

Choose “Spelling Alternative” and press [輸入] to enter.
Press [CAPS] [EDIT] to select the desired word, then press [輸入] to confirm.

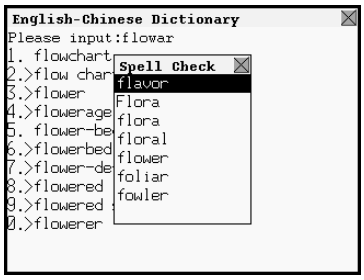

2.1.3 User's Dictionary

If the inputted word, which exists both in Eng-Chi Dictionary and User's Dictionary, you can choose either of them to view its definition.

***Note**: It will go to Eng-Chi Dictionary or User's Dictionary directly if the word exists only in either of them.*

Input "apple", then press 輸入 to confirm. (This word has been created in User's Dictionary and exists in Eng-Chi Dictionary simultaneously.) Choose "User's Dictionary" and press 輸入 to confirm. (For details about User's Dict. operations, please refer to User's Dict.)

2.1.4 Wild-card Search

If part of word or phrase is uncertain, input "?" and "*" to perform wild-card search, the dictionary will suggest some words or phrases for your choice. ("?" represents one uncertain letter and "*" represents none of letters or more than one letter.)

Access Eng-Chi Dictionary. Input "bab?"("?" represents one uncertain letter), then press 輸入 to confirm.

Press AC to continue the search until the message "End of the list!" is shown on the screen.

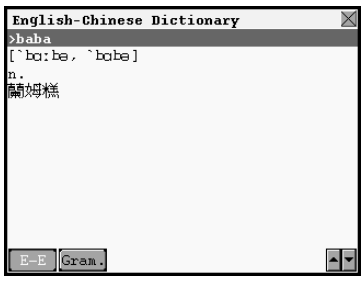

e.g. Input “ac*n” (* represents none of letters or more than one letter.), then press [ENTER] to confirm.

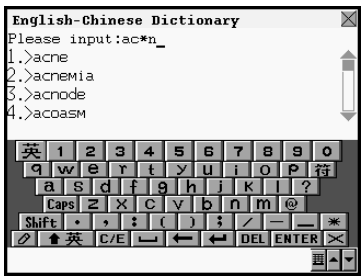

Press [AC] to continue the search until the message “End of the list!” appears on the screen.

2.1.5 Cross-Search

In Eng-Chi Dictionary, you can highlight an English word or a Chinese character to look up its Chinese or English definition by cross-searching to Eng-Chi Dictionary, Oxford Dictionary, Eng-Eng Dictionary, and Chi-Eng Dictionary. Cross-search function can be performed unlimitedly. (*Note: This function is also applicable to other dictionaries of the unit.)*

Enter the explanation screen of some word.
e.g. “go”.

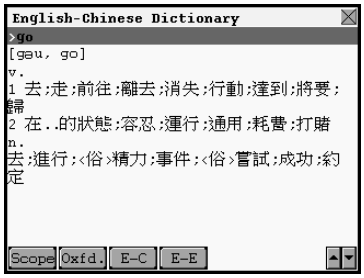

Press [INS] to highlight the first word, then press [CAPS] [EDIT] [DEL] [INS] to highlight the desired Chinese character or English word, you may also touch the word directly.

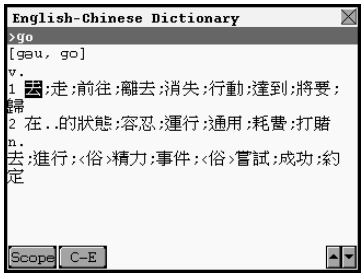

Highlight one Chinese character/phrase, touch [C-E] or press 輸入 to view its English explanation in Chi-Eng Dict..

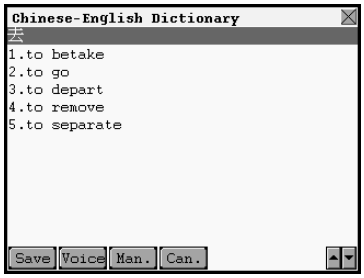

Highlight an English word, press 輸入 to view its Chinese definition in Oxford Dict. and Eng-Chi Dict or English explanation in Eng-Eng Dict..

Note: *Hold SHIFT or touch [Scope], then press DEL INS to highlight more than one word to apply to cross-search function (or touch and drag on screen with the stylus directly). Touch [Quit] to cancel the setting ..*

2.1.6 Saving Record

In Eng-Chi Dictionary, you can save some important and difficult words as records for purpose of revision, test and listen & learn. (For Revision , Test and Listen & Learn, please refer to the relevant parts for details.)

Enter the explanation screen of some word.
Press 標記 儲存 or touch [Save] to save it, or press 輸入法 功能 , then choose [Save] to save it.

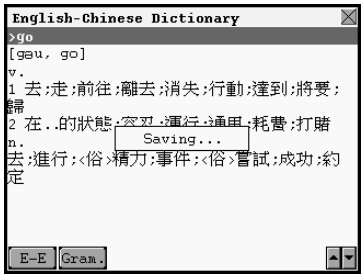

If you'd like to clear the saved record, find it out in Revision, Test or Listen & Learn, then press the relevant function key to delete it.

2.1.7 Dictionary History List

In input or definition view mode, press 空格 查閱記錄, or press 輸入法 功能 in definition mode, then choose "History List" to view the latest 20 records.

2.1.8 Function Key

Enter the definition screen of some word, press 輸入法 功能 to select "Dictionary History List" to view the latest 20 records or choose "Save" to save the current record.

2.1.9 Repeat and Follow

In definition mode,

1. Press 真人女聲 發音 to listen to the English pronunciation.
2. Press 錄音 速度 to adjust the speed of speech.
3. Press 放音 自動 to perform the auto-repeat function, the system will automatically speak out the pronunciation of all records in selected file. (repeat times depending upon user's setting) Press 退出 to end auto-repeat function.
4. Press 複讀 to apply to the repeat function, the record will be pronounced for 1-99 times. (repeat times depending upon the setting) Press 退出 to exit.
5. Press 跟讀, the system will speak out the original pronunciation once and then start recording after the message "Recording after beep sound" appears on the screen. While recording, press 退出 to stop. After recording, you will listen to the original pronunciation and recording once. If SHIFT 複讀 are pressed , the original pronunciation and recording will be played repeatedly. (repeat times depending upon the setting). Press 退出 to exit.

Note: *Repeat times can be set in "Repeat Time" in "System Setting".*

2.10 Font Zoom-in

Enter the definition screen of some word.

Press 新增字體 to zoom in the font, press it again to revert to original.

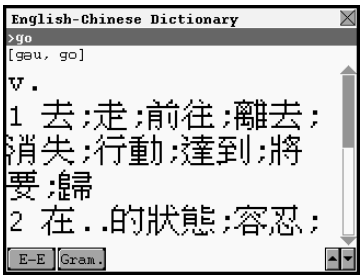

2.2 Oxford Dictionary

The New Oxford English-Chinese Dictionary is licensed by Oxford University Press. You can perform general search and sequential search. The dictionary offers phonetic symbols and Chinese definitions of English words. You can also view the grammar information like phrases, compounds, derivative, antonyms and so on. Cross-search to E-C Dictionary, C-E Dictionary and E-E Dictionary are available in this application. You can also listen to the English, Mandarin and Cantonese pronunciation. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

Note: *The picture corresponding to some words can be viewed.*

2.2.1 General Search

Press ▲C ▼AC or touch ▲ ▼ to turn pages to search.

Press ▲CAPS ▼EDIT to search sequentially or continue to input the desired word.

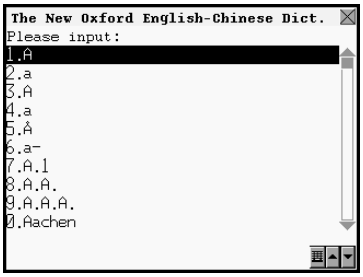

e.g. Input “moon” and press 輸入 to view its phonetic notation and definition (or double click the desired English word from the browse list directly.).

Press ▲ ▼ or touch ▲ ▼ to view the previous or next record.

Press CAPS EDIT [O] [U·] to view the content of the record.

Touch [R.V.] to listen to TruVoice English pronunciation.

Press 真人女聲 發音 to listen to English pronunciation of the word.

Press 標準 國語 to listen to the Mandarin pronunciation.

Press 延長 粵語 to listen to the Cantonese pronunciation.

Touch [E-E] to view the definition of the word in Eng-Eng Dictionary.

Touch [Gram.] to view its grammar information like synonym, antonym, example and so on.

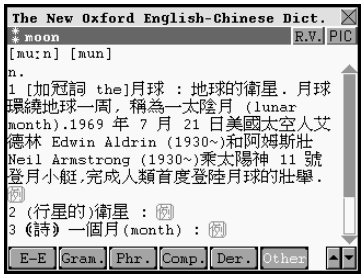

Press SHIFT 粵語 or touch [PIC.] to view the picture corresponding to the word.

Press 退出 to return to the previous screen.

Touch [Phr.] to view the phrase.

Highlight a phrase and press 輸入 to view its Chinese definition.

Touch [Comp] to view the compound words.

Highlight one and press 輸入 to view its Chinese definition.

Touch [Deriv] to view the derivative.
Touch [Other] to view more grammar information if valid (including antonym and other relevant words).

Highlight "例" (or touch it directly), then press 輸入 to view the example.
Press 真人女聲 發音 to listen to English pronunciation.
Press 標準 國語 to listen to Mandarin pronunciation.
Press 地區 粵語 to listen to Cantonese pronunciation.
Press 退出 to return to the previous screen.

2.2.2 Nearest Word, Spelling Alternative and enter E-C Dict. directly

The three functions are provided when the inputted word or phrase is wrongly spelt or unavailable in the Oxford Dictionary.

Nearest Word

-- Please refer to the relevant part in "E-C Dict." section for details.

Spelling Alternative

-- Please refer to the relevant part in "E-C Dict." section for details.

C. Enter E-C Dict. directly

If a word is unavailable in this dictionary, the system will automatically switch to E-C Dict., so you can look up this word in "E-C Dict." directly.

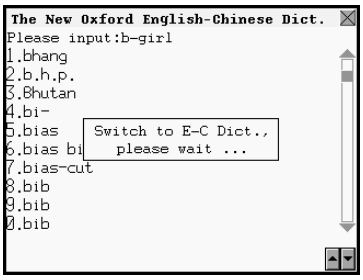

e.g. Input “B-girl” and press 輸入 to confirm.

2.2.3 User’s Dictionary

-- Please refer to the relevant part in “E-C Dict.” section for details.

2.2.4 Wild-card Search

-- Please refer to the relevant part in “E-C Dict.” section for details.

2.2.5 Computer & New Technology Glossary

If the inputted word exists both in Oxford Dict. and Computer & New Tech. Glossary, you can choose either of them to view its definition.

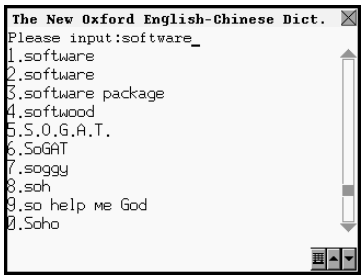

Choose the first word to enter Oxford Dict.; choose the second to view its definition in Computer & New Tech. Glossary.
In the explanation screen of the first word, press 確定 to enter Computer & New Technology Glossary to view its details.

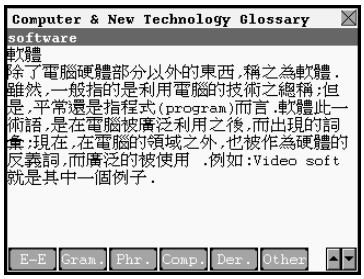

2.2.6 Cross-search

-- Please refer to the relevant part in “E-C Dict.” for details.

2.2.7 Saving record

-- Please refer to the relevant part in “E-C Dict.” for details.

2.2.8 Dictionary History List

-- Please refer to the relevant part in “E-C Dict.” for details.

2.2.9 Function key

-- Please refer to the relevant part in “E-C Dict.” for details.

2.2.10 Repeat and Follow

-- Please refer to the relevant part in “E-C Dict.” for details.

2.2.11 Oxford Paradigm

When accessed, it allows you to view the Oxford Paradigm in New Oxford English-Chinese Dictionary.

Press [SHIFT] [說明 目錄] to select “ Help”
or “Oxford Paradigm”.

Choose “Oxford Paradigm”.
Press [CAPS] [EDIT] [C] [AC] to view its details.
Press [退出] to exit.

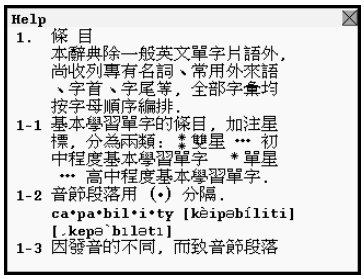

2.2.12 Font Zoom-in

--For details, please see the relevant part in “E-C Dict.”.

2.3 C-E Dictionary

C-E Dictionary contains many Chinese idioms. Eleven Chinese input methods are available, they are Handwriting Recognition, Taiwan, Mandarin, Cantonese, Total Strokes, Wang Ma 5-stroke, Cangjie, Simple, Radical, DaYi, and Q9. (***Note:*** *How to input Chinese characters, please refer to the instructions of Chinese Input Method for details.*) Input a Chinese character with one of Chinese Input Methods mentioned above for its English definition. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

2.3.1 General Search

Wisdom input method is available in this application. Input desired Chinese character or idiom and press 輸入, then you will get its English definition quickly. (For details, please refer to the relevant parts in E-C Dict..)

e.g. Input "田" and press 輸入 to view its English definition.

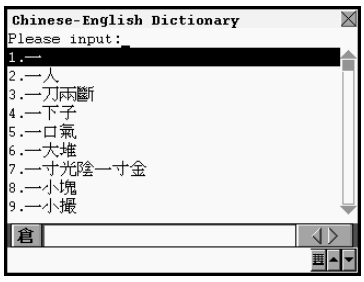

Press ▲ ▼ or touch ▲ ▼ to view the previous or next record.
Press ▲ ▼ O U· to view the content of the record.
Press 發音 國語 粵語 or touch [Voice]/[Man.]/[Can.] to listen to its relevant pronunciation;
Press 退出 to end the pronunciation.

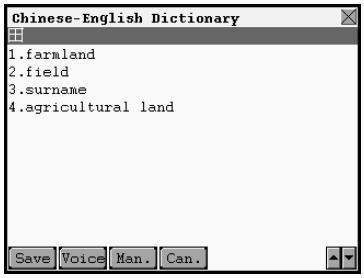

2.3.2 Nearest Word

This function is enabled when the inputted Chinese character is wrongly spelt or unavailable in the C-E Dictionary. The nearest Chinese characters will be listed in Big 5 strokes order.

e.g. Input "葭" and press 輸入 to confirm.

If the character is unavailable in this unit, the nearest words will be listed on the screen.

2.3.3 Wild-card Search

If part of Chinese character or phrase is uncertain, you can input the certain part and replace the uncertain with "?" or "*". ("?" represents one uncertain character, while "*" represents none of letters or more than one character)

e.g. Input "水?"and press 輸入 to confirm.
Press AC to view the next record until the message "End of the list!" appears.

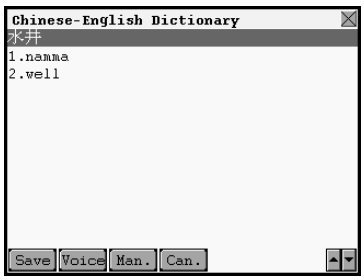

2.3.4 User's Dictionary

If the inputted Chinese character exists both in C-E Dictionary and User's Dictionary, you can select either of them to view its definition. (If the inputted character exists only in C-E Dictionary or User's Dictionary, it will enter C-E Dictionary or User's Dictionary directly.)

e.g. input "水", then press 輸入 to confirm.
***(Note:** "水" has been created in User's Dictionary and exists in C-E Dictionary simultaneously.)*
Choose "User's Dictionary" and press 輸入 to confirm.
*(**Note:** For further instruction, please refer to User's Dictionary*)

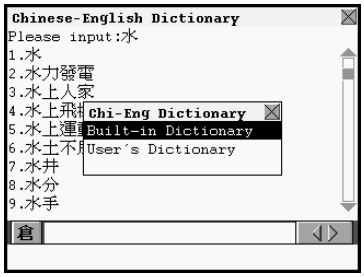

2.3.5 Cross-search

-- Please refer to the relevant part in E-C Dictionary for details.

2.3.6 Saving Record

-- Please refer to the relevant part in E-C Dictionary for details.

2.3.7 Dictionary History List

-- Please refer to the relevant part in E-C Dictionary for details.

2.3.8 Function key

-- For details, see the relevant section in E-C Dictionary.

2.3.9 Repeat and Follow

-- For details, see the relevant section in E-C Dictionary.

2.3.10 Font Zoom-in

-- For details, see the relevant section in E-C Dictionary.

2.4 E-E Dictionary

This dictionary has a very large vocabulary. You can perform general search and sequential search. The dictionary offers phonetic symbols and English definitions of English words. In this application, you can also cross-search to E-C Dictionary and listen to the English pronunciation. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

Note: *For some words, you can view its corresponding picture.*

2.4.1 General Search

Input desired English word/phrase and press 輸入 to get its definition.
(For details, please refer to the relevant section in E-C Dictionary.)

e.g. Input “moon”, then press 輸入 to view its phonetic notation and English definition.

Press ▲C ▼AC or touch ▲ ▼ to view the previous or next record.
Press ▲CAPS ▼EDIT to view more information.
Press 真人女聲 發音 to listen to the English pronunciation.
Touch [R.V] to listen to the TruVoice English pronunciation.

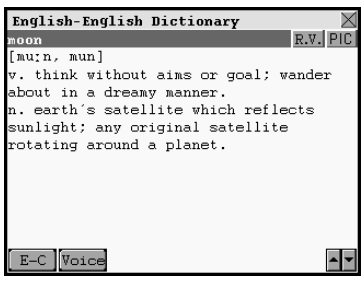

Touch [PIC.] to view its picture.
Touch [E-C] to cross-search to E-C
Dictionary.

2.4.2 Nearest Word and Spelling Alternative

-- For details, please refer to the relevant section in E-C Dictionary.

2.4.3 Wild-card Search

-- For details, please refer to the relevant section in E-C Dictionary.

2.4.4 User's Dictionary

--For details, please refer to the relevant section in E-C Dictionary.

2.4.5 Cross-search

-- For details, please refer to the relevant section in E-C Dictionary.

2.4.6 Dictionary History List

-- For details, please refer to the relevant section in E-C Dictionary.

2.4.7 Function key

-- For details, please refer to the relevant section in E-C Dictionary.

2.4.8 Repeat and Follow

-- For details, please refer to the relevant section in E-C Dictionary.

2.4.9 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.5 Network Dictionary

It provides various common words about network for your reference. Wisdom input method is available, which enables your convenient inquiry. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

2.5.1 General Search

Input the desired word, then press 輸入 to get its Chinese definition.
(For details, please refer to the relevant section in E-C Dictionary.)

e.g. Input “LCD”, then press [輸入]
to view its Chinese definition.

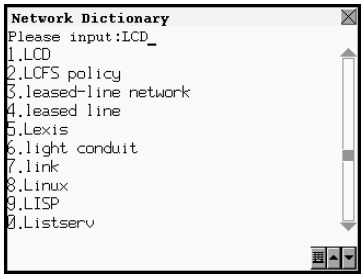

Press [▲] [▼] or touch [▲] [▼]
to view the previous or next record.
Press [CAPS] [EDIT] [O] [U·] to view more information.
Touch [R.V] to listen to the TruVoice English pronunciation.
Press [萬人文翻 發音] [標準 國語] [延音 粵語] or touch [Voice]/[Man.]/[Can.] to listen to the relevant pronunciation.

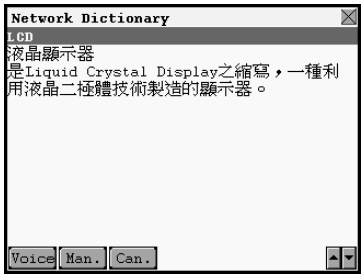

2.5.2 Nearest Word and Spelling Alternative

-- For details, please refer to the relevant section in E-C Dictionary.

2.5.3 Wild-card Search

-- For details, please refer to the relevant section in E-C Dictionary.

2.5.4 Cross-search

-- For details, please refer to the relevant section in E-C Dictionary.

2.5.5 Dictionary History List

-- For details, please refer to the relevant section in E-C Dictionary.

2.5.6 Function key

-- For details, please refer to the relevant section in E-C Dictionary.

2.5.7 Repeat and Follow

-- For details, please refer to the relevant section in E-C Dictionary.

2.5.8 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.6 IELTS

The unit also offers Ielts glossary, which provides various common words for your reference. Wisdom input method is available for your convenient inquiry. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

2.6.1 General Search

Input desired English word/phrase, then press 輸入 to get its definition.
(For details, please refer to the relevant section in E-C Dictionary.)

e.g. Input “abase”, then press 輸入 to view its Chinese definition.

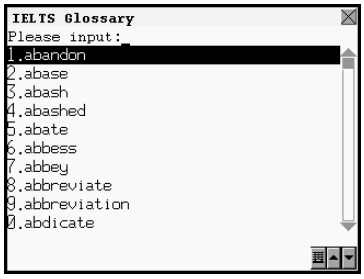

Press ▲ ▼ or touch ▲ ▼ to view the previous or next record.
Press CAPS EDIT to view more information.
Press 發音 to listen to the English pronunciation.
Press 國語 to listen to the Mandarin pronunciation.
Press 粵語 to listen to the Cantonese pronunciation.
Touch [R.V] to listen to the TruVoice English pronunciation.
Touch [Gram.] to view grammar information like synonym, antonym and example and so on.

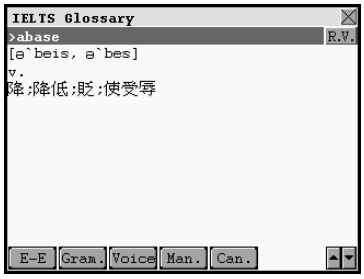

2.6.2 Nearest Word and Spelling Alternative

-- For details, please refer to the relevant section in E-C Dictionary.

2.6.3 Wild-card Search

-- For details, please refer to the relevant section in E-C Dictionary.

2.6.4 Cross-search

-- For details, please refer to the relevant section in E-C Dictionary.

2.6.5 Dictionary History List

-- For details, please refer to the relevant section in E-C Dictionary.

2.6.6 Function key

-- For details, please refer to the relevant section in E-C Dictionary.

2.6.7 Repeat and Follow

-- For details, please refer to the relevant section in E-C Dictionary.

2.6.8 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.7 Slang

It offers a great variety of common slang for your reference. Wisdom input method is also available for your easy and quick inquiry. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

2.7.1 General Search

Input desired slang and press 輸入 to get its definition.
(For details, please refer to the relevant section in E-C Dictionary.)

e.g. Input “a beating”, then press 輸入 to view its Chinese definition.

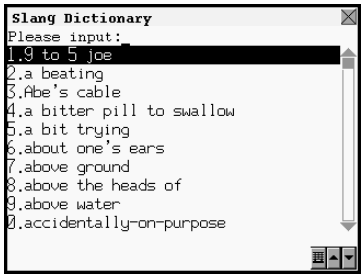

Press ▲ ▼ or touch ▲ ▼ to view the previous or next record.
Press CAPS EDIT ◘ ü· to view more information.
Press 真人女聲 發音 德籍 國語 廣東 粵語 or touch [Voice]/[Man.]/[Can.] to listen to

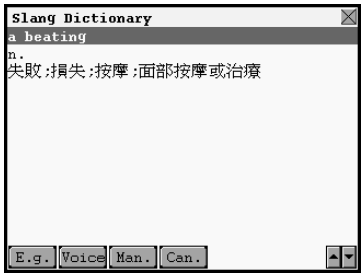

the relevant pronunciation.

Press [E.g.] to view the example.

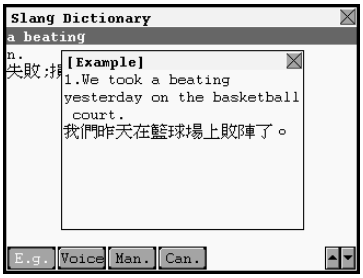

2.7.2 Nearest Word and Spelling Alternative

-- For details, please refer to the relevant section in E-C Dictionary.

2.7.3 Wild-card Search

-- For details, please refer to the relevant section in E-C Dictionary.

2.7.4 Cross-search

-- For details, please refer to the relevant section in E-C Dictionary.

2.7.5 Dictionary History List

-- For details, please refer to the relevant section in E-C Dictionary.

2.7.6 Function key

-- For details, please refer to the relevant section in E-C Dictionary.

2.7.7 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.8 Proverb

Various proverbs are collected in this section for your reference. Wisdom input method is also available in this application for your convenient inquiry. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

2.8.1 General Search

Input desired English proverb and press 輸入 to get its definition.
(For details, please refer to the relevant section in E-C Dictionary.)
e.g. Input “A bad thing never dies.”,

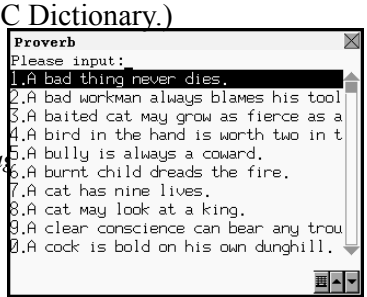
Proverb
Please input:
1.A bad thing never dies.
2.A bad workman always blames his tool
3.A baited cat may grow as fierce as a
4.A bird in the hand is worth two in t
5.A bully is always a coward.
6.A burnt child dreads the fire.
7.A cat has nine lives.
8.A cat may look at a king.
9.A clear conscience can bear any trou
0.A cock is bold on his own dunghill.

then press 輸入 to view its Chinese definition.

Press ▲ ▼ or touch ▲ ▼ to view the previous or next record.
Press CAPS EDIT ⊡ U· to view more information.
Press 真人女聲 發音 港粵 國語 插圖 粵語 or touch [Voice]/[Man.]/[Can.] to listen to the relevant pronunciation.

2.8.2 Nearest Word

The function is enabled when the inputted proverb is wrongly spelt or unavailable in this Dictionary. The nearest words will be listed alphabetically according to the inputted proverb.

e.g. Input “bad dog”, then press 輸入 to confirm.

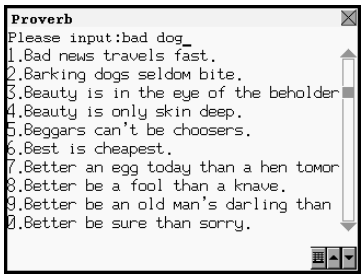
Proverb
Please input:bad dog
1.Bad news travels fast.
2.Barking dogs seldom bite.
3.Beauty is in the eye of the beholder
4.Beauty is only skin deep.
5.Beggars can't be choosers.
6.Best is cheapest.
7.Better an egg today than a hen tomor
8.Better be a fool than a knave.
9.Better be an old man's darling than
0.Better be sure than sorry.
頁

If the slang can not be found in this unit, the nearest words will be listed on the screen.

2.8.3 Cross-search

-- For details, please refer to the relevant section in E-C Dictionary.

2.8.4 Repeat and Follow

-- For details, please refer to the relevant section in E-C Dictionary.

2.8.5 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.9 Conversation

Various kinds of daily conversation classified into 9 groups are provided for travelling and daily life. You can search the equivalents in 9 different languages, namely English, Cantonese, Mandarin, Japanese, French, German, Spanish, Italian, and Dutch, and each of languages mentioned above can be pronounced. (Key-entry and Touch-and-go operations are supported.)

2.9.1 General Search

Access “Conversation”.
Press ▲CAPS ▼EDIT to select an item,
then press 輸入 to confirm, or
double click the desired item directly.

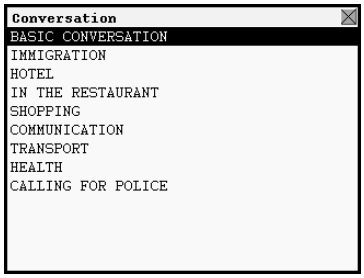

Press ▲CAPS ▼EDIT to select an item,
then press 輸入 to view the
conversation or double click the
desired item directly.
e.g. choose “Basic Conversation”.

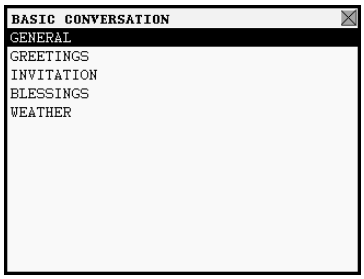

Press Δ C ▽ AC or touch ▲ ▼ to
view the previous or next record.
Press 真人女聲 發音 or touch [Voice] to listen
to the English pronunciation.
Press 標準 國語 or touch [Man.] to listen
to the Mandarin pronunciation.

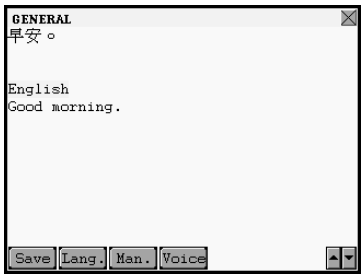

Touch [Lang.] to choose other language.

Press ▲CAPS ▼EDIT to select the desired language, then press 輸入 to confirm, or double click it directly.
Touch a language button to listen to its corresponding pronunciation.

e.g. choose “Japanese”.
Press 男人女聲 發音 or touch [Jap.] to listen to the Japanese pronunciation.

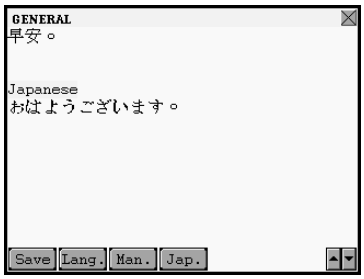

2.9.2 Cross-search

-- For details, please refer to the relevant part in E-C Dictionary.

2.9.3 Saving record

-- For details, please refer to the relevant part in E-C Dictionary.

2.9.4 Repeat and Follow

-- For details, please refer to the relevant part in E-C Dictionary.

2.9.5 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.10 Vocabulary

It stored 17 kinds of vocabularies for your reference. (Both Key-entry and Touch-and-go operations are supported.)

2.10.1 General Search

Access “Vocabulary”.
Press ▲CAPS ▼EDIT ◁C AC▽ to select the desired item and then press 輸入 to confirm, or double click the item directly.
e.g. choose “ANIMALS”.
Press ▲CAPS ▼EDIT to select the desired

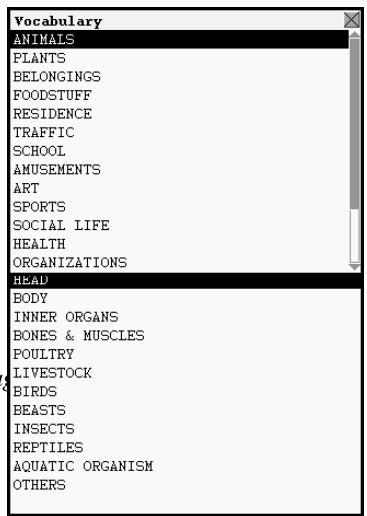

item, then press [輸入] to confirm, or touch the item directly.
e.g. choose “HEAD”.

Press [▲C] [▼AC] or touch [▲] [▼] to view the previous or next record.
Press [真人女聲 發音] [標準 國語] [地區 粵語] or touch [Voice]/[Man.]/[Can.] to listen to the English, Mandarin and Cantonese pronunciation respectively.

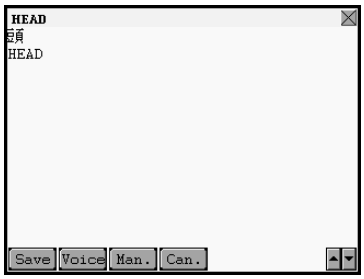

2.10.2 Cross-search

-- For details, please refer to the relevant part in E-C Dictionary.

2.10.3 Saving record

-- For details, please refer to the relevant part in E-C Dictionary.

2.10.4 Repeat and Follow

-- For details, please refer to the relevant part in E-C Dictionary.

2.10.5 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

2.11 Sentence Repository

Examples for some words are collected in this section for reference purpose. Wisdom input method is available for your convenient inquiry. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

Access “Sentence Repository”.

Input the desired word, then

press 輸入 to confirm.
Press ▲ ▼ or touch ▲ ▼
to turn pages to search
or press CAPS EDIT to search one
by one.
e.g. Input “abandon” and press
輸入 to confirm.

Press ▲ ▼ or touch ▲ ▼ to
view the previous or next record.
Press 真人女聲 發音 標準 國語 粵語 or touch
[Voice]/[Man.]/[Can.] to listen to
the English, Mandarin and Cantonese
pronunciation respectively.

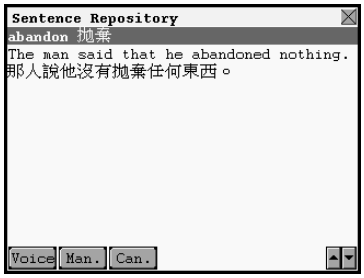

2.11.2 Cross-search

-- For details, please refer to the relevant part in E-C Dictionary.

2.11.3 Repeat and Follow

-- For details, please refer to the relevant part in E-C Dictionary.

2.11.4 Font Zoom-in

-- For details, please refer to the relevant section in E-C Dictionary.

3.1 Recognize Through Picture

A great variety of vivid pictures are provided in this section for recognition purpose. When enabled, it allows you to better understand the structure of various matters as well as learn English much easier so that you can achieve impressive and satisfactory results.

In Learning, choose and enter “Recognition through Picture”

Press ▲ ▼ to select an item, then press 輸入 to confirm.
e.g. choose “Apple”.

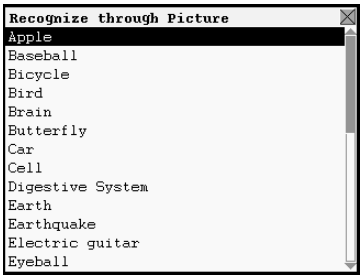

Press ◄ ► or touch ▲ ▼ to view the previous or next record.
Touch the letter directly or press the alphabetic key on the keypad to view the corresponding Chinese and English name.
e.g. press A or touch [A].

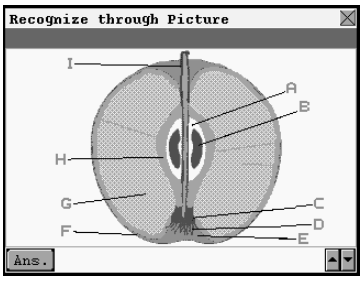

Press ◄ ► or touch ▲ ▼ to view the previous or next item.
Press 真人女聲 發音 標準 國語 粵語 or touch [Voice]/[Man.]/[Can.] to listen to the relevant pronunciation.

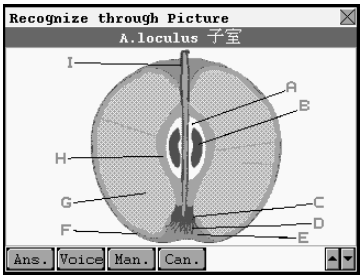

Touch [Ans.] to view the answer.
Press ▲ CAPS ▼ EDIT to scroll through the content line by line.
Press ◁ C ▽ AC to view the content page by page.

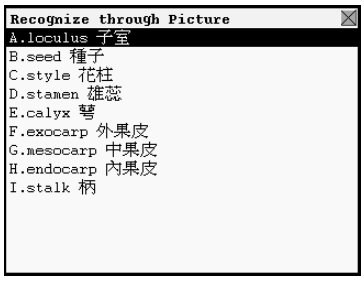

Press 輸入法 功能 and choose one item to perform its relevant function.
Press 退出 to return to the previous screen.

3.2 Guess Through Picture

There are abundant pictures available in this field for guess purpose. Four kinds of formats are provided for Guess: 1.Forward, 2.Backward, 3.Continue and 4.Haphazard.

Access “Guess through Picture”

Press ▲ CAPS ▼ EDIT to choose the desired format, then press 輸入 to confirm.
e.g. choose “Forward”.

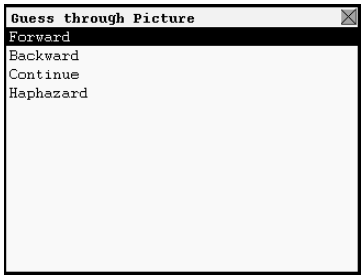

After scanning the picture, touch [Chi.] to view its Chinese name.

Press 真人女聲 發音 or touch [Voice] to listen to its pronunciation.
Touch [Pic.] to view the picture.
Touch [Ans.] to view the answer.
Touch [Relt.] to get the result.

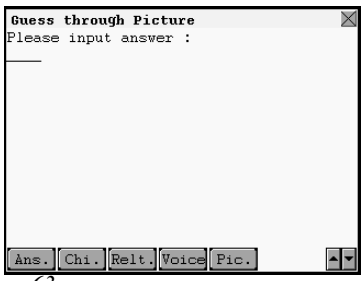

Press [▲C] [▼AC] or touch [▲] [▼] to guess the previous or next word.

Input the answer and press [輸入], the screen will show the correct one.
Press [輸入] or touch [Cont.] to continue the guess.
Press [輸入法 功能] and choose an item to perform its relevant function.
Press [退出] to return to the previous screen.

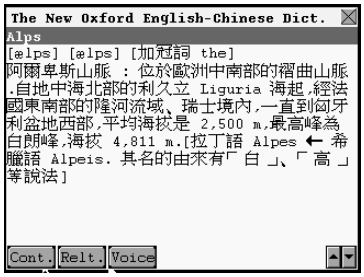

Note: *Repeat and Follow functions are supported here. For details, please refer to the relevant section in "Eng-Chi Dictionary".*

3.3 Interactive Dialogue

This part offers basic English/ Chinese/ Cantonese dialogue in daily life and supports role-playing function. When it is enabled, you can make a dialogue with the unit.

Choose and enter "Interactive Dialogue".

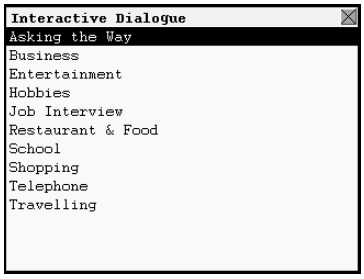

Press [▲CAPS] [▼EDIT] [▲C] [▼AC] to move the highlight bar on an item,
then press [輸入] to confirm.
e.g. Highlight and enter "Asking the way ", then choose "To the Bank ".

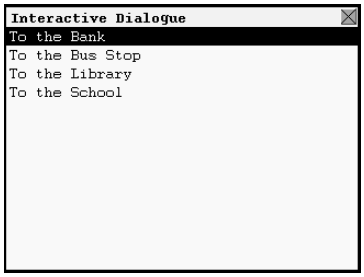

Press [▲CAPS] [▼EDIT] to scroll through the content line by line.
Press [▲C] [▼AC] to view the screen page by page.

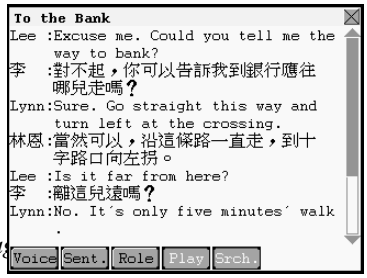

Press 真人女聲 發音 標籤 國語 插圖 粵語 or touch [Voice] to listen to the relevant pronunciation of the current record.

Press INS to highlight the first word. Press CAPS EDIT DEL INS to highlight the desired character or word, then press 輸入 or touch [Srch.] to cross-search to the relevant dictionary.
Touch [Voice] or press 真人女聲 發音 標籤 國語 插圖 粵語 to listen to the corresponding pronunciation of the highlighted sentence or word.

Touch [Sent.] to choose a sentence, then perform repeat and follow function.
Touch [Voice]/[Man.]/[Can.] or press 真人女聲 發音 標籤 國語 插圖 粵語 to listen to the relevant pronunciation.
Press [Sent.] again to return to the dialogue screen.
Press CAPS EDIT to highlight the previous or next sentence.

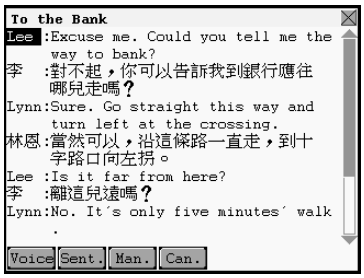

Touch [Role] to choose a role and language, the unit starts recording. After user records the dialogue between the role and the unit, the system will automatically speak out speech of the non-user-selected part until the conversation completes.
e.g. Choose “Lee” and “English”.
Touch the screen or press 退出 to stop recording.

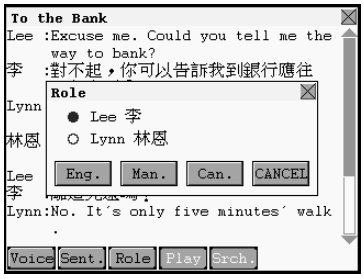

Press [Play] to play the recorded dialogue.
Touch the screen or press 退出 to stop recording.
Press 輸入法 功能 and choose one item to perform its relevant function.

Press 退出 to return to the previous screen.

3.4 Listen & Learn

This field includes five sections: “Oxford Dictionary”, “Eng-Chi Dictionary”, “Chi-Eng Dictionary”, “Conversation” and “Vocabulary”. Before accessing this application, you must save some words and characters in every section. Five formats are available for Listening & Learning: 1. Forward, 2.Backward, 3.Continue, 4.Haphazard and 5.Enquiry. (Key-entry and Touch-and-go operations are supported.)

In Learning, choose and enter “Listening and Learning”.

Press CAPS EDIT to select an item, then press 輸入 to confirm.
e.g. choose “Oxford Dict.”

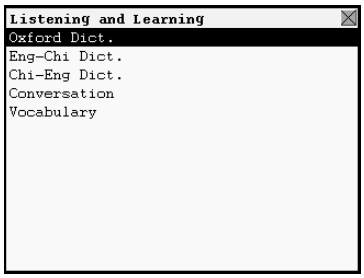

Press CAPS EDIT to choose the desired format, then press 輸入 to confirm.
e.g. choose “Forward”.

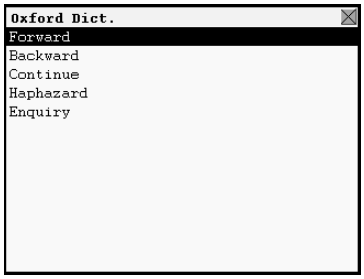

Press CAPS EDIT to view the content line by line.
Press ⊡ ü· to scroll through the screen page by page.
Press ▲C ▼AC or touch ▲ ▼ to view the previous or next record.

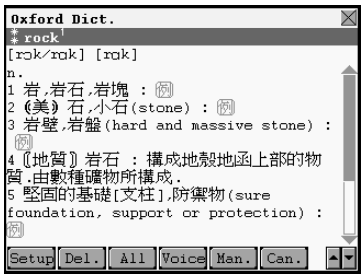

Touch [Setup] to set the play mode (If it is set as “all records”, all records will be pronounced sequentially after you tap or press the relevant voice

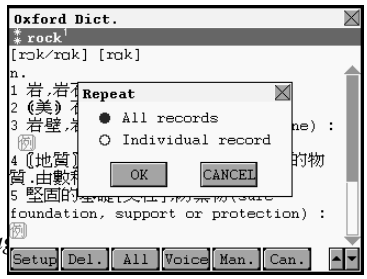

key. While playing, press any key to stop; if “one record” is selected, touch or press the relevant pronunciation key to play the current record; press 退出 to exit).

Touch [Del.] to delete the current record. Touch [All] to listen to English, Mandarin or Cantonese pronunciation of all records or the current record; press 退出 to exit.

Press 真人女聲 發音 標準 國語 粵語 or touch [voice]/[Man.]/[Can.] to listen to the relevant pronunciation of all records or the current record.
Press 退出 to exit.

In “Enquiry”, input an English word or a Chinese character, or press CAPS EDIT ▲ ▼ to highlight an item, then press 輸入 to confirm.

In “Conversation” view mode,
Touch [Lang.] to set the language.
Tap a language button to listen to its corresponding pronunciation.
(The default language is English.
Touch [Voice] to listen to the English pronunciation.)
Press 輸入法 功能 and choose one item to perform its relevant function.
Press 退出 to return to the previous screen.

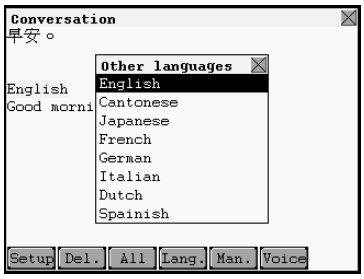

Note: *The operations of listening and learning in Eng-Chi Dictionary, Chi-Eng Dictionary, Conversation and Vocabulary are similar to that in “Oxford*

Dictionary", please refer to the relevant section mentioned above.

3.5 English Rules

This field includes two parts: "Stress Rules" and "Grammar Notes". The former lists a lot of important stress rules and gives typical examples, and the latter shows a list of important grammar notes.

In Learning, choose and enter "English Rules".

Press ▲CAPS ▼EDIT to highlight one item, then press 輸入 to confirm.
e.g. choose "Stress Rules".

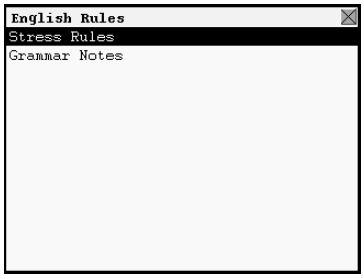

Press ▲CAPS ▼EDIT ΔC ∇AC to choose the desired item.
e.g. choose "-able".

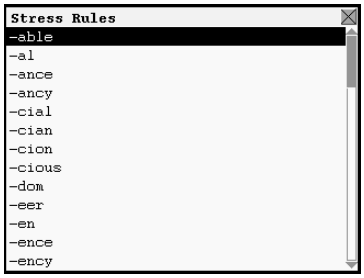

Press ▲CAPS ▼EDIT to scroll through the unshown part of a record line by line.
Press ◘ U· to view the hidden part of a record page by page.
Press ΔC ∇AC or touch ▲ ▼ to view the previous or next record.

Press INS► to highlight the first word.
Press ▲CAPS ▼EDIT ◄DEL INS► to highlight the desired word or character; press SHIFT, then press ▲CAPS ▼EDIT to highlight a phrase, then press 輸入 or touch

relevant button to cross-search.

Touch [First] or [Last] to view the first or the last record.
Press 輸入法 功能 and select one item to perform its relevant function.
Press 退出 to return to the previous screen.

Note: *The operations in Grammar Notes are similar to that in Stress Rules, please refer to the relevant section mentioned above.*

3.6 Chinese Knowledge

"Past Poems", "Rhetoric", "Quantifier" and "Punctuation" are available in this section.

In Learning, access "Chinese Knowledge".

Press CAPS EDIT to highlight one item, then press 輸入 to confirm.
e.g. choose "Past Poems".

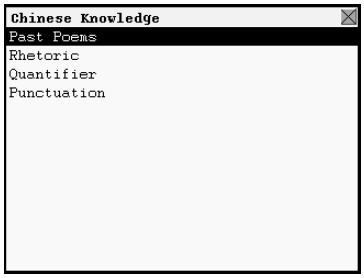

Press CAPS EDIT C AC to choose the desired item, then press 輸入 to confirm.
e.g. choose "Dynasty".

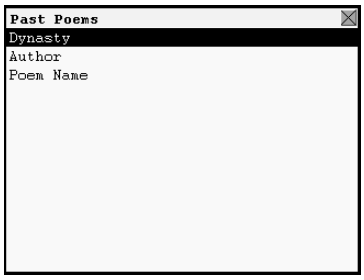

Press CAPS EDIT C AC to select the desired item, then press 輸入 to confirm.
e.g. choose "春秋".

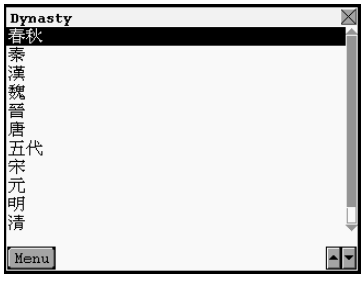

Press ⌂ AC or touch ▲ ▼ icon to view the previous or next record.
Touch [Menu] to return to the main menu screen.
Press 退出 to return to the previous screen.

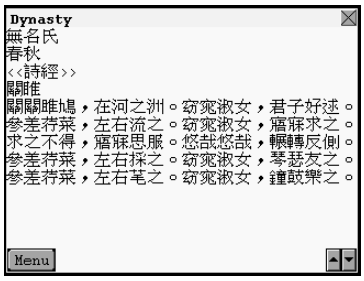

Note: *The operations in Rhetoric, Quantifier and Punctuation are similar to that in "Past Poems", please refer to the relevant section mentioned above.*

3.7 Sentence Making

There are five levels in this application, it is helpful for you to master the structure of English sentences step by step. (Key-entry and Touch-and-go operations are supported.)

Access "Sentence Making".

Press CAPS EDIT to select the level, then press 輸入 to confirm.

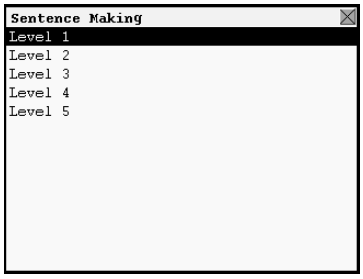

Highlight an English word and touch [Copy], then move the cursor to the desired position, and touch [Paste] to paste it.
Touch [Ans.] to get the answer.
Touch [Chi.] to view its Chinese definition.
Touch [Hint] to obtain the hint.

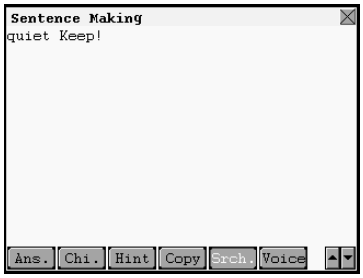

Note: *Three chances are provided for hint. Once you touch [Chi.] or [Hint], one chance will be automatically reduced.*

Highlight an English word, then touch [Srch.] to cross-search to E-C Dictionary, Oxford Dictionary and E-E Dictionary. Press 發音 to listen to the English pronunciation.

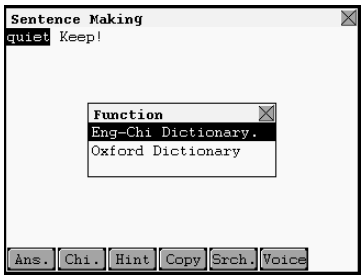

3.8 User's Dictionary

This field consists of E-C User's Dictionary, C-E User's Dictionary and E-E User's Dictionary. When enabled, you can expand the storage of dictionaries.

Access "User's Dictionary".

Press ▲ CAPS EDIT ▼ to choose the desired item, and press 輸入 to confirm.
e.g. choose "Eng-Chi User's Dict.".

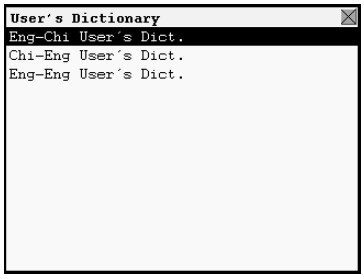

Press Δ C AC V or touch ▲ ▼ icon to view the previous or next record.

Touch [New] to enter input mode. Input an English word and its Chinese definiton. Press SHIFT 輸入法 功能 to choose the desired input method.

Press [Renew] to renew data, then press 輸入 or touch [Save] to save it.
Press SHIFT EDIT or touch [Edit] to edit the record.

Touch [Del.] or press SHIFT DEL to delete the record.
Touch [Voice] or press 真人女聲 發音 to listen to the English pronunciation.

Touch [Srch.] to search record by keyword.
Type in the word, then press 輸入 or touch [OK] to view its details.

Press 輸入法 功能 and choose one item to perform its relevant function.
Press 退出 to return to the previous screen.

Note: *About the operation in Chi-Eng User's Dictionary and Eng-Eng User's Dictionary, please refer to the relevant section in Eng-Chi User's Dictionary.*

3.9 Revision

There are Oxford Dictionary Review, Eng -Chi Dictionary Review, Chi-Eng Dictionary Review, Conversation Review and Vocabulary Review in this section. Before accessing this application, you should save records in Oxford Dictionary, E-C Dictionary, C-E Dictionary, Conversation and Vocabulary. Five formats are provided

for Revision: 1. Forward, 2. Backward, 3. Continue, 4. Haphazard, 5. Enquiry.
(Key-entry and Touch-and-go operations are supported.)
Access “Revision”.

Press ▲CAPS ▼EDIT or touch screen to choose the desired item,
then press 輸入 to confirm.
e.g. choose “Oxford Dict. Review”.

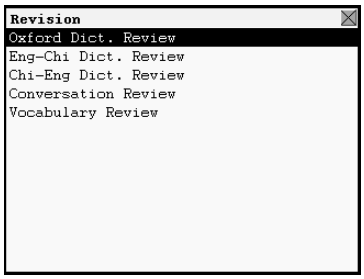

Press ▲CAPS ▼EDIT to select the desired revision format.
e.g. choose “Forward”.

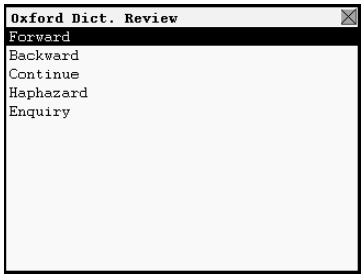

Press ▲CAPS ▼EDIT to scroll through the content line by line.
Press ◘ U· to view the current record page by page.
Press △C ▽AC or touch ▲ ▼ to view the previous or next record.
Press 真人女聲 發音 港籍 國語 廣東 粵語 or touch [Voice]/[Man.]/[Can.] to listen to the relevant pronunciation ;
press 退出 to exit.

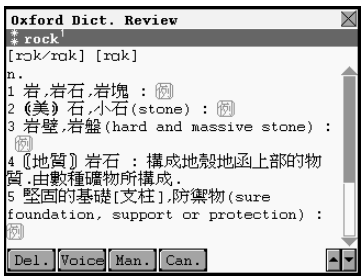

Touch [Del.] to delete the record.

Choose “Enquiry” and press 輸入 to enter.
Press SHIFT 輸入法 功能 to select the desired input method.
Input the desired word and press 輸入 to confirm, or directly choose the word from the browse list to view its details.

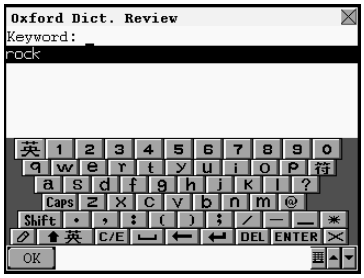

In Conversation Review, touch [Lang.] to choose the desired language, then tap the language button to listen to its corresponding pronunciation.
(The default language is English, touch [Voice] to listen to the Truvoice English pronunciation.)

Press 輸入法 功能 and select one item to perform its relevant function.
Press 退出 to return to the previous screen.

Note: *The operation of revision in Eng -Chi Dictionary Review, Chi-Eng Dictionary Review, Conversation Review and Vocabulary Review are similar to that in Oxford Dictionary Review, please refer to the relevant section mentioned above.*

3.10 Test

This section contains Eng-Chi Dictionary Test, Oxford Dictionary Test, Vocabulary Test and Oxford Listening Test. Before enabling this application, you should save some words or data in Oxford Dictionary, Eng-Chi Dictionary and Vocabulary. Four formats are available in Test: 1. Forward, 2. Backward, 3. Continue and 4. Haphazard. (Key-entry and Touch-and-go operations are supported.)

In Learning, choose and enter “Test”.

Press ▲ ▼ to highlight an item,
then press 輸入 to confirm.
e.g. choose “Eng-Chi Dict. Test”

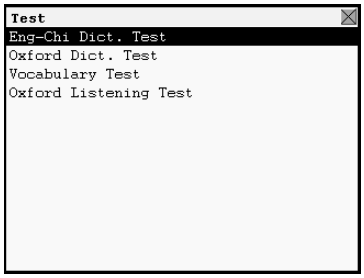

Press ▲ ▼ to choose the test format.
e.g. choose “Forward”.

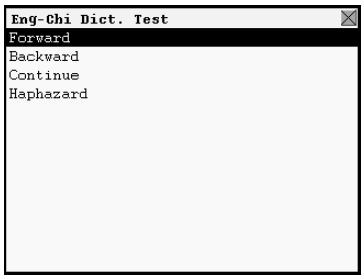

Press ▲ ▼ to scroll through the content line by line.
Press ○ U· to view the current record page by page.
Press Δ/C V/AC or touch ▲ ▼ to view the previous or next question.

Type in an English word, then press 輸入 to confirm.
Touch [Ans.] to view the correct answer.
Touch [Voice]/[Man.]/[Can.] to listen to the relevant pronunciation of the current record; press 退出 to exit.
Press 輸入 or touch [Cont.] to continue the test.

Touch [Relt.] to get the result.
Press 輸入法 功能 and select one item to perform its relevant function.
Press 退出 to return to the previous screen.

Note: *The operations of test in Oxford Dict. Test, Vocabulary Test are similar to that in Eng-Chi Dict. Test, please refer to the relevant part mentioned above.*

Choose " Oxford Listening Test" and the test format.
Once this application is enabled, the word will be pronounced.
Press 真人女聲 發音 to listen to the English pronunciation, and then input the English word according to its pronunciation, and press 輸入 to confirm.
Touch [Ans.] to view the answer.
Press AC √ to view the next question; touch [Relt.] to get the result, press 退出 to exit.

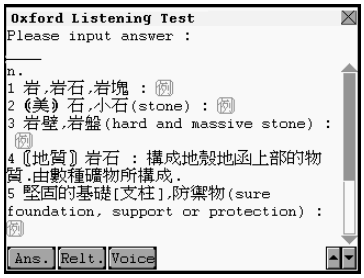

No matter your answer is right or not, the correct answer will be displayed on the screen after 輸入 is pressed.
Touch [Cont.] to continue the test.
Press 真人女聲 發音 to listen to the English pronunciation.
Press 標準 國語 to listen to the Mandarin pronunciation.
Press 粵語 to listen to the Cantonese pronunciation.

CHAPTER 4 Photo Album

Slide show function is supported in this section, which enables you to enjoy the vivid and clear pictures. Furthermore, you can also customize a frame on the picture.

Press ▲CAPS ▼EDIT to select a picture sequentially.
Press △C ▽AC to select a picture page by page or double click the item directly.

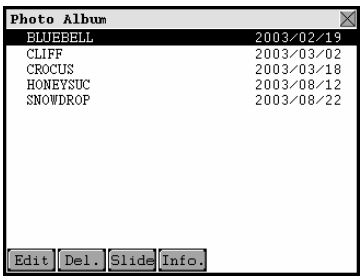

Press 輸入 to view the picture.
Press △C ▽AC to view the previous or next picture.
Press 退出 to exit.

Touch [Edit] to edit the picture.

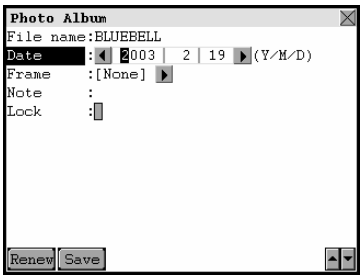

Press ▲CAPS ▼EDIT to move the cursor to Frame field, press INS► or touch ▶ to select a frame.
Touch [Renew] to renew all data.
Press 輸入 or touch [Save] to save the data.

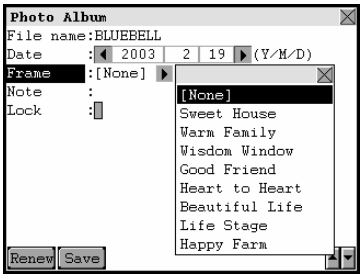

Touch [Del.] to delete the picture.
Press Y to delete;
Press N to cancel.

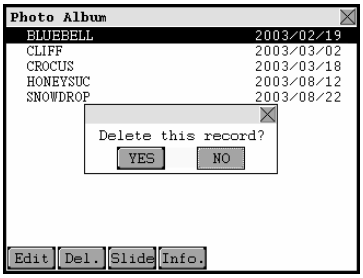

Touch [Info.] to view the information about the picture.

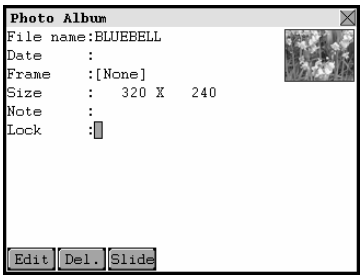

Touch [Slide] to perform the slide show function.
Press ▲ ▼ Δ V to highlight the picture name, then press 輸入 to view the picture to be projected, or double click the desired item directly.

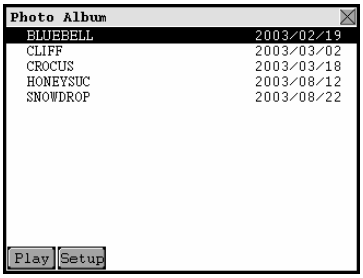

Touch [Play] to project the slide according to the user-defined setting.

Touch [Setup] to enter the play mode setup screen.

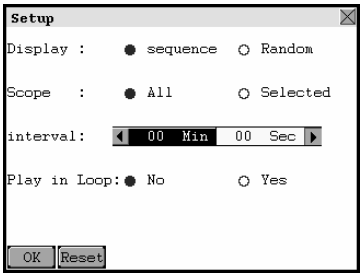

To select an item , you can touch its corresponding button before it.
-- Display (Choose “Sequence” or “Random”)
-- Scope (Choose “All” or “Selected”)
-- Interval (the interval from one picture to another)
-- Play in Loop (Play the pictures sequentially and repeatedly)

Press 輸入 or touch [OK] to confirm.
Touch [Reset] to return to reset mode screen.
Press 退出 to exit.

5.1.1 Past Dynasty

It includes Rise and Fall of Dynasty, Past Dynasty and Gregorian Calendar to Dynasty. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Reference”, then press ▲CAPS ▼EDIT to touch the screen to select the desired item.
Press 退出 to exit.

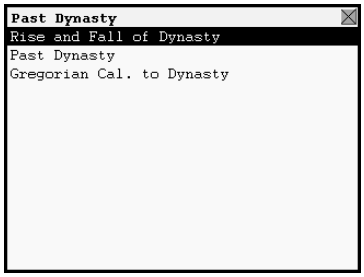

5.1.1 Rise and Fall of Dynasty

You can inquire the first and the last emperor of each dynasty and its capital and the period of time it existed.

Press ▲CAPS ▼EDIT to select a dynasty sequentially or press △C ▽AC to turn pages to select, or touch the desired dynasty directly to view its details.
e.g. select “秦”(Qin dynasty).

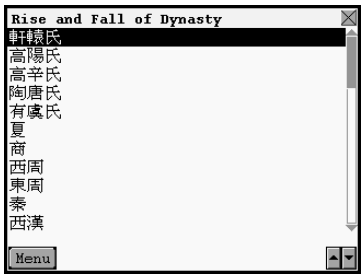

Press △C ▽AC to view the previous or next dynasty.
Touch [Menu] to return to main menu screen.

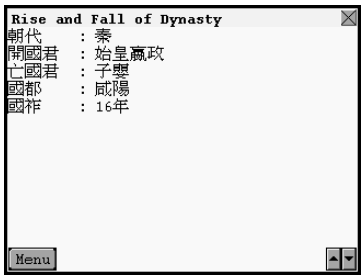

5.1.2 Past Dynasty

It keeps the records of the time and the period of time when an emperor is on the throne.

Press ▲ ▼ to select a dynasty sequentially or press △ ▽ to turn pages to select, or touch the desired dynasty directly to view its content.
e.g. select “唐”(Tang dynasty).

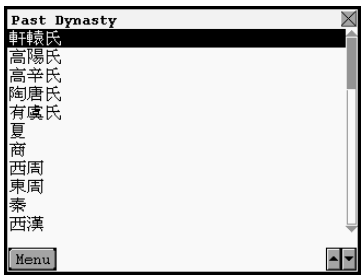

Press ▲ ▼ to select an emperor sequentially.
Press △ ▽ to turn pages to select , or touch the emperor directly.
e.g. select “太宗” (Taizong).

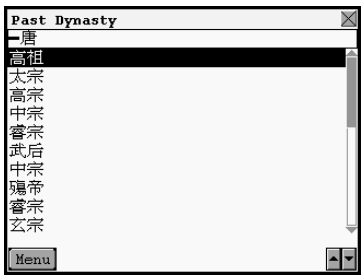

Press △ ▽ to view the previous or next emperor.
Touch [Menu] to return to main menu screen.

5.1.3 Gregorian Calendar to Dynasty

In this application, you can search for the Dynasty and the emperor in certain Gregorian Calendar time.

Input Gregorian Calendar time, then press ◄ ► to select BC or AD.

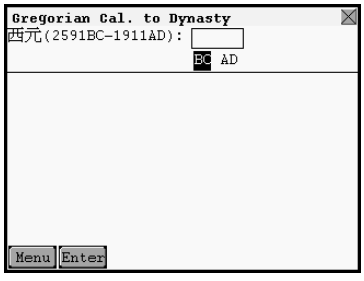

e.g. input “1368”, and select “AD”.
Press [Enter] or touch [Enter] to search the Chinese dynasty in 1368AD.
Touch [Menu] to return to main menu screen.

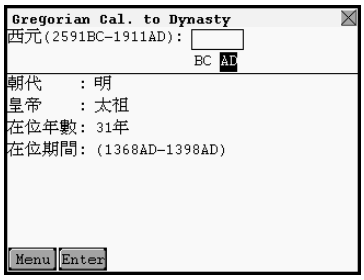

5.2 Travel Guide

Travel Guide provides Airlines, Airports, Temperature, General information and Voltage & Frequency. The General Information is about the capitals, the languages, the currency etc. It is helpful for you to travel. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Travel Guide”, then press [CAPS] [EDIT] to select the desired item or touch it directly.

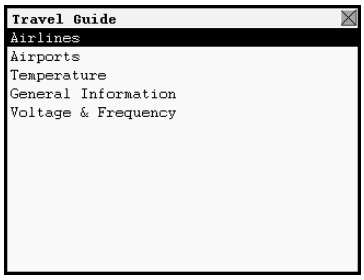

5.2.1 Airlines

Press [CAPS] [EDIT] to search sequentially or press [C] [AC] to turn pages to search.
Press [退出] to exit.

5.2.2 Airports

Press [CAPS] [EDIT]s or touch the screen to select “Africa”, “America”, “Asia”, “Europe” or “Oceania”.
e.g. Choose “Asia”.

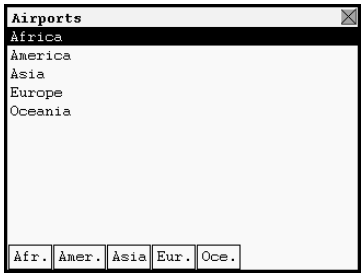

Press ▲ CAPS ▼ EDIT to select a region sequentially or press ◁ C ▽ AC to turn pages to select , or touch the region directly.
e.g. Choose “Singapore”.

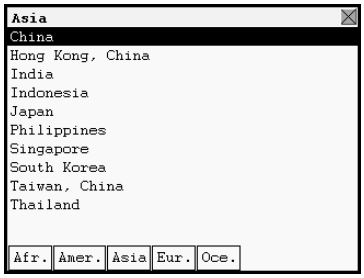

Touch the name of the 5 continents to return to the relevant region selection screen.
Press 退出 to exit.

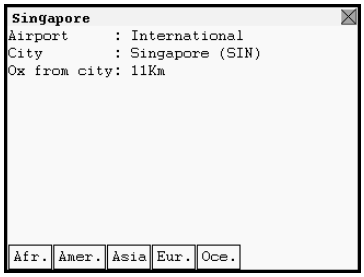

5.2.3 Temperature

-- For detailed operations, please refer to the relevant part in Airports.

5.2.4 General Information

-- For detailed operations, please refer to the relevant part in Airports.

5.2.5 Voltage & Frenquency

-- For detailed operations, please refer to the relevant part in Airports.

5.3 Size Equivalent

It provides the sizes of Men’s Shirts and Women’s Blouse and shoes in U.S.A., Britain, Europe, Japan, etc. for your reference. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Size Equivalent”, and press ▲ CAPS ▼ EDIT to select the desired item or touch it directly.
e.g. choose “Men’s Shirts”.

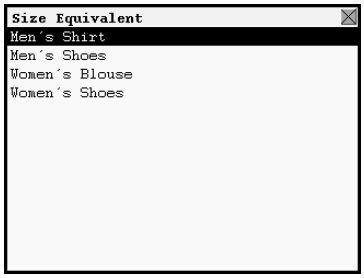

Touch [Menu] to return to main menu screen.
Press 退出 to exit.

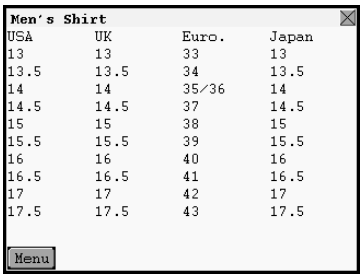

5.4 Telephone Information

It provides the international code and area code of different regions in the five continents for your reference. (Both Key-entry and Touch-and-go operations are supported.)

Enter "Telephone Information".
Touch the screen to select one of the five continents.
e.g. select "Asia".

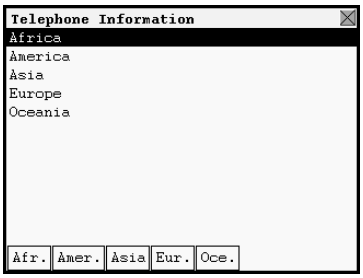

Press CAPS EDIT to select a region sequentially or press C AC to turn pages to select, or touch the region directly.
e.g. select "JAPAN".

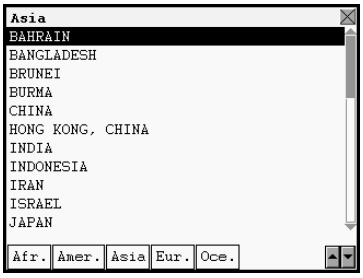

Press CAPS EDIT to view the content one by one or press C AC to scroll through the content page by page.
Press 退出 to exit.

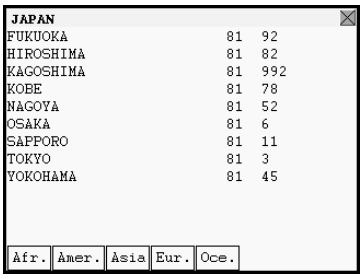

5.5 Health Guide

It provides the first aid knowledge of several diseases and accidents, introduction of the vitamin and its relative food; you can check male and female standard weight and normal weight for reference. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Health Guide”, then press ▲CAPS ▼EDIT to select the desired item or touch it directly.
Press 退出 to exit.

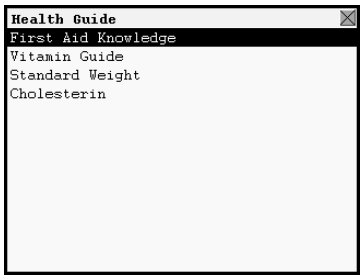

5.5.1 First Aid Knowledge

Press ▲CAPS ▼EDIT to select an item sequentially or press AC/C ▽ to turn pages to select, or touch the item directly.
e.g. select “中風”.

Touch [Menu] to return to main menu screen.
Press 退出 to exit.

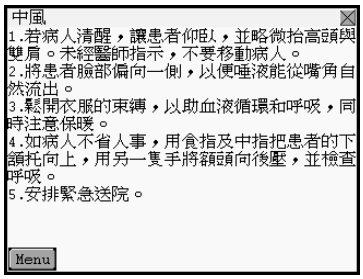

5.5.2 Vitamin Guide

press ▲CAPS ▼EDIT to select an item sequentially or press AC/C ▽ to turn pages to select, or touch the item directly.
e.g. select “Vitamin A”.

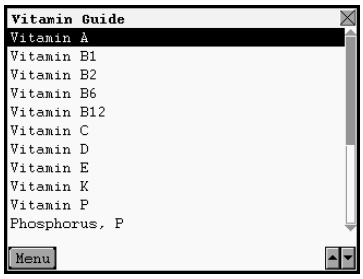

Press ▲CAPS ▼EDIT or touch the screen to select the desired item.
Touch [Menu] to return to Main menu screen.
Press 退出 to exit.

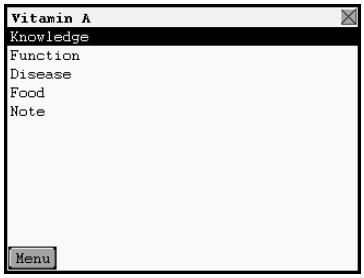

5.5.3 Standard Weight

Type in the desired height (100-250cm), and then press 輸入 or touch [Calc.] to calculate.
Touch [Menu] to return to main menu screen.

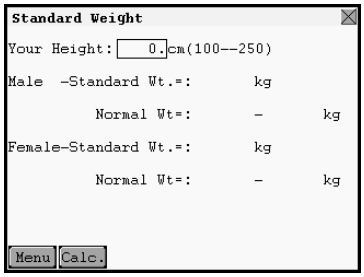

e.g. Input the height “160”, then press 輸入 or touch [Calc.] to calculate.
Press 退出 to clear the data for recalculating.

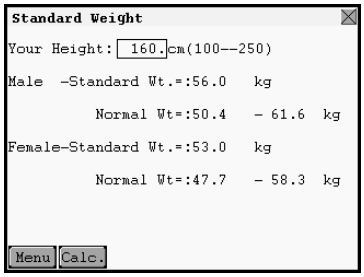

5.5.4 Cholesterin

Press ▲CAPS ▼EDIT or touch the screen to select the desired item.
e.g. choose and enter “蛋類”.

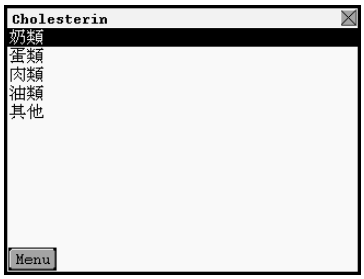

Touch [Menu] to return to main Menu screen.
Press 退出 to exit.

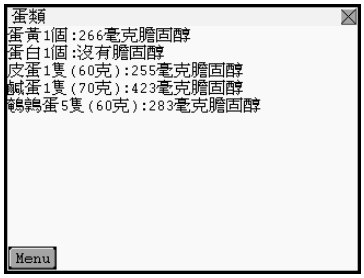

5.6 World Festival

The festivals in five continents are collected in this field for your reference. (Both Key-entry and Touch-and-go operations are supported.)

Enter “World Festival”.
Touch the desired continent.
e.g. choose “Eur.”.

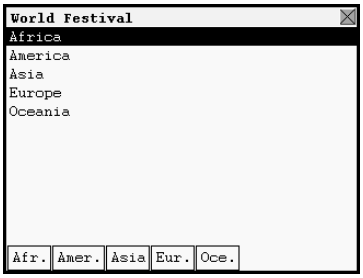

Press ▲ CAPS ▼ EDIT to select an item sequentially or press △ C ▽ AC to turn pages to select, or touch the item directly.
e.g. choose “France”.

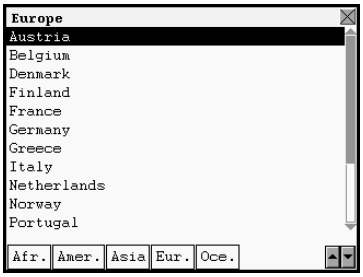

Press ▲ CAPS ▼ EDIT to view the content line by line.
Press △ C ▽ AC to view the content page by page.
Press 退出 to exit.

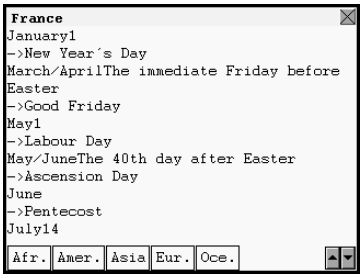

5.7 Science

Access “Science”.
Press ▲ CAPS ▼ EDIT or touch the screen to select the desired item.
Touch [Menu] to return to main menu screen.
Press 退出 to exit.

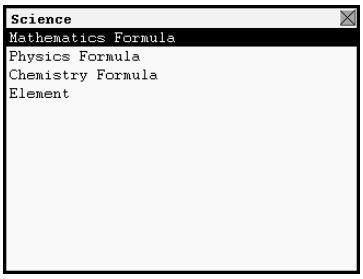

5.7.1 Mathematics Formula

There are diferent kinds of maths formula for your reference. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Mathematics Formula”,
press ▲CAPS ▼EDIT to select the desired item or touch it directly.
e.g. choose “Mid. Maths”.

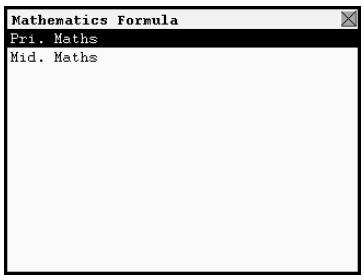

Press ▲CAPS ▼EDIT or touch the screen to select the desired item.
e.g. select “Trigonometry”.

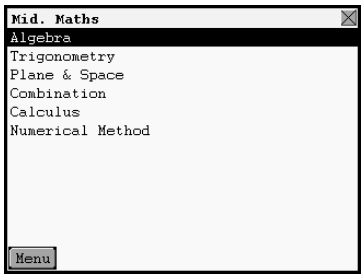

Press ▲CAPS ▼EDIT or touch the screen to select the desired item.
e.g. choose “Double Angles”.

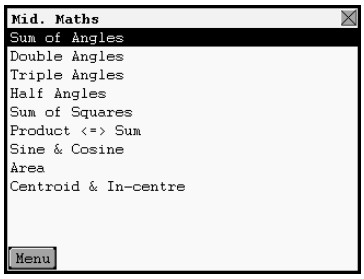

Press ▲CAPS ▼EDIT to view the content line by line.
Press ◁C ▽AC to view the content page by page.
Touch [Menu] to return to main menu screen.
Press 退出 to exit.

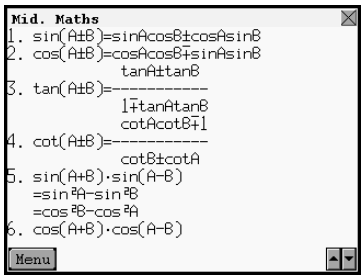

5.7.2 Physics Formula

-- For operations, please refer to “Mathematics Formula” section.

5.7.3 Chemistry Formula

-- For operations, please refer to “Mathematics Formula” section.

5.7.4 Elements

Choose and enter “Element”.

Press [▲ C] [AC ▼] to view the previous or next record.

Press [退出] to exit.

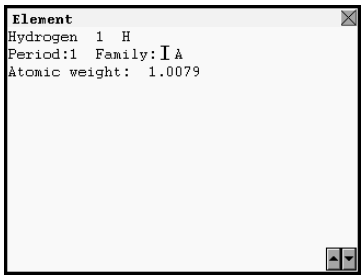

5.8 Calorie

It provides the detailed content of various Calorie, which enables you to arrange your food properly. (Both key-entry and touch-and-go operations are supported.)

Access “Calorie”.

Press [▲ CAPS] [EDIT ▼] to select an item sequentially or press [▲ C] [AC ▼] to turn pages to select, or touch the item directly.

e.g. choose “fruits”

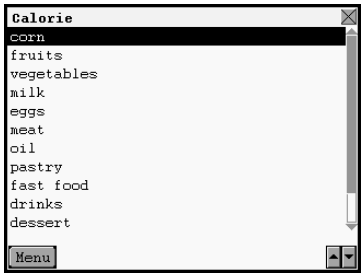

Press [▲ CAPS] [EDIT ▼] to view the content line by line.

Press [▲ C] [AC ▼] to view the content page by page.

Touch [Menu] to return to main menu screen.

Press [退出] to exit.

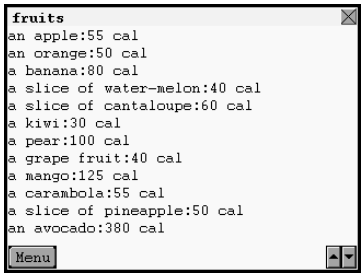

5.9 Olympic Information

When accessed, it will introduce you the detailed information about Olympic.

Enter “Olympic Information”.
Press [CAPS] [EDIT] or touch the screen to select the desired item.

e.g. choose and enter “2008 年北京奧運”.
Touch [Menu] to return to main menu screen.
Press [退出] to exit.

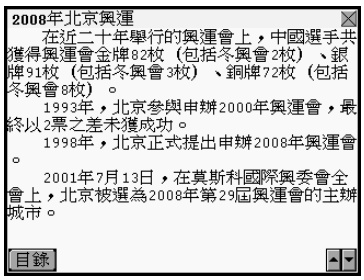

CHAPTER 6 ORGANIZER

Various items available in this section are necessary for your daily life and business. This chapter gives a brief description of operation instructions of various organizers.

6.1 Personal Information

You can keep the general personal information for your further reference. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

6.1.1Inputting Data

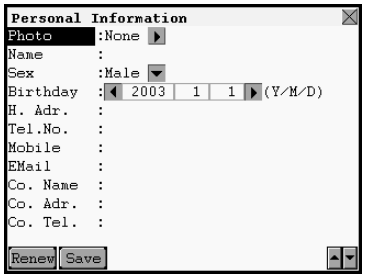

Access input mode.
(Press 顯示 中/英 to switch Chinese and English input mode.
press SHIFT 輸入法 功能 to select one input method.)
Press CAPS EDIT or AC to select an input field.

Press CAPS EDIT to highlight the “Photo” field, then press INS or touch ▼ to enter the E-Album.
Choose one picture and touch [View] to view it; press 輸入 to confirm;
press 退出 to exit.

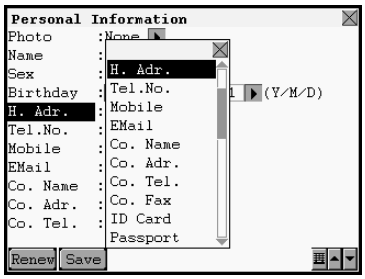

Touch one of the items and select the desired input field in the pop-up box, then press 輸入 to confirm,
the cursor will automatically skip to the selected item.

After you move the cursor to the “Lock” field, touch ▯ or press 標記 儲存 to lock the data.

Touch [Renew] to renew all data.
Press [Y] to discard all data and input new data.
Press [N] to keep the data.
After inputting data, press [輸入] or touch [Save] to save it.

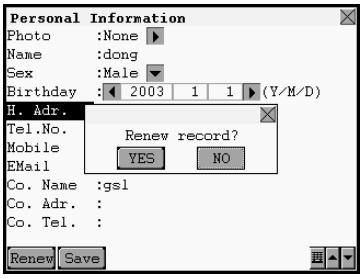

Press [CAPS] [EDIT] or [AC] to view more information.

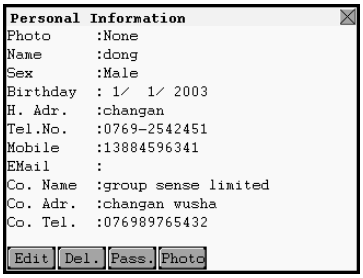

Press [輸入法 功能] to enter the function selection screen.
Choose one to perform its relevant function.

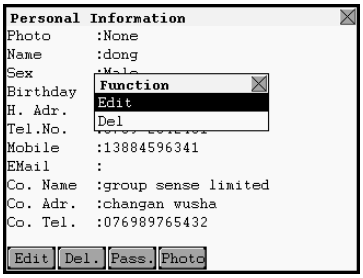

Note: *The record can be locked only when the password has been preset in Organizer or System. To view the marked record in this application, you should type in the correct password.*

6.1.2 Editing and Deleting Data

In view mode, press [SHIFT] [EDIT] or touch [Edit] to edit a record, press [SHIFT] [DEL] or touch [Del.] to delete a record.

6.1.3 Password

Press 標記 儲存 or touch [Pass.] to enter the password input mode.
Press 輸入 to save after you input and confirm the password.

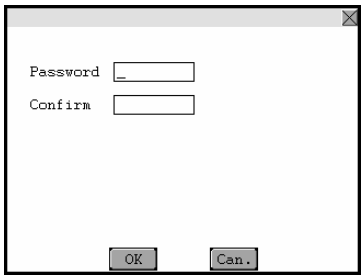

Press 標記 儲存 or touch [Pass.] to set password off or clear password. Input the correct password, then press 輸入 to set password off or clear password.

If you'd like to reset password on or clear password, you are requested to press 標記 儲存 again or touch [Pass.] Choose "Password On" to reset password On; choose "Clear Password" and input the installed password, then press 輸入 to clear it.

6.1.4 Photo

Touch [Photo] to view the picture if there is a picture available in this section.
Press 退出 to exit.

6.2 Telephone Directory

You can make the records of the telephone address, and sort them by Relative, Friend, Classmate, etc., which enables you to edit, revise, search and delete more freely. Furthermore, you can import the photo in this option. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

6.2.1 Inputting data

Press 新增 字輔 or touch [New] to create a new record.

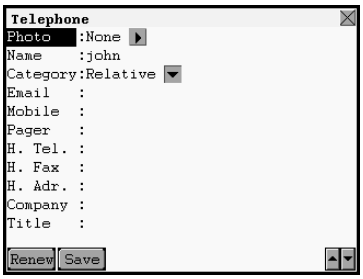

Note: *For details, please refer to the relevant part in "Personal Information".*

Press CAPS EDIT to move the cursor at "Category" input field, touch ▼ and a list of selection will be shown on the screen. Press CAPS EDIT to select one and then press 輸入 to confirm.

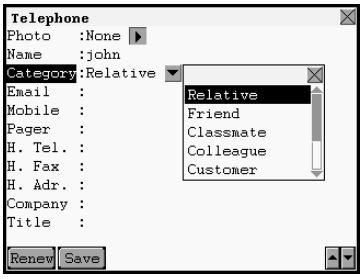

Touch one of the items and select the desired input field in the pop-up box, then press 輸入 to confirm, the cursor will automatically skip to the selected item.

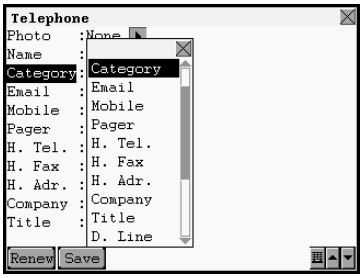

Touch [Renew] to renew all data. Press Y to discard all data and input new data. Press N to keep the data. After you input the data, press 輸入 or touch [Save] to save it. (Only after you type in the Name field, can the record be saved.)

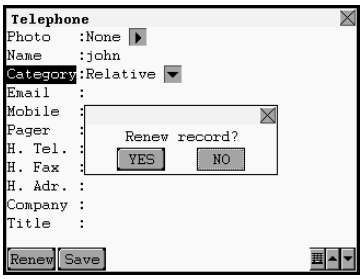

Press 輸入法 功能 to enter the function selection screen. Choose one to perform its relevant function.

Note: *For details on how to lock a record, please refer to the relevant part in*

Personal Information.

6.2.2 Searching data

In index mode, press ▲CAPS ▼EDIT to search the index list sequentially.
Press ◁C ▽AC to scroll through the content page by page.
Press 輸入 to enter view mode.

In view mode, press ▲CAPS ▼EDIT to view the details of some record.
Press ◁C ▽AC to view the previous or next record.

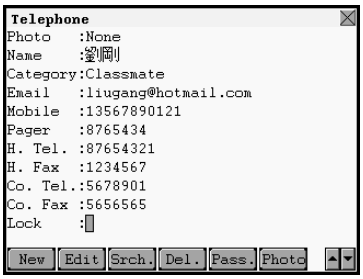

In index or view mode, press 輸入法 功能 to enter the function selection screen.
Press ▲CAPS ▼EDIT and then 輸入 to perform its relevant function.

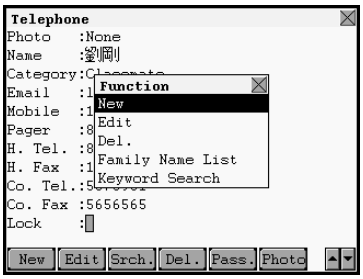

In index mode or view mode, touch [Srch] to choose one search mode.

Family Name List

Choose “Family Name List” and press 輸入 to access.
Choose “AZ” to enter English family name search.
Behind “AZ” is Chinese family name.
Choose the desired family name and press

[輸入] to enter its index mode.
Select one item to enter its view mode.

Keyword Search

Access “Keyword Search”, then input the desired keyword.
Press [輸入] to enter its index mode.
Select one item to enter its view mode.

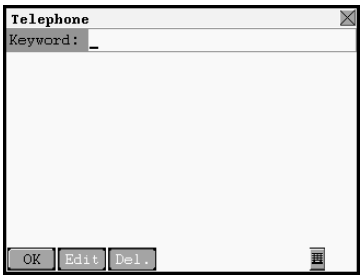

6.2.3 Editing and deleting data

Highlight the desired record, then press [SHIFT] [EDIT] or touch [Edit] to edit its information.

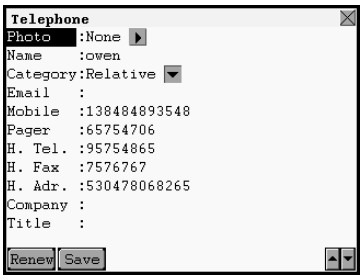

Highlight the desired record, then press [SHIFT] [DEL] or touch [Del.] to delete it.

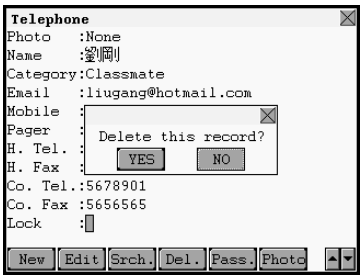

6.2.4 Password

-- For details, please refer to the relevant part of Personal Information.

6.2.5 Photo

-- For details, please refer to the relevant part of Personal Information.

6.3 Memorandum

This is a very powerful function for keeping notes. You can input, edit, revise, delete or search the record at any time. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

6.3.1 Inputting data

Press 新檔 字體 or touch [New] to create a new record.
After inputting all data, touch [Save] to save it.
Touch [Renew] to renew all data.

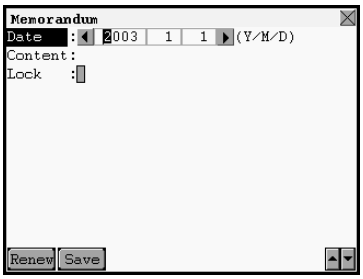

Note: *For details, please refer to the relevant part in "Telephone Directory".*

Press 輸入法 功能 to choose one item, then press 輸入 to perform its relevant function.

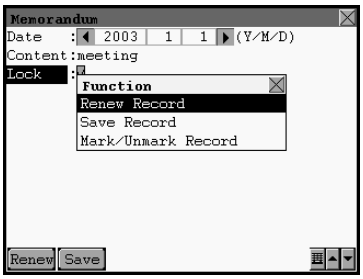

Note: *About how to lock data, please see the relevant part in Personal Information.*

6.3.2 Searching data

In index mode, press CAPS EDIT to select one item sequentially.
Press ▲ ▼ to turn pages to select one item.
Press 輸入 to enter its view mode.

In view mode, if the content is more than one screen, press CAPS EDIT to view more.
Press ▲ ▼ to view the previous or next record.

In index or view mode, touch [Srch] to select the search mode.

Date Search

Choose “Date Search”, input the desired date and press 輸入 to enter its index mode.

Select one item to enter its view mode.

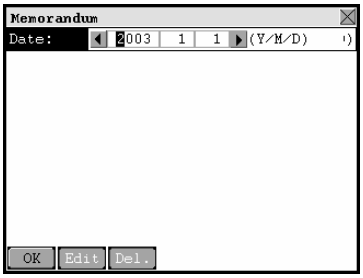

Keyword Search

Choose and enter “Keyword Search”, then input the keyword of desired name.

Press 輸入 to enter its index mode.

Select one item to enter its view mode.

Or in index or view mode, touch [Srch] to search record by keyword.

Input the desired keyword (in Chinese or English) or choose the name from the browse list directly.

6.3.3 Editing and deleting data

-- For details, please see the relevant part in Telephone Directory.

6.3.4 Copying data

Touch [Copy] and input the desired date, then touch [OK] to copy the record to that day.

6.3.5 Password

-- For details, please see the relevant part in Personal Information.

6.4 Schedule

You can input data, time and content of a schedule or an appointment. There is an alarm function available to remind you of the appointment time. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

6.4.1 Inputting Data

Press 新增 字幅 or touch [New] to create a new record.

Type in date, time, alarm and content.

In Time field, press A to input "A" (namely AM); press P to input "P" (namely PM), or touch "AM" or "PM" directly to make a setting.

In Alarm field, touch ▯ to start up the alarm, touch it again to cancel.

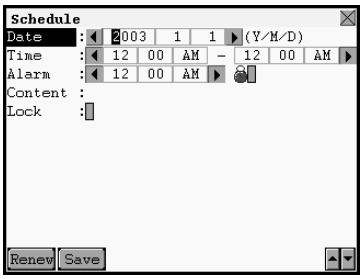

Press 輸入 or touch [Save] to save data (Content field should be input).

Touch [Renew] to renew all data.

Note: *For details on how to lock data, please refer to the relevant part in Personal Information. To view the locked data in Schedule, you should input the correct password or clear the installed password first. Only after the alarm time is set and alarm function is activated, can you enable the alarm clock.*

6.4.2 Searching data

--For details, please refer to the relevant part in "Telephone Directory".

6.4.3 Editing and deleting data

--For details, please refer to the relevant part in "Telephone Directory".

6.4.4 Copying data

--For details, please refer to the relevant part in "Memorandum".

6.4.5 Password

--For details, please refer to the relevant part in “Personal Information”.

6.5 Commemoration

You can input, edit, revise, copy or delete commemorative date (either in Lunar Calendar or Solar Calendar), topic and content freely. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

6.5.1 Inputting data

Press ▲ CAPS ▼ EDIT to choose “Solar Commemoration” or “Lunar Commemoration” or touch the desired one directly.
e.g. choose “Solar Commemoration”.

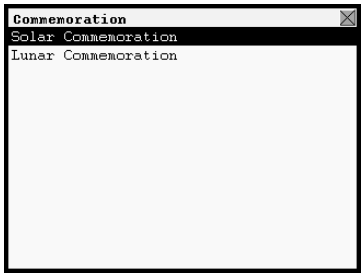

Press 新增 字體 or touch [New] to create a new record.
Input date and content.
Touch [Save] to save data.
Touch [Renew] to renew all data.

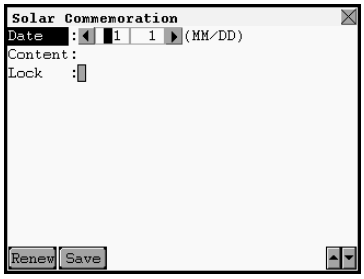

Note: *For details on how to lock data, please refer to the relevant part in Personal Information. To view the locked data in Commemoration, you should input the correct password or clear the installed password first.*

6.5.2 Searching data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.5.3 Editing and deleting data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.5.4 Copying data

--For details, please refer to the relevant part in “Memorandum”.

6.5.5 Password

--For details, please refer to the relevant part in “Personal Information”.

6.6 Shorthand

With touch-and-go operation, you can write down important events directly on the screen with the stylus.

6.6.1 Inputting data

Access Shorthand. Press 新檔 字體 or touch [New] to create a new record.

Write on the screen directly with the stylus, the written data will automatically added into the data input field. Touch color block to select the desired color for the stylus.

Touch [Space] to insert a space.

Touch [Del.] to delete the data on the right of the cursor.

Touch [Feed] to create a new line.

Touch [Clear] to delete the data on the left of the cursor.

Touch [Renew] to clear all written data and rewrite.

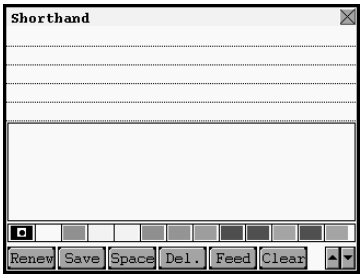

Touch [Save] and input the filename, then press 輸入 to save the data.

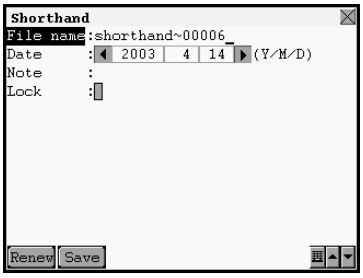

6.6.2 Editing and deleting data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.7 Notepad

You can directly write or draw on the screen to create a new record quickly.

6.7.1 Inputting data

Access Notepad. Press 新檔 字體 or touch [New] to create a new record.

The icons from left to right represent Select Tool, Free Draw, Straight Line, Dotted Line, Arrow, Round, Square, Triangle, Eraser, Copy, Cut, Paste and Delete.

You can draw or write on the screen directly. If you are not satisfied, just touch [Renew] to renew or touch to make partial changes. To make a copy, you need to touch to select the scope that you want to copy, then touch to select the desired position, and then touch to paste. You also can touch to cut and paste the selected scope.

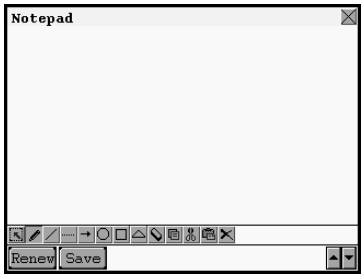

Touch [Save] and type in the filename, then press to save the data.

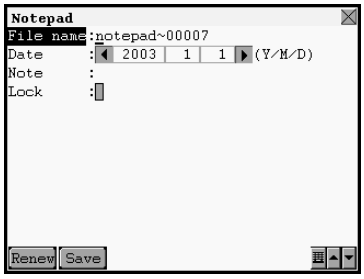

6.7.2 Searching data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.7.3 Editing and deleting data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.8 Schedule Class

You can keep records of day class schedule or evening class schedule. (Key-entry, Handwriting Recognition and Touch-and-go operations are supported.)

6.8.1Inputting data

Access Schedule Class.

Press to select a desired period of time, then touch [Edit] to create a new record.

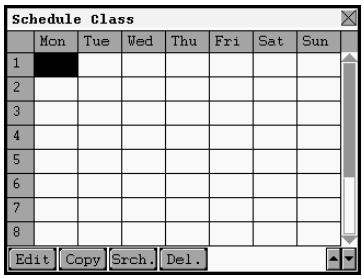

Move the cursor to the color field,
Press DEL INS to customize the color.
Touch [Save] to save data.
The color and abbreviation you set will be displayed in the corresponding time table after you save the record.
Touch [Renew] to renew all data.

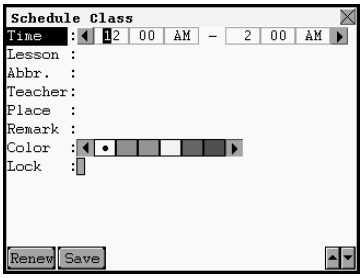

6.8.2 Searching Data

Press CAPS EDIT Δ C AC ∨ to select a period field, then press 輸入 to enter the daily class.

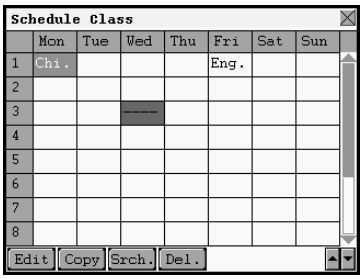

Press CAPS EDIT Δ C AC ∨ to select a time period, then press 輸入 to confirm.

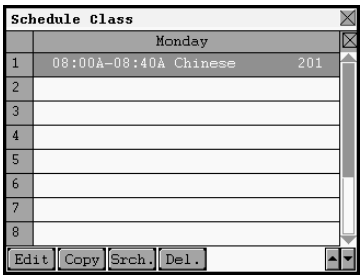

In daily or weekly mode, touch [Srch] to select search mode.

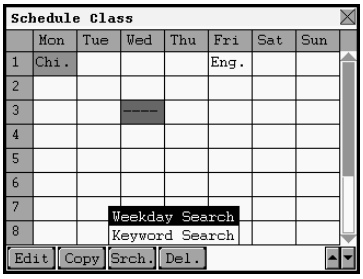

Weekday Search
Choose “Weekday Search” and press CAPS EDIT to select a day, then press 輸入 to confirm. Or touch ▼ to select a day in the pop-up list to view its record.

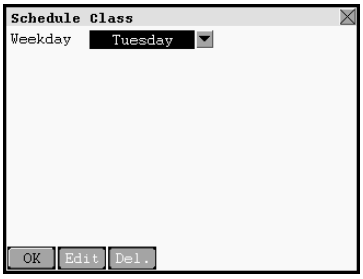

Press ▲ CAPS / EDIT ▼ to select a record, then press 輸入 to view its details.

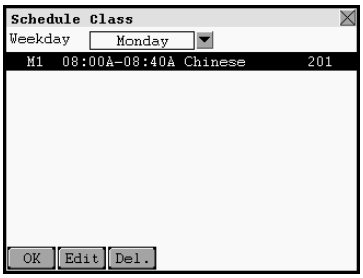

Keyword Search

-- For details, please refer to the relevant part in “Memorandum”.

6.8.3 Editing and deleting data

-- For details, please refer to the relevant part in “Memorandum”.

6.8.4 Copying data

In week or weekday mode, highlight a record and touch [Copy], then type in the desired weekday and section to copy it.

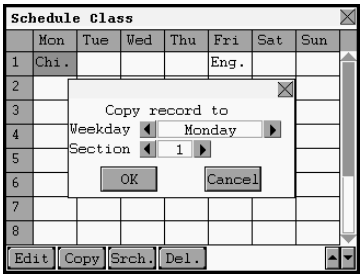

6.9 Voice memo

Digital recording function is provided in this section. You can record, play and delete the data more freely and easily. (Key-entry, handwriting recognition and touch-and-go operations are supported.)

Press SHIFT 錄音 / 速度 or touch [Rec.] to start recording.

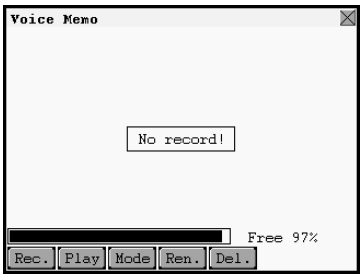

Press any key to stop and type in the file name, then press 輸入 to save it.

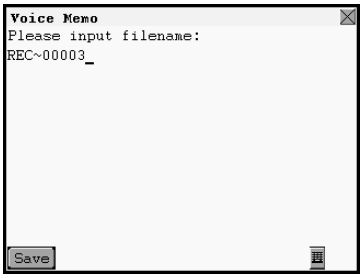

Press ▲CAPS ▼EDIT to choose a record, press 放音/自動 or touch [Play] to play the record.

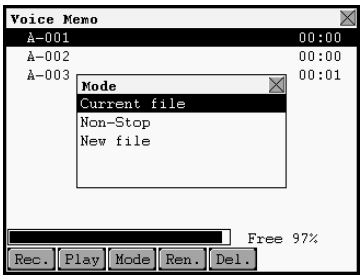

Touch [Mode] to select the play mode. Press ▲CAPS ▼EDIT to select "Current file", "Non-stop" or "New file".

Note: *If you choose " Non-stop", the system will play all records continuously; if you choose "New file", you will listen to the newest record; if "Current file" is selected, the highlighted record will be played.*

Press ▲CAPS ▼EDIT to select a record, then touch [Ren.] to rename the file.

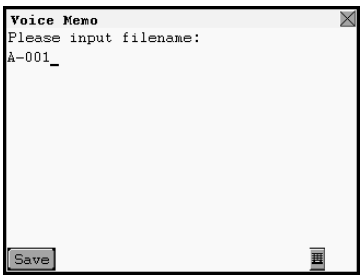

Touch [Del.] to delete the record.

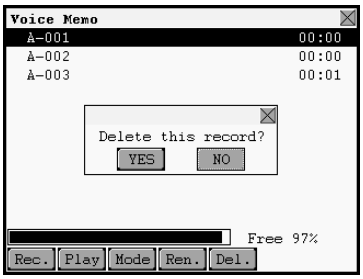

6.10 To do list

It allows you to arrange your to-do list in date and priorities sequence.

6.10.1 Inputting data

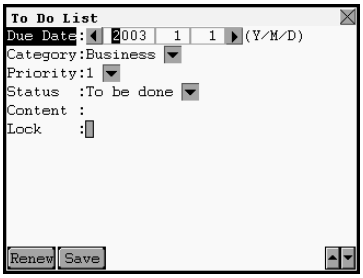

Access To do list. Press 新增 字體 or touch [New] to create a new record.
Input Due Date, Category, Priority, Status and Content.
While inputting Category, touch ▼ to select “Personal”, “Business” or “Others”; while inputting Priority, touch ▼ to select “1”, “2”, “3” or “n” and while typing in Status, touch ▼ to select “To be done”, “Done” or “Pending”.

After you finish inputting, touch [Save] to save the data.

Note: *For details, please refer to the relevant part in “Telephone Directory”.*

6.10.2 Searching data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.10.3 Editing and deleting data

-- For details, please refer to the relevant part in “Telephone Directory”.

6.10.4 Copying data

-- For details, please refer to the relevant part in “Memorandum”.

6.10.5 Password

-- For details, please refer to the relevant part in “Telephone Directory”.

6.11 Scheduler

It contains daily scheduler and weekly scheduler. When enabled, the records in Scheduler, To do list and Commemoration will be listed in this application for your quick search and easy view.

6.11.1 Searching data

If there are records on some day, the records will be shown on the screen. "S" represents Schedule record; "T" represents there is To-do list record on the day; "C" represents Commemoration record..

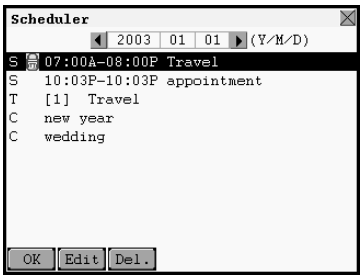

Note: *Before accessing this application, user should save some records in "Schedule", "To do list" or "Commemoration" first.*

Press ▲ ▼ Δ ▽ to select a record and press 輸入 to enter.
e.g. Choose "To do list" to enter its view mode.

Touch [Srch] and input the desired date, then press 輸入 to enter index mode. Select one item to view its details.

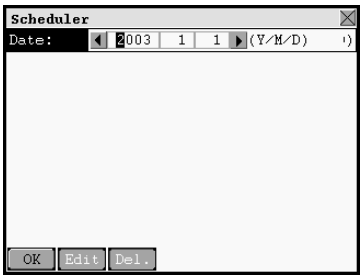

Touch [Week] to view the weekly records.
Press ◄DEL INS► to move the cursor to the previous or next day.
Press Δ ▽ to move the cursor to the previous or next week.
Touch [Day] to view the record in that day.

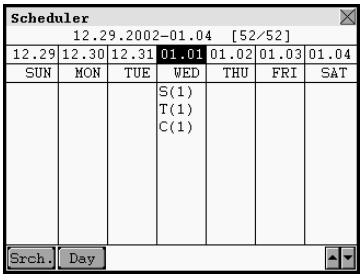

6.11.2 Editing data

-- For details, please refer to the relevant part in "Telephone Directory".

6.11.3 Copying data

-- For details, please refer to the relevant part in “Memorandum”.

CHAPTER7 CALCULATOR AND FINANCE

7.1 Simple Calculator

It contains the functions of the calculator, which includes four operations, square, square root and percentage calculation. (Both Key-entry and Touch-and-go operations are supported.)

Choose “Simple Calc.” from calculator menu screen.

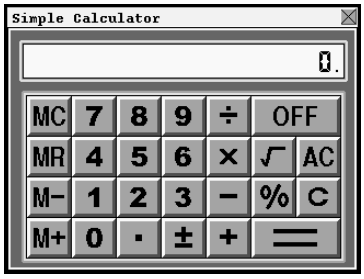

Calculate 126+12=?.
Input “126” and press T (i.e. “+”), input “12” and then press 輸入 (i.e. “=”) to get: 126+12=138.

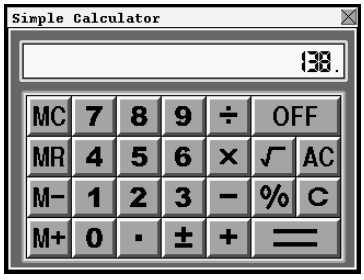

Press AC/V or touch AC to clear the input data.
Press C/Δ or touch C to clear all the input data and begin another calculation.

Calculate 200×10%=?.
Input “200” and press U (i.e. “×”), input “10” and press 輸入 (i.e. “%”), then press O (i.e. “=”) to get: 200×10% =20.

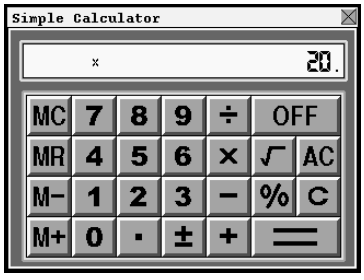

Press R (i.e. “M+”) to store the value to the memory.

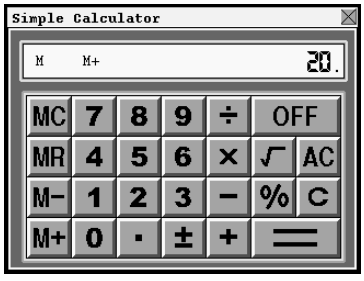

Press [E] (i.e. “M-“) to clear the value stored in the memory.

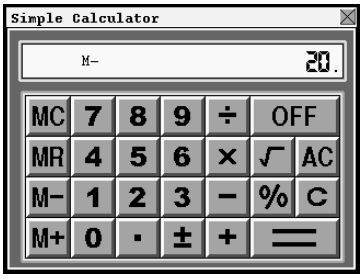

Press [W] (i.e. “MR”) to retrieve the value stored in the memory.

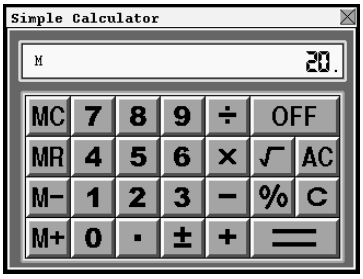

Press [Q] (i.e. “MC”) to clear the value saved in the memory.

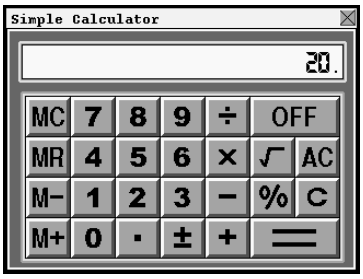

Calculate $\sqrt{81}$ =?.
Input “81” and press [N] i.e. “$\sqrt{}$”)
to get: $\sqrt{81}$ =9.

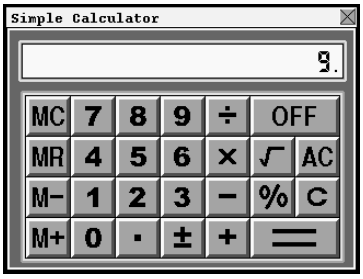

Calculate the multiple of “3”.
Input “3” and press [U] i.e. “×”),
then press [=] (i.e. “=”) to get: 3×3=9.

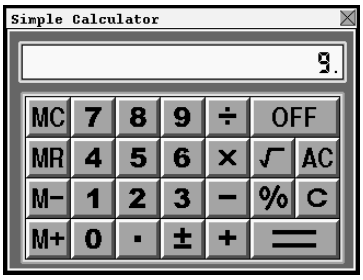

Press [輸入] (i.e. "=") again to get: 3×3×3=27.

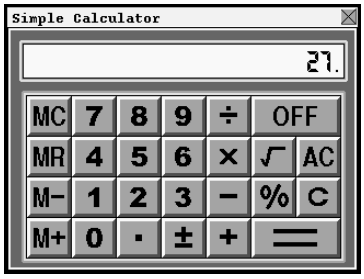

Press [說明 目錄] to return to main menu screen.

7.2 Scientific Calculator

In this application, you can perform arithmetic calculations, function operations and other calculations. You can also modify the input data anytime. (Both Key-entry and Touch-and-go operations are supported.)

Choose "Sci. Calc." from calculator menu screen.

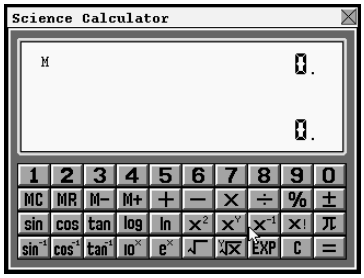

Calculate 1234+867+cos30=?.
Input "1234" and press [T] (i.e. "+").
Input "867" and press [T] (i.e. "+").
Input "30" and press [S], then press [輸入] (i.e. "=") to get: 1234+867+cos30 = 2101.8660254038.

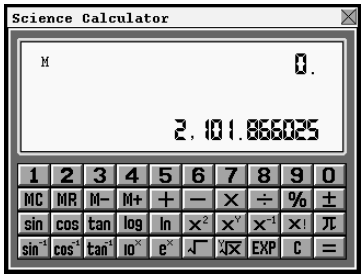

Press [退出] to clear the calculation and start another new one.

7.3 Paperless Calculator

You can store the calculations and their results, view or modify the inputted data anytime. You can also calculate after modifying. (Both Key-entry and Touch-and-go operations are supported.)

Touch the “dec point” field.
Press ▼ to pull down the list of the decimal point. Press ▲ ▼ to select the desired item, e.g. “3 dec point” (“3 dec point” means to display the value with three digits after decimal point), then press ↵ to confirm.

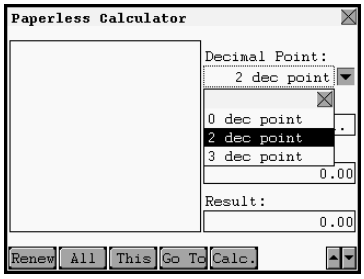

Touch the “Result” field.
Calculate160+240-157=?.
Input “160”and press T (i.e. “+”), input “240”and press Y (i.e. “-”), input “157”, then press ↵ (i.e. “=”) or touch [Calc.] to figure out: 160+240-157=243.000.

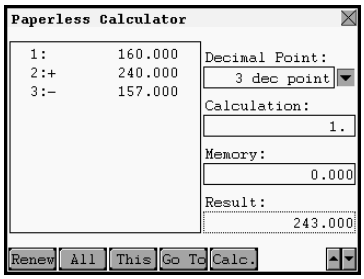

Another calculation: 240×2-144=?.
Input “240” and press U (i.e. “×”), input “2” and press Y (i.e. “-”). Input “144”, then press ↵ (i.e. “=”) or touch [Calc.] to get: 240×2-144= 336.000.

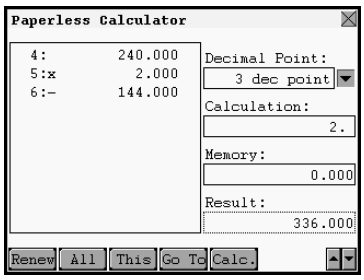

Touch formula on the left screen to edit the input data directly.

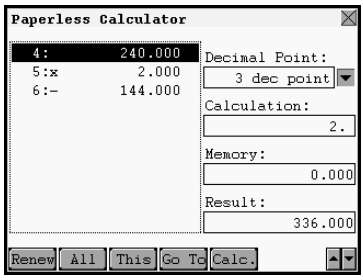

Touch the “Calculation” field, press Δ AC to choose the previous or next calculation, or input the number of the desired calculation, then press ↵ or touch [Go To], the calculation will be shown on

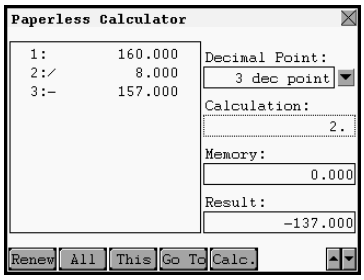

the left side of the screen.

Press ▲ ▼ to select a row to edit.
e.g. press ▲ ▼ to select the second row.

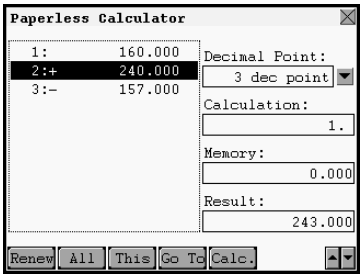

Press I (i.e. "÷") and "8", change "+240" to "÷8", then press 輸入 (i.e. "=") or touch [Calc.] to get the new result.

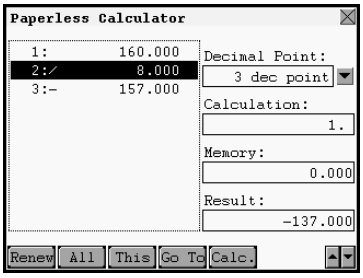

Touch [All] or [This] to clear all data or single data, press N to retain or press Y to delete all data or single data.

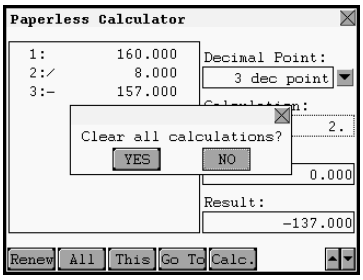

7.4 Metric Conversion

Metric units of various categories, such as length, area, volume and weight are provided for conversion. And two-way conversions are available for any unit of the same category. (Both Key-entry and Touch-and-go operations are supported.)

Touch the screen to select the desired field.
Touch the "Type" field.
Tap ▼ to pull down the list of the type, press ▲ ▼ to select the desired item, then press 輸入 to confirm.

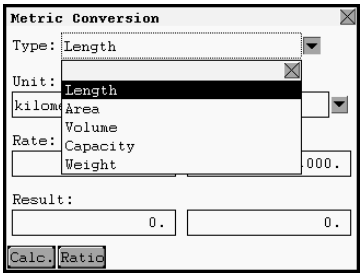

e.g. select “Length”.

Touch the “Unit” field on the left, tap ▼ to call out the unit list, then press ▲ ▼ to select the desired unit and press ↵ to confirm.
e.g. select “kilometers”.

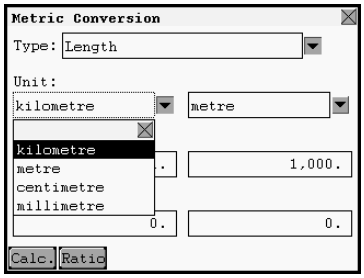

Touch the “Unit” field on the right, then select another unit in the same way mentioned above.
e.g. select “metre”.

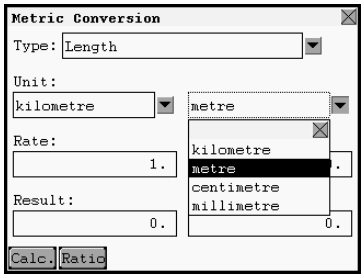

Touch [Ratio] to view the rate.
Touch “Result” field, input “5”, then press ↵ or touch [Calc.] to figure out “5 km = 5000 m”.

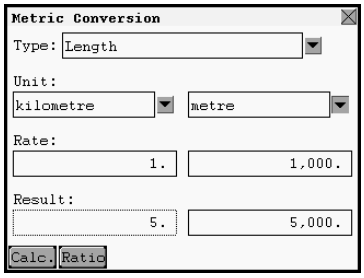

7.5 Unit Conversion

It provides various categories, such as length, area, weight, etc. And two-way conversions are available for any units of the same category. (Both Key-entry and Touch-and-go operations are supported.)

Touch the screen to select the desired field.
Touch the “Type” field, tap ▼ to pull down the list of the type, press ▲ ▼ to select the desired category, then press

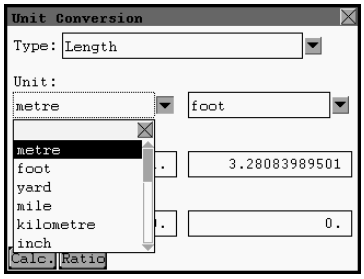

to confirm.
e.g. choose “Length”.

Touch the “Unit” field on the left, tap to call out the unit list, then press to select the desired unit and press to confirm.
e.g. select “metre”.

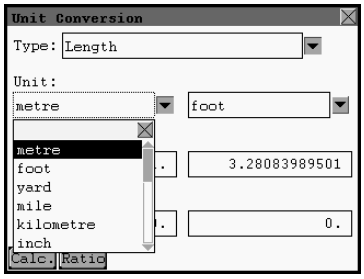

Touch the “Unit” field on the right, then select another unit in the same way mentioned above.
e.g. select “foot”.

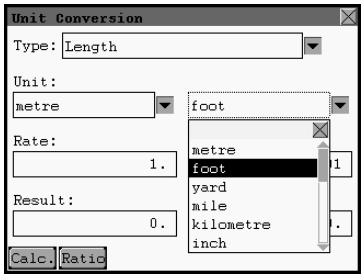

Touch [Ratio] to view the rate.
Touch “Result” field, input “3”, then press or touch [Calc.] to figure out “3metre= 9.8425196850394 foot”.

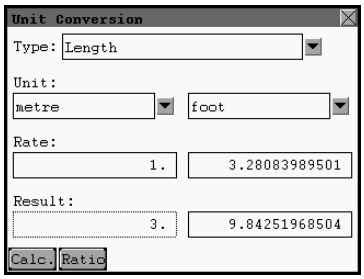

7.6 Currency Conversion

Totally 24 currencies are provided for your conversion. To perform two-way conversion, you should set the exchange rate first. You can also define 8 currencies by yourself. (Both Key-entry and Touch-and-go operations are supported.)

Touch the “Currency” field on the left, tap to call out the list of the currency, then press to select the currency name and press to confirm.
e.g. select “dollar AUD”.

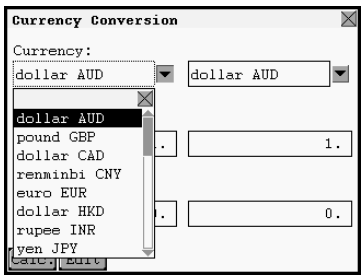

Touch the “Currency” field on the right, then select another currency name in the same way mentioned above.
e.g. select “dollar USD”.

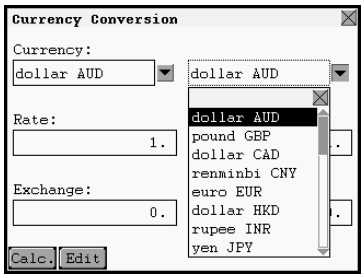

Touch the “Rate” field on the left, input the rate”1.315” and press 輸入 to confirm.

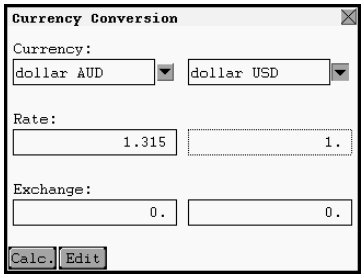

Touch the “Exchange” field on the left, input “200”, then press 輸入 or touch [Calc.] to get the conversion result.

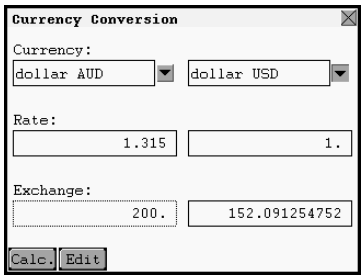

Select “Unnamed1-8” from “Currency” field to self-define the currency.
e.g. select “Unnamed1”

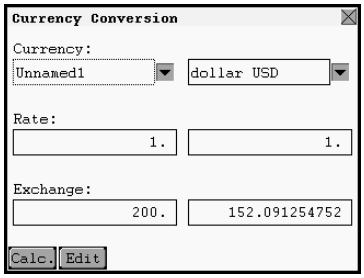

Touch [Edit] to self-define the currency name. Input the desired currency name (9 Chinese characters or 18 English letters can be input for the currency name).
e.g. input “Rouble” and press 輸入 to save. It will automatically appear in the currency list.

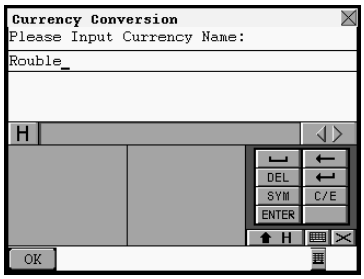

Note: *The user-defined currency can be converted with other currencies.*

7.7 Financial Management

In this application, you can manage different kinds of accounts like Balance, Transfer, Credit and Debit, etc.. The data can be edited or deleted while viewing. (Both Key-entry and Touch-and-go operations are supported.)

7.7.1 Inputting Data

Enter “Financial Management”.
Press ▲CAPS ▼EDIT to move the cursor to the next field once completing one.
Press 輸入 or touch [Save] to save data after completing input.

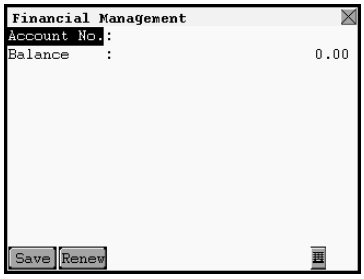

Touch [Renew] to renew all data.

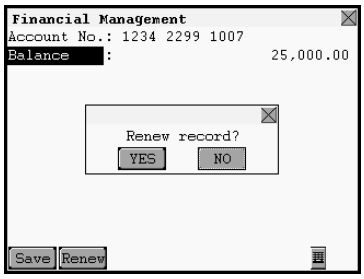

Press ▲CAPS ▼EDIT to choose an account.
Touch [New] to create a new record.

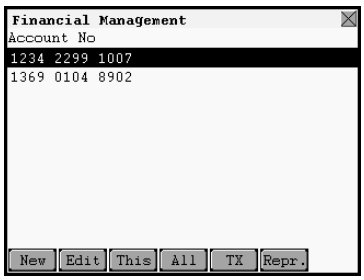

Touch [TX] to input the transfer information.
Touch “TX Date” field and input the transfer date, then press ▼EDIT to move the cursor to the next field; press ◄DEL INS► to select Credit or Debit.
(***Note:*** *“Credit” represents withdraw;*

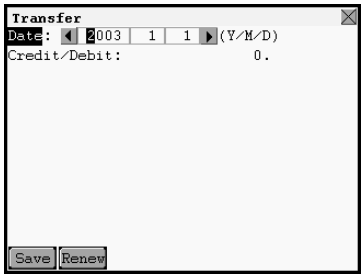

"Debit"represents deposit), and input transfer amount.
Press [輸入] or touch [Save] to save the data.

7.7.2 Searching Data

Press [CAPS] [EDIT] to choose the desired account, then press [輸入] to view its details.

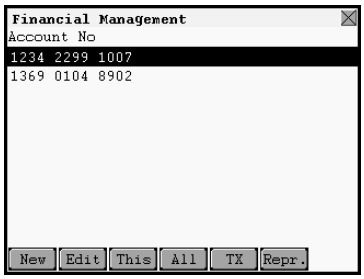

Touch [Repr.] to view the Financial Report.
Then touch [Credit] to view Credit report;
Touch [Debit] to view Debit report.

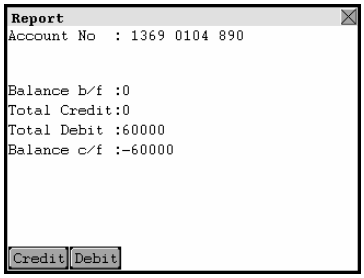

7.7.3 Editing and Deleting Data

Highlight the desired account, then touch [Edit] to enter its edit screen.

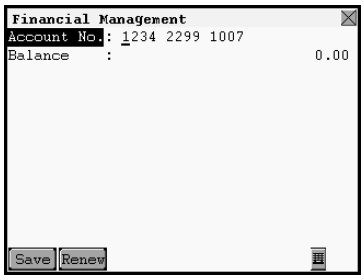

Touch [This] to delete the record; press [N] to retain it and press [Y] to delete it.
Touch [All] to delete all records.

7.8 Loan Interest

You can calculate Mortgage, Annual Interest Rate, Total Interest and Monthly Payment, also you can request Total Amount Paid or Loan Left, etc.. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Loan Interest”.
Input the data. Press ▲ ▼
to move the cursor up and down.
Press 輸入 to enter the
next input field.

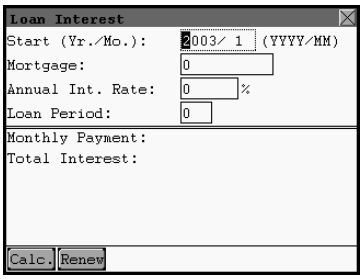

After inputting the “Start date (Y/M)”, “Mortgage”, “Annual Interest Rate” and “Loan Period”, press 輸入 or touch [Calc.] to figure out “Monthly Payment” and “Total Interest”.)

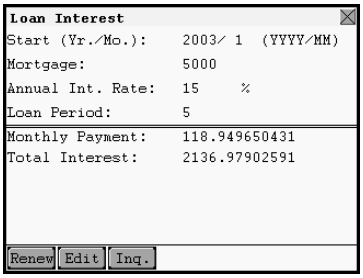

Touch [Renew] to renew all data.
Touch [Edit] to edit the data.

Touch [Inq.] to search for “Total Amt. Paid” and “Loan Left” in some period.

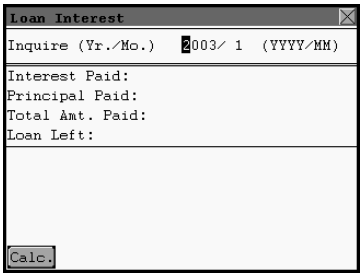

Input the inquiry date, then press 輸入 or touch [Calc.] to calculate “Interest Paid”, “Principal Paid”, “Total Paid”, “Total Amt Paid” and “Loan Left”.

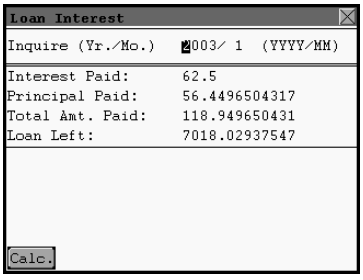

7.9 Fixed Deposit

It includes Periodically-Deposit Account, Fixed Deposit Account and Ordinary Account. Input necessary data and you can figure out Interest, Principal, Interest Rate, Final Value of Annuity and Term of Annuity. (Both Key-entry and Touch-and-go operations are supported.)

Enter “Fixed Deposit”.
Press ▲ ▼ or touch the screen to choose an item.

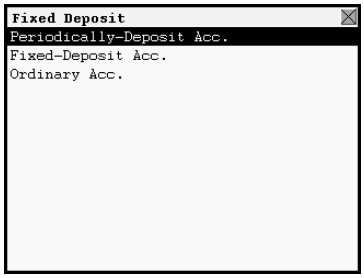

7.9.1 Periodically-Deposit Account

Deposit a fixed amount each period and withdraw the Principal and Interest at one time after expiry date. You can carry out Interest, Interest Rate, Term of Annuity and Periodic Payment Amount.

Press ▲ ▼ or touch the screen to select an item.
e.g. Choose “Interest Calculation”, then press 輸入 to confirm.

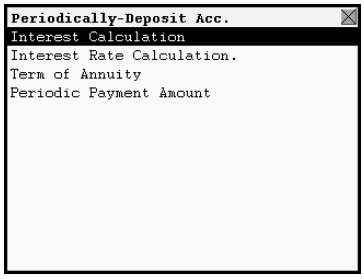

Input the data. Press ▲ ▼ or 輸入 to move the cursor to the next input field once completing one.
Input periodic payment amount, interest rate (p.a.), number of term and term of annuity.

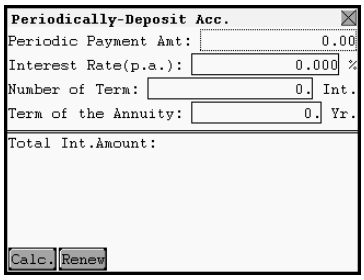

Press [輸入] or touch [Calc.] to calculate the "Total Interest Amount".
Touch [Edit] to edit data.
Touch [Renew] to carry out another calculation.

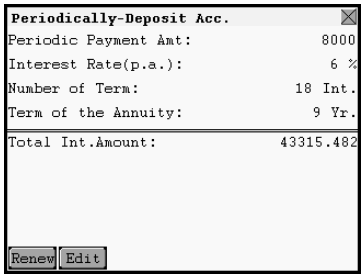

Note: *Choosing "Interest Calculation", "Term of Annuity" or "Periodic Payment Amount", you can also carry out the similar calculation above.*

7.9.2 Fixed Deposit Account

In this application, you can calculate Interest Amount, Interest Rate, Deposit Time and Principal. Please refer to "Periodically-Deposit Account" for details.

7.9.3 Ordinary Account

In this application, you can calculate Interest, Interest Rate, Principal and Final Amount. Please refer to "Periodically-Deposit Account" for details.

7.10 Loan Bidding

It includes Simple Bidding Calculation and Complex Bidding Calculation. You can calculate the Total Gain, Annual Interest Rate, Return Rate, etc.. (Both Key-entry and Touch-and-go operations are supported.)

Enter "Loan Bidding".
Press [CAPS] [EDIT] to select a desired item or touch it directly.

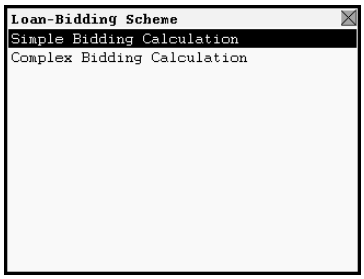

7.10.1 Simple Bidding Calculation

Input the data. Press [CAPS] [EDIT] or [輸入] to move the cursor to the next field once completing input.

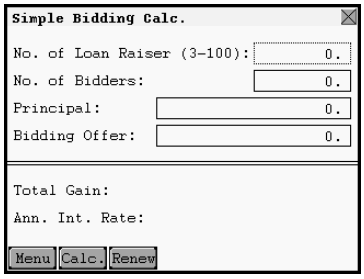

Input “80” in the “No. of Loan Raiser” field(the number of Loan Raiser should be between 3 and 100.).
Press [輸入] and input “20” in the No of Bidders.
(No. of bidders should be less than or equal to the number of Loan Raiser.)
Press [輸入] and input the Principal amount “10000”.
Press [輸入] and input Bidding Offer amount “1000” (Bidding Offer should be less than the “Principal”, but more than zero.)

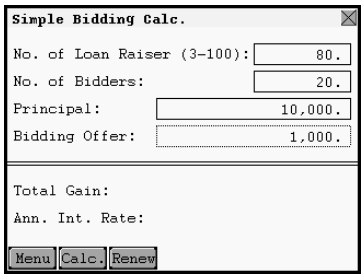

Press [輸入] or touch [Calc.] to calculate “Total Gain” and “Annual Interest Rate”.

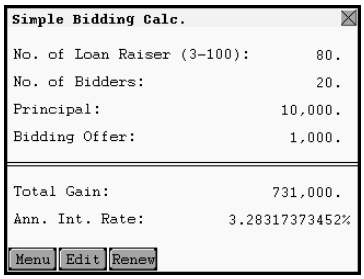

Touch [Edit] to edit data for recalculating.
Touch [Renew] to renew all data.
Touch [Menu] to return to the “Loan Bidding” menu screen.

7.10.2 Complex Bidding Calculation

Press [DEL] [INS] to choose “Complex Int.” or “Complex Ext.”.

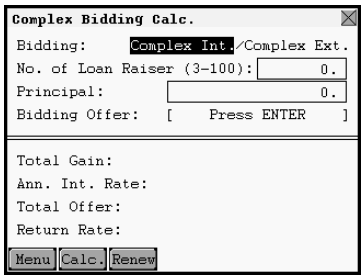

Press [輸入] and input “5” in the No. of Loan Raiser field. (The number of loan raiser should be between 3 and 100). Press [輸入] and input Principal amount “10000”.

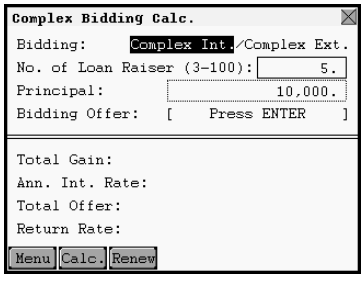

Press [輸入] to move the cursor to Bidding offer field.
Press [輸入] and input the bidding principal amount sequentially (The input principal should be less than the Principal", but more than zero.).
After inputting all bidding offers, press [輸入] to confirm.
Touch [Calc.] to inquire the data of "Bidding Offer" of each time.

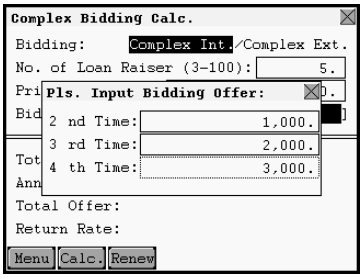

e.g. input "3" to inquire the data of the third time "Bidding Offer",
press [輸入] to figure out "Total Gain", "Ann. Int. Rate", "Total Offer" and "Return Rate".

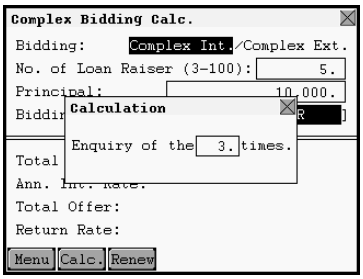

Touch [Calc.] to inquire data of "Bidding Offer" of other times.
Touch [Edit] to edit data.
Touch [Renew] to renew all data.
Touch [Menu] to return to Loan Bidding screen.

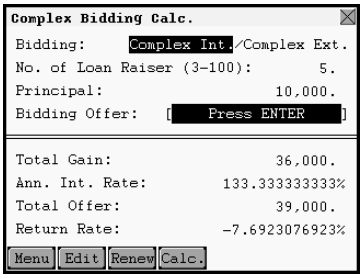

CHAPTER 8 TIME

8.1 Local Time

You can set the time of the desired city as the local time. You can also set 12/24 hours format and set the alarm. (Both Key-entry and Touch-and-go operations are supported.)

Choose “Local Time” from “Time” menu.

Press 輸入法 功能 or touch [Func.] to enter the function setup screen.
Press CAPS EDIT to select the desired item, or touch the item directly.
e.g. choose “Set city”.

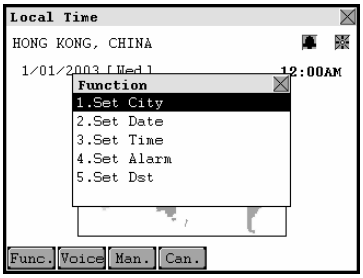

Input the city name directly or press CAPS EDIT or AC AC to select the desired city.

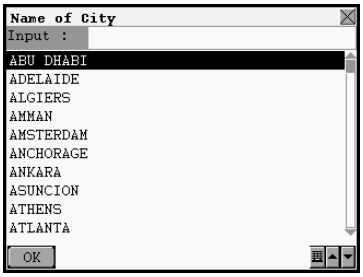

e.g. Input “HONGKONG” and press 輸入 to set the city time as local time.

Choose “Set date”.
Touch the date directly to set date.
Press DEL INS to move the cursor to the desired field and press CAPS EDIT to set date, then press 輸入 to confirm.

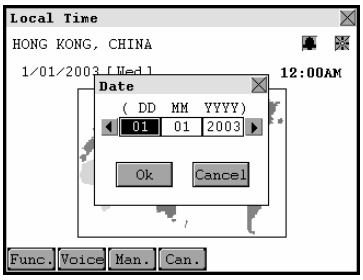

Choose “Set time”.
Touch the time directly to set time.
Press DEL INS to move the cursor to the desired item.
Press CAPS EDIT to set time, then press 輸入 to confirm.

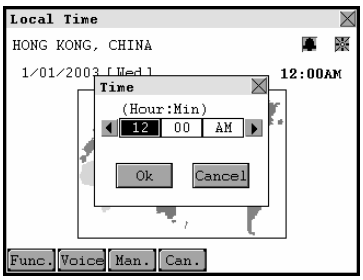

Choose “Set Alarm” to set the alarm time.
Press DEL INS to move the cursor to the desired field.
Press CAPS EDIT to set the alarm time, then press 輸入 to confirm.

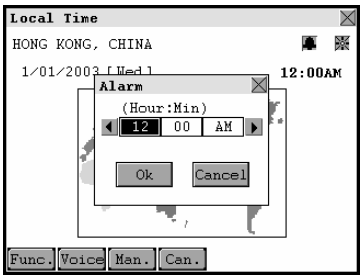

Choose “Set Dst” to set the daylight saving time.
Press CAPS EDIT to choose “On” or “Off”, then press 輸入 to confirm.

Touch 🔔 or ✳ to set the alarm or DST on or off.

8.2 World Time

In this application, you can check the time of cities of the world according to the local time and the zone difference. (Both Key-entry and Touch-and-go operations are supported.)

Choose “World Time” from “Time” menu.

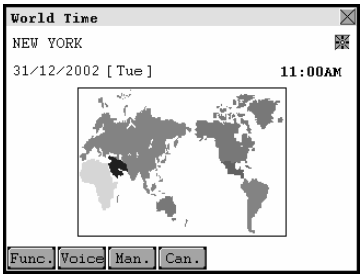

Press 輸入法/功能 or touch [Func.] to enter the function setup screen.
Press CAPS EDIT or AC to select the desired item, or touch the item directly.
e.g. choose “Set City”

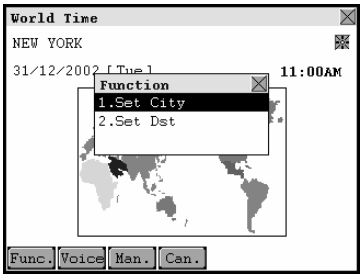

Press CAPS EDIT or AC to select the desired city, or input the city name directly.

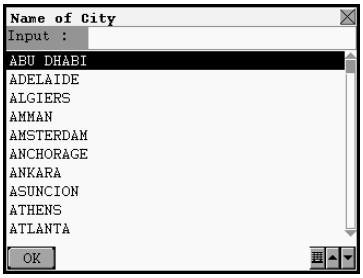

e.g. Input “New York” and press 輸入 to set the city time as world time.

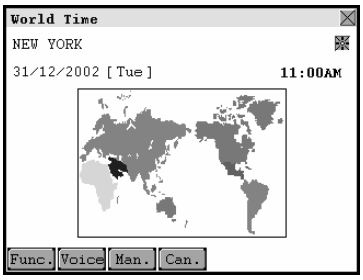

Choose “Set Dst” to set daylight saving time.

Press CAPS EDIT to choose “On” or “Off”, then press 輸入 to confirm.

Touch 🔔 or ☀ to set the alarm or DST on or off.

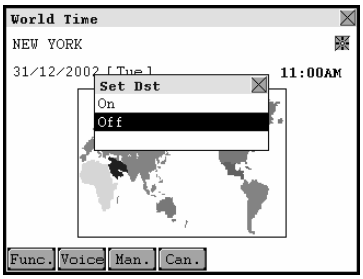

8.3 Timer

Choose “Timer” to enter timer mode.

Touch ▲ ▼ to adjust the timer.
Touch ▲ to increase one hour, minute or second;
Touch ▼ to subtract one hour, minute or second.
Touch [Start] to start counting down.
Touch [Pause] to pause; touch [Start] again to continue it.
Touch [Reset] to stop it and reset the timer to zero.

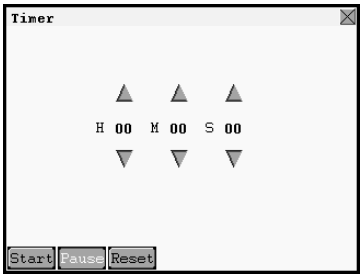

CHAPTER 9 CALENDAR

Calendar from 1901to 2059 is provided for your reference. You can also enter commemoration or schedule to view data.

Press ▲CAPS ▼EDIT ◄DEL ►INS to choose “Calendar” from main menu screen, then
press 輸入 to confirm.
Touch the arrow key on the left/right of “year” to enter the previous or next year.
Touch the arrow key on the left/right of “month” to enter the previous or next month.
Press ▲CAPS ▼EDIT ◄DEL ►INS to move the highlight bar.
Press ^C AC to enter the previous/next month.
Touch [Today] to move the highlight bar on today.

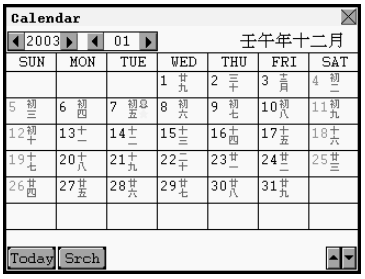

If there is a record of “Schedule” or “Commemoration” on a date, ■ or ★ will appear on that date. (■ represents “Schedule” and ★ represents “Commemoration”.)
Choose the date to view its relevant record.
e.g. Choose “Schedule”.

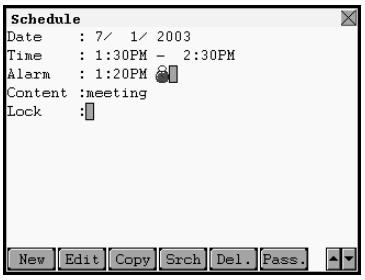

If a date is marked with ■ and ★ , you can choose either “Commemoration” or “Schedule” to view its record.

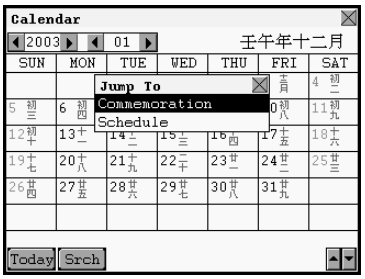

Touch [Srch.] to search a date.
Input the date in the pop-up window and touch [OK] to move the highlight bar on that date; touch [Cancel] to cancel.
Press 輸入法 功能 and select one item to perform its relevant function.
Press 退出 to return to the previous screen.

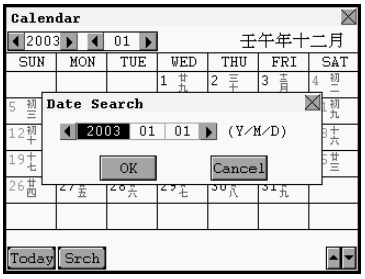

CHAPTER 10 GAMES

Ten intellectual games are available for your amusement.

10.1 Brick Game

This game can bring you a entertainment world.

Choose “Brick Game”.
Press ▲ ▼ to select a level, then press 輸入 or touch [Start] to enter the game.

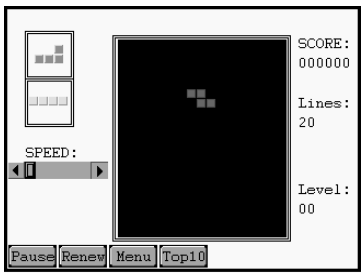

1. Press ◄ ► or touch the left/right arrow key to adjust the speed.
2. Press 輸入 to rotate the brick, press ◄ to move the brick left, press ► to move it right, press ▼ to make the brick move downward faster.
3. When a line is filled with bricks, it will disappear and the score will increase automatically. One line represents 10 points. If you can fill two, three or four lines at one time, you can get 30, 60 or 100 points respectively.
4. Press P or touch [Pause] to pause, press it again to resume the game; press R or touch [Renew] to restart the game; press 說明 目錄 or touch [Menu] to return to the game main menu; touch [Top10] to view the top10;
5. The game will automatically enter the next level every time 20 lines disappear. After you successfully pass 15 levels, you will win the game
6. When the game is over, input your name, then press 輸入 to enter Top 10.
7. Press 退出 to exit.

10.2 Apple Chess

It is an interesting and challenging chess game.

Choose and enter “Apple Chess”.
Press ▲ ▼ to select the level or Top 10, then press 輸入 to confirm.

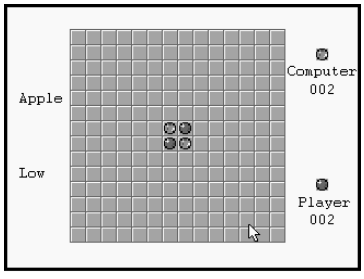

1. Press ▲CAPS ▼EDIT ◄DEL ►INS to move the cursor to the desired place and press 輸入 to place a checker.
2. The alert message “Invalid!” will be displayed on the screen if you select a pane that cannot trap the opponent’s checkers or has been occupied. The checkers trapped by the opponents’ checkers in horizontal, vertical or diagonal direction will become the opponent’s checkers. When the chessboard is fully occupied, the party who has more checkers will be the winner.
3. If there is no valid pane for you, “by computer” will appear and the system places the checker automatically. If there is no valid pane for the unit, it will show “by you”.
4. If your score is enough to be listed on Top10, press 輸入 to view Top 10.
5. Press 退出 to exit.

10.3 Mine Hunt

It is a challenging and intellectual game, which is designed to test your intelligence and analysis.

Choose and enter “Mine Hunt”.
Press ▲CAPS ▼EDIT to select Low Level, Mid Level, High Level or Quickest, then press 輸入 to confirm.

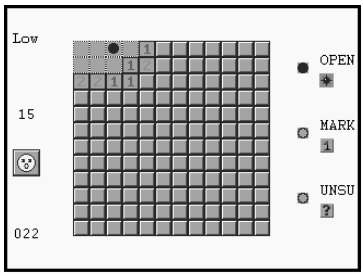

1. If you can mark all the mines hidden in the blocks within the shortest time, you will win the game. The limited playing time is 999 seconds.
2. The number of mines is shown on the upper left screen.
3. Press ^C AC∨ and then 輸入 to select “OPEN”, “MARK” or “UNSU”, or touch the
desired button directly.
4. Press ▲CAPS ▼EDIT ◄DEL ►INS and then 輸入 , or touch the screen to open, mark the mine with a flag or mark it as Unsure. Or press 輸入 directly to open, press 空格 查閱記錄 to mark the block. Meanwhile, the number of mines in the upper left corner of the screen will be reduced correspondingly.
5. If the uncovered is not a mine, a number, which represents the number of linking mines in 8 directions will appear. With it, you can guess where the surrounding mines are distributed.

6. If a block is marked with a flag, press 空格 to cancel the mark.
7. When the game is over, press Y or touch [Yes] to restart the game.
8. If you can win the game within the permissible shortest time, input your name and press 輸入 to view “Quickest”.
9. Press 退出 to exit.

10.4 Pairs

It is a pastime game. To win the unit, you are requested to uncover all the same cards within the shortest time.

Choose and enter “Pairs”.
Press CAPS EDIT to select the level and press 輸入 to confirm.

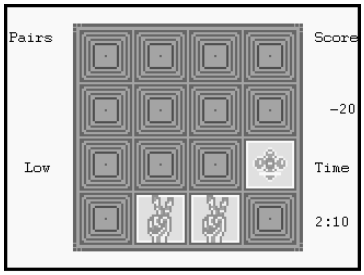

1. When the game starts, all cards are bare on the screen. After 5-7 seconds, all cards will be automatically covered and time begins counting.
2. Press CAPS EDIT DEL INS to select one card and then press 輸入 to uncover it. You can turn another card open in the same way until all pairs are uncovered. You can also use the stylus to select the desired card directly.
3. The score will automatically be increased by 20 points every time two same cards are uncovered; If two uncovered cards are not the same, 10 points will be automatically deducted from the score and the bare cards will be automatically covered.
4. If you cannot uncover all pairs and obtain 120 points within the specified time, you will lose the game.
5. Press 退出 to exit.

10.5 Plot

It is an intellectual and entertaining game. To win the game, you need to move the car to the entrance to the plot with the quickest steps.

Choose and enter “Plot”.
Press CAPS EDIT to select a level and press 輸入 to enter the game.

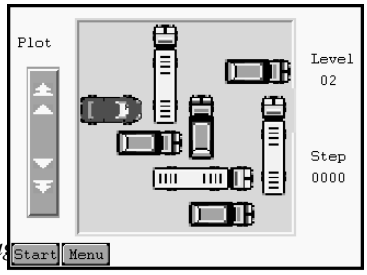

1. Press [CAPS] [EDIT] [DEL] [INS] to move the cursor to the selected car, press [L] to move the car upward or left, press [R] to move the car downward or right. Or use the stylus to touch the desired car directly and drag it to move the selected car. The car in the horizontal direction can only be moved horizontally and the car in vertical direction can only be moved vertically.
2. Touch [Renew] to restart the game.
3. "Step" shown on the lower right corner of the screen represents the steps that you have moved. If you can successfully move the car to the entrance to the plot within 200 steps, the system will automatically enter the next level. Otherwise, the game will be over.
4. Press [退出] to exit.

10.6 5-Tile

It is a pastime game which is good for your intelligence. You can compete with the unit or with your friends, with convenience and benefits.

Choose and enter "5-Tile".
Press [CAPS] [EDIT] to select "Single" or "Double", then press [輸入] to confirm.

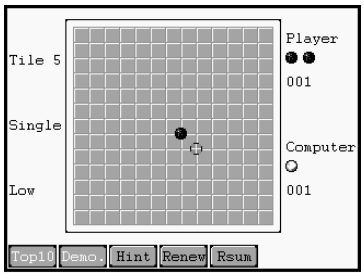

1. If "Single" is chosen, press [CAPS] [EDIT] to select a level, then press [輸入] to start the game.
2. Press [CAPS] [EDIT] [DEL] [INS] to move the cursor to the desired pane and press [輸入] to place a checker.
3. Touch [Top10] to view the Top10; touch [Demo] and the unit will play automatically; touch [Hint] to get the hint; touch [Renew] to restart the game; touch [Resume] to undo one step; touch [Top10] to view Top 10.
4. The one who gets 5-in-one-line tiles first is the winner.
5. Press [退出] to exit.

10.7 Wisdom Chess

It is a very interesting pastime game that is also helpful to improve your analysis

ability.

Choose and enter “Wisdom Chess”. Press [CAPS] [EDIT] to select “Low Level” or “High Level”, then press [輸入] to enter the game.

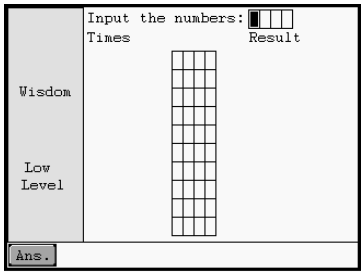

1. Press [DEL] [INS] to move the cursor and input four numbers from 0-9, then press [輸入] to confirm and the result will be displayed:
   - ● indicates both the number and the position are correct;
   - ○ indicates the number is right but the position is wrong.
2. If you can not get the correct answer within ten chances, you will lose the game.
3. Touch [Ans.] to view the answer.
4. Press [退出] to exit.

10.8 Pipe

There are three levels in the game, the difficulty is different at each level. To play the game, touch a brick to link with a pipe and make the water flow through a certain amount of pipes.

Choose and enter “Pipes”, press [CAPS] [EDIT] or touch the screen to select a level, then press [輸入] to start the game.

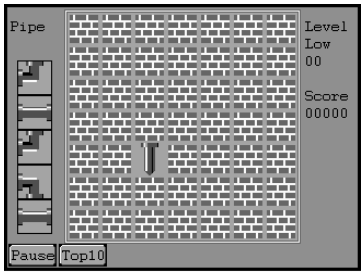

1. Press [CAPS] [EDIT] [DEL] [INS] and then [輸入] , or touch a brick directly to link with a pipe.
2. Press [P] or touch [Pause] to pause, and press [P] or touch [Cont.] to resume the game.
3. Select “Top 10” in level selection screen and press [輸入] or touch [Top 10] in game mode to view Top 10.
4. There are five pipes shown on the screen as hints. The top pipe will be displayed

after you press [輸入] , then pipes beneath will move upward.

5. There are 5 sub-levels in level 1 and you must pass the 5 sub-levels before entering level 2. In the first sub-level, you should make the water flow through 20 pipes, otherwise you will lose a chance; and by referring to that, after you make the water flow through 24 pipes, the system will enter Level 2. Like Level 1, the water should flow through 25-29 pipes before you pass the relative sub-levels to enter Level 3. In Level 3, there are no sub-levels, if the water can not flow through 30 pipes you will lose a chance, and you can play the game continuously until the game is over when 3 chances are used up.
6. *Once the water flows through a pipe, you will get 50 points. Move the cursor to a pipe without water and press [輸入] or tap the pipe directly to replace it with new one,but 50 points will be deducted every time.*
7. There are three chances in the game. If 3 chances are used up or the score reaches –9550, the game will be over.
8. If your score is high enough to be listed on Top 10, the name you input will enter Top 10. If your score is too low to be listed on Top 10, you can enter Top 10 to view its details.

10.9 Fireman

Choose and enter "Fireman".
Press [CAPS] [EDIT] to select the level, then press [輸入] to confirm.

1. Press [DEL] [INS] to move the stretcher to catch the falling person, and send them on the ambulance.
2. Press [R] to restart the game; press [P] to stop the game, press it again to resume the game.
3. You can get 10 points after you successfully rescue a person. In Low Level, the system will enter the next level once your score reaches to 500 points; and in High Level, if your score comes to 1000 points, you can win the game.
4. In every round, the game will be over if the number of the persons who fall on the floor reaches up to five.
5. If your score is enough to be listed on Top 10, input your name to view the Top 10.
6. Press [退出] to exit.

10.10 Racing Car

It is an interesting and exciting game.

Choose and enter “Racing Car”.
Press ▲ ▼ to select the level, then press 輸入 to confirm.

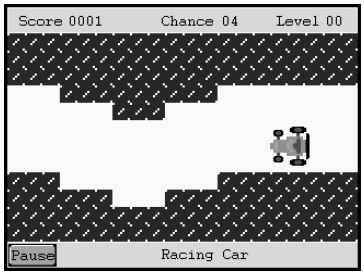

1. Press ▲ ▼ to move the racing car up/down.
2. Press P or touch [Pause] to pause, press P or touch [Pause] again to resume the game.
3. 2 points will be automatically added to the score every time the racing car passes one-screen distance. If your score reaches to 100 points, the system will enter the next level. You can not win the game until you pass the tenth level.
4. There are four chances available in each level. Once the racing car touches the obstruction, one chance will be deducted automatically. If four chances are used up, the game will be over.
5. If three chances are not used up in some level, the game will automatically enter the next level and the system will redeem you another chance.
6. Press 退出 to exit.

CHAPTER11 SYSTEM

11.1 System Setting

There are total 16 settings for you to personalize your unit, you can follow the on-screen instructions to finish the setting. (Both Key-entry and Touch-and-go operations are supported.)

Select “System Setting” in system menu, press ▲ ▼ ◄ ► or touch the item directly to perform the different setting.

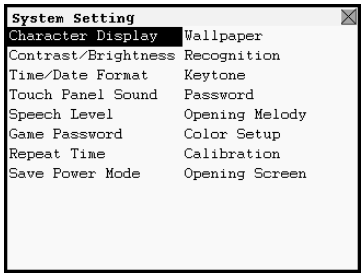

11.1.1 Character Display

Enables you to set the display mode between Traditional / Simplified Chinese and English.

Choose “Character Display”.
Press ▲ ▼ to select “Traditional”, “Simplified” or “English”
then press ↵ to confirm.
Press 退出 to exit.

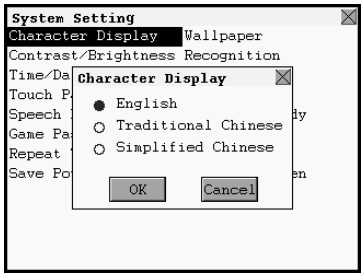

11.1.2 Contrast/Brightness

This option is designed to adjust the contrast and brightness of the screen.

Choose “Contrast/Brightness”.
Press ◄ ► to choose “Contrast” or “Brightness”.

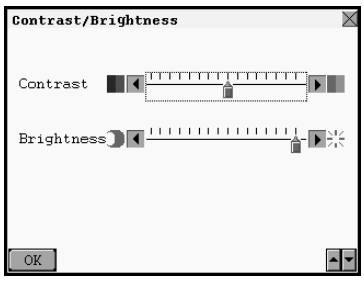

Press ◄ ► to move the cursor or drag the

cursor
directly to the desired position, then press [輸入] or touch
[OK] to confirm.
Press [退出] to exit.

Note: *You can also press* [SHIFT] [∧] *or* [SHIFT] [∨] *to adjust the brightness in any mode.*

11.1.3 Time/Date Format

To adjust time or date format.

Press [▲] [▼] to select "Time Format" or "Date Format".

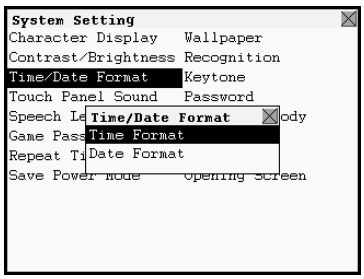

If choose "Time Format", press [▲] [▼] to select "12 hours" or "24 hours", then press [輸入] to confirm.

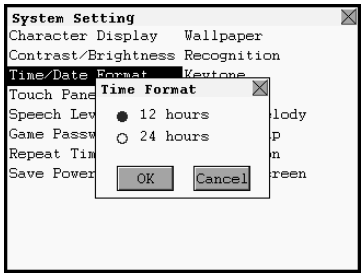

If choose "Date Format", press [▲] [▼] to select "D/M/Y" or "M/D/Y", then press [輸入] to confirm.
Press [退出] to exit.

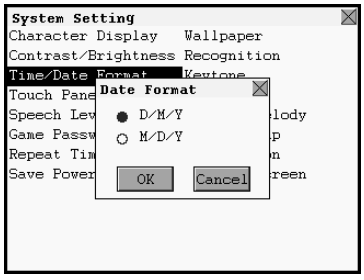

11.1.4 Touch Panel Sound

To set "Touch Panel Sound" On or Off. If it is on, it will sound when you touch the screen.

Choose “Touch Panel Sound”.
Press ▲ ▼ to select “On” or “Off”,
then press 輸入 to confirm.
Press 退出 to exit.

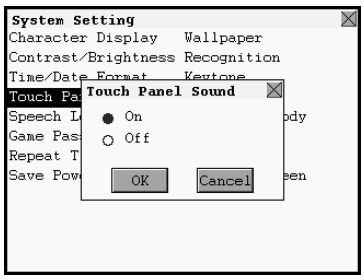

11.1.5 Speech Level

This option is used to set the Rate, Frequency and Volume of speech. After you set it, you can touch [Test] to test it.

Choose “Speech Level”.
Touch screen to select “Rate”
or “Frequency”.
Touch ◀ ▶ to adjust the setting,
touch [Test] to test it, then press
輸入 to confirm.
Press 退出 to exit.

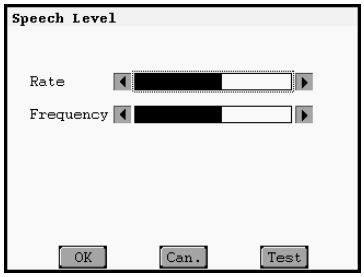

11.1.6 Game Password

Can be formed by up to eight numbers, letters or symbols. Before accessing the games, you should type in the password.

Choose “Game Password”.
Input up to eight numbers, letters
or symbols, and press 輸入 to
move the cursor to the confirmation
box, then type in the password
again and press 輸入 to confirm.
e.g. Input “123456”, then press 輸入
to confirm.

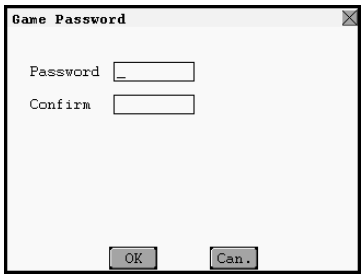

**To set password Off or clear password,
you should enter “Game Password” again.**

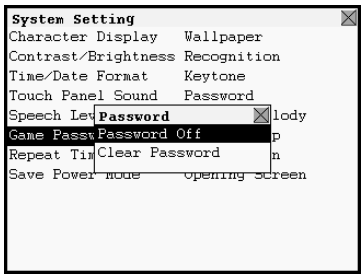

Choose “Password Off” or “Clear Password”, input the password and press 輸入 to set it off or clear it.

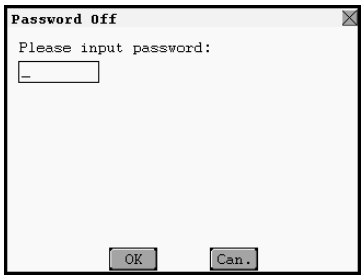

To reset the password on or clear the password, you can access “Game Password” again.
Choose “Password On” to reset it On; choose “Clear Password”, input the password and press 輸入 to clear it.

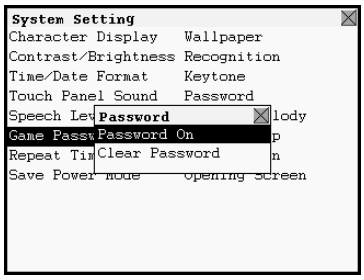

11.1.7 Repeat Time

Can be set as “1-99”. (The default setting of repeat time is 3.)

Choose “Repeat Time”.
Touch ◀ ▶ or numeric key to set repeat time, press [Test] to test it, then press 輸入 to confirm.

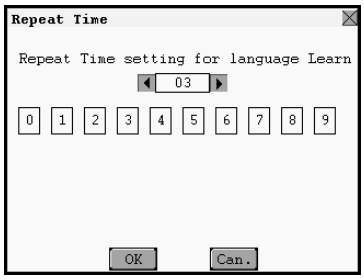

11.1.8 Save Power Mode

If no key operation is made within a period of idle time, the unit will be turned off automatically so as to save the power.

Enter “Save Power Mode” to set “Auto Power Off” or “Screen Dim Mode”.

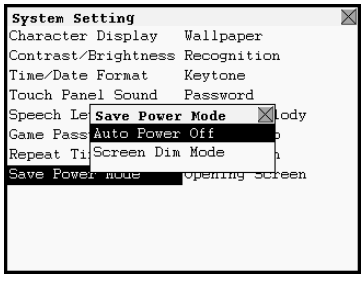

Press ▲CAPS ▼EDIT to set the auto power off or screen dim mode,
then press 輸入 to confirm.

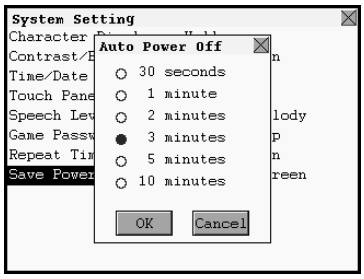

11.1.9 Wallpaper

To personalize the unit, you can set the built-in pictures as the wallpaper. A picture should be downloaded to your unit before you make this setting.

P▲CAPS s▼EDIT △C or ▽AC to select the desired item, or touch it directly.

Touch [View] to view the selected wallpaper.
Touch [Dload] to select the downloaded wallpaper.

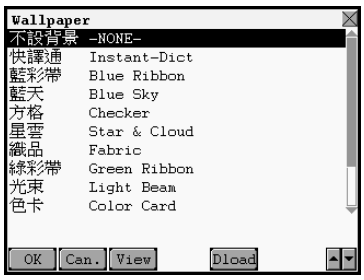

Press 輸入 or touch [OK] to confirm.
Press 退出 or touch [Can.] to exit.

Note: *User should download the picture first before setting the downloaded picture* as the wallpaper.

11.1.10 Recognition

It is designed to set Recognition Glossary, Fonts Recognition and Recognition Rate. “Common Glossary” and “All Glossary” can be set in Recognition Glossary, they differentiate between the amount of the words in the short list. When Font Recognition is enabled, you can set the font of the handwriting recognition---Simple or Traditional Chinese. Accessing Recognition Rate, you can set the recognition rate in the handwriting recognition mode.

Choose “Recognition”.
Press ▲CAPS ▼EDIT to select
“Recognition Glossary”,
“Fonts Recognition” or
“Recognition Rate”,
or touch the desired item directly.
Choose “Recognition Glossary”.

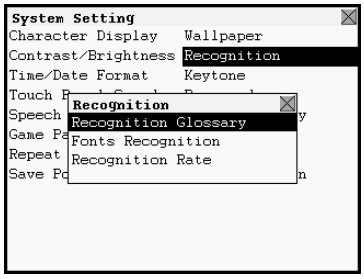

Press ▲CAPS ▼EDIT to select “Common” or “All”, then press 輸入 to confirm.

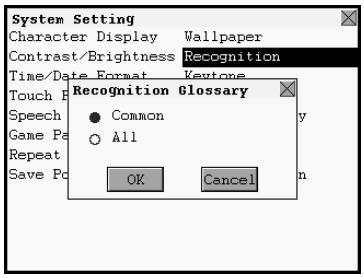

Choose “Fonts Recognition”.
Press ▲CAPS ▼EDIT to select “Traditional” or “Simple ”, then press 輸入 to confirm.

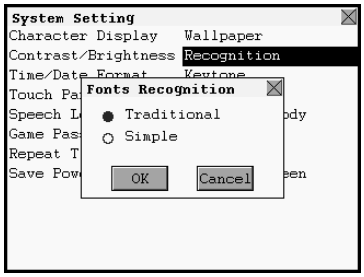

Choose “Recognition Rate”.
Press ▲CAPS ▼EDIT to select the desired rate, then press 輸入 to confirm.
Press 退出 to exit.

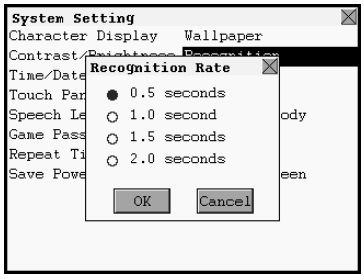

11.1.11 Keytone

To set the keytone on or off. If it is on, it will sound when you press any key.

Choose “Keytone”.
Press ▲CAPS ▼EDIT to select “On” or “Off”, and press 輸入 to confirm.
Press 退出 to exit.

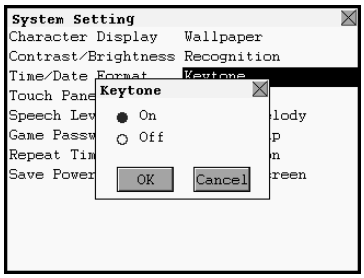

11.1.12 Password

Setting password to keep data secure. The password can be formed by up to eight numbers, letters or symbols. Only when the password is set , can you touch ☑ to lock data. The data hidden can be viewed unless the password is cleared.

Note: *If the password is set but the data is not locked, the data still can be viewed. Only the password is set and the data is locked, can the data be hidden. If the password is forgotten or lost, you can take the unit to our Service Center for clearing it. For details on how to set off or clear password, please refer to "Game Password".*

11.1.13 Opening Melody

To set opening melody on or off. If it is on, it will sound when you power on the system.

Choose "Opening Melody".
Press ▲ CAPS / EDIT ▼ to choose "On" or "Off".
If choosing "On", you are requested to select a kind of opening melody, then press 輸入 to confirm.
Press 退出 to exit.

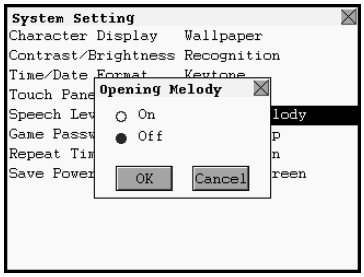

Note: *Before setting this option, user should download opening melody to the unit first.*

11.1.14 Color Setup

Enter "Color Setup".

Choose the desired item and touch a color box shown on the screen to set it for the current item, then press 輸入 or touch [OK] to confirm.

Touch [Reset] to return to the system default color.
Press 退出 to exit.

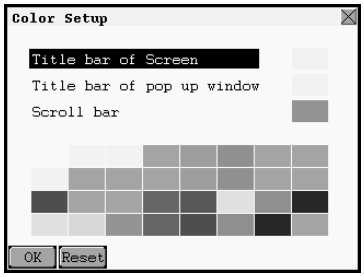

11.1.15 Calibration

To calibrate the location of the stylus.

Choose “Calibration”.
Follow on-screen instructions
to hit the center of the target until
calibration is OK.

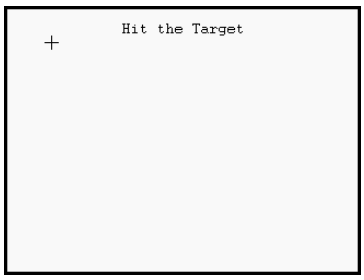

11.1.16 Opening Screen

To set Entry Screen and Opening Screen.

Choose “Opening Screen Setting”.
Press ▲CAPS ▼EDIT to select “Entry Screen”
or “Opening Screen”.

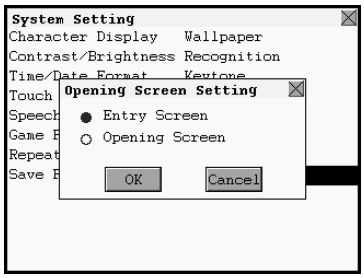

Choose and enter “Entry Screen”.
Press ▲CAPS ▼EDIT to select “Main menu”,
“Resume”, “Oxford E-C Dict”,
“E-C Dict.” or “Scheduler”,
then press 輸入 to confirm. The unit
will directly access to Main menu,
Resume, Oxford E-C Dict, E-C Dict.
or Scheduler next time when you turn it on.

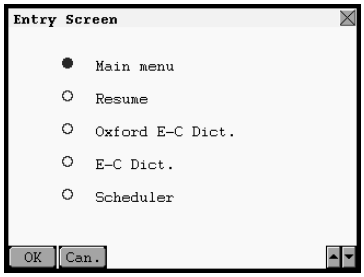

Choose and enter “Opening Screen”.
Press ▲CAPS ▼EDIT to select “None”, “Built-in”
or “Download”.

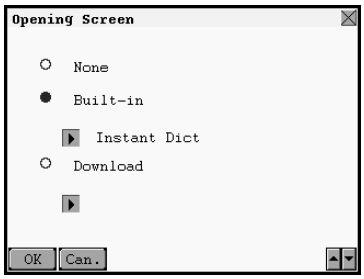

If “None” is selected, no picture will display every time you power on the unit.

If choose “Built-in”, click it to preview the built-in pictures.

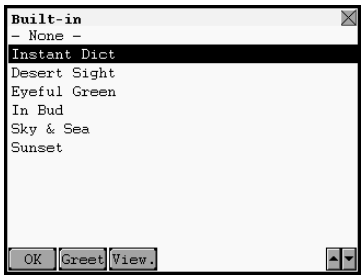

Press [CAPS] [EDIT] to choose one picture,
touch [Greet] to input greeting words;
touch [View.] to preview the picture;
press [输入] to confirm.

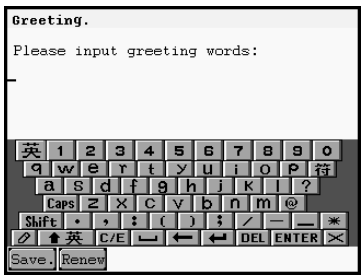

If choosing “Download”, you can configure a downloaded picture as the opening screen provided that there is some record available in the unit. (User should download the picture to the unit first.)
Press [退出] to exit.

11.2 Data Deletion

In this application, you can delete the data in E-C User’s Dict., C-E User’s Dict., E-E User’s Dict., Oxford Revision, E-C Revision, C-E Revision, Conv. Revsion, Vocab. Revision, Per. Information, Tele. Directory, Memorandum, Schedule, Solar Commem., Lunar Commem., Shorthand, Notepad, Schedule Class, To Do List, Voice Memo, Photo, Financial Mangt., All unmarked data, All marked data and All downloaded files etc.. (Both Key-entry and Touch-and-go operations are supported.)

Choose “Data Deletion”.
Press [CAPS] [EDIT] to select the desired item or touch the item directly, then press [输入] or touch [Del.] to delete its all records.

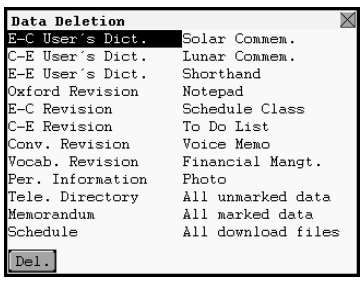

e.g. select “Tele. Directory”.
Press [N] to keep the records.
Press [Y] to delete all the records.

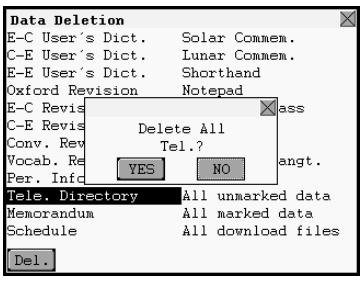

Press [Y] to confirm delete.
Press [N] to abort.

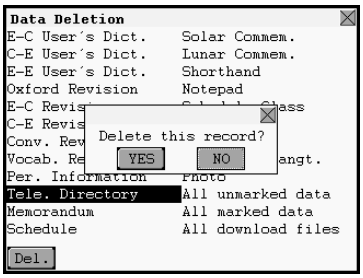

11.3 Memory Check

To check the occupied memory and free memory. (Both Key-entry and Touch-and-go operations are supported.)

Choose “Memory Check” to display the occupied and free memory.

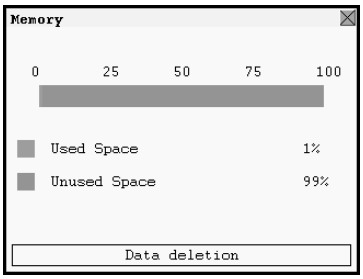

Touch [Data Deletion] to enter its index mode.
Press [退出] to exit.

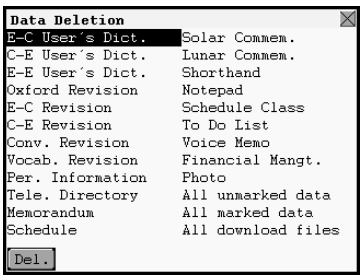

11.4 Brief of Function

With this application, you will master the brief of functions of the unit easily and quickly.

Choose “Brief of Function”.

Press ▲ EDIT ▼ ◁ AC ▷ to scroll through the content.

Press 退出 to exit.

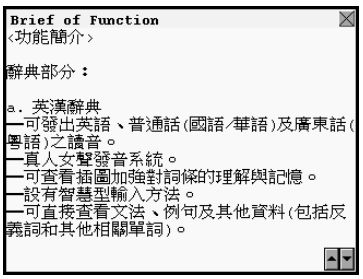

11.5 PC Sync.

The unit can be linked with a personal computer to synchronize the information.

Note: *Please make sure the connection is secure before launching PC Sync.*

Choose “PC Sync.” in System menu, touch [Start] to start synchronizing.

Press 退出 to exit.

CHAPTER 12 LEARNER

The TruVoice files that are downloaded from your computer are saved in the Learner of the unit. You can transmit new files including daily conversation, vocabulary and exercises, to the unit at any time. Below is a basic description of general operations in Learner.

12.1 Methods for downloading data

You can synchronize data in your computer with the unit by connecting to the web site http://www.instant-dict.com.hk and then downloading the relevant files suitable for use with MD8200.

Note: *For installations of download program and operations of downloading, please refer to Chapter14.1 and Chapter14.2.*

If downloaded TruVoice files fail to be transferred to the unit, no data will be displayed in the Learner. If files are successfully transmitted, they will automatically fall into categories and be saved in the corresponding folder. Various categories are included in the unit. Only after a file is successfully downloaded can the relevant category appear on the screen.

e.g. After a file named "職業英語詞彙(卷一)" is transferred to the unit, the unit will auto-judge which category the file is classified into. If it belongs to "Say with me", the screen will display "Say with me".

In Learner menu, press [CAPS] [EDIT] [AC] to select a category, e.g. "脫口說英文(Say with me)", then press [輸入] to select the desired file.

The selected category can be deleted by pressing [SHIFT] [DEL].

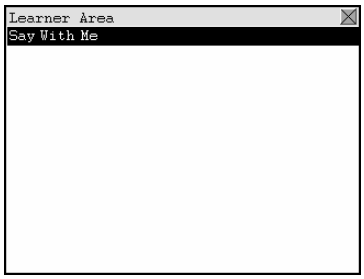

In a category mode, press [CAPS] [EDIT] [AC] to select a file, then press [輸入] to confirm.

e.g. Choose "職業英語詞彙(卷一)"

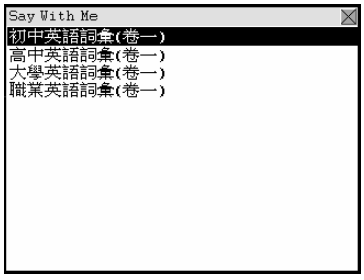

12.2 Viewing Data

In View mode, press ▲ ▼ to view its details.
Press Δ √ to view the previous or next record.
Press 發音 or touch [R.V.] to listen to the TruVoice pronunciation.
Highlight an English word or a Chinese character, then press 發音 國語 粵語 to listen to the relevant pronunciation.

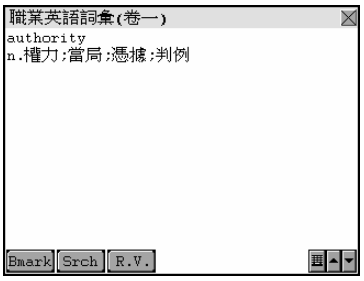

Note: *In View mode, highlighting an English word or a Chinese character can perform cross-search function unlimitedly. For details, refer to the relevant operations in Dictionary section.*

12.3 Deleting Data

After a file is highlighted, you can delete it by SHIFT+DEL.
Press Y or touch [YES] to delete;
Press N or touch [NO] to cancel.

12.4 Functions of Repeat & Follow

In View mode, press 發音 to listen to the English pronunciation; press 複讀 to perform repeat function, you can listen to the English pronunciation for 1-99 times (depending upon user's setting). Press 退出 to exit; press 放音 自動 to apply to the auto-repeat function, all records in selected files will be pronounced repeatedly (repeat times depending on your setting). Press 退出 to exit; press 錄音 速度 to set the speed of speech.
Press 跟讀, the system will speak out the original pronunciation once, and then start recording after a message "Record after a beep" appears. While recording, press 退出 to stop. After recording completes, the system will speak out the original pronunciation and play recording once.

Press [SHIFT] [複讀] to play the TruVoice pronunciation and recording repeatedly (repeat times depends upon your setting), press [退出] to exit.

Note: *While recording, the system will automatically stop recording and start following provided recording continues so that the timeouts period elapses.*

12.5 Functions of Bookmark

In Data View mode, press [SHIFT] [標記儲存] or touch [BMark] to bring up the Bookmark screen.
Press [▲CAPS] [▼EDIT] to select the desired item, then press [輸入] to confirm.

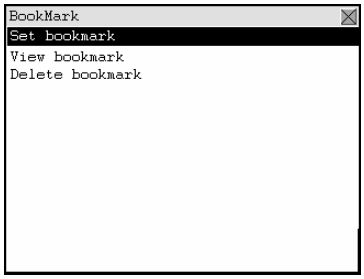

After highlight “Set bookmark”, press [輸入] to add the bookmark on a record.

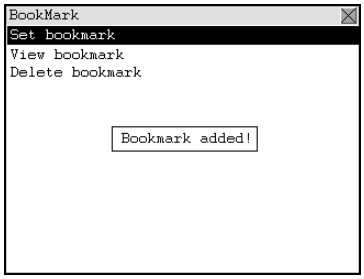

Choose “View bookmark” to enter bookmark view mode.
Press [▲CAPS] [▼EDIT] [◁C] [▷AC] to move the highlight bar on a bookmark, then press [輸入] or touch the selected bookmark to view its details.

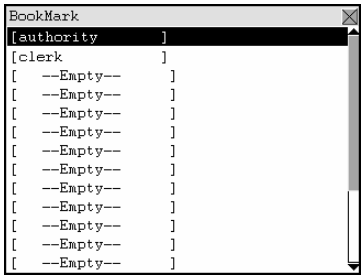

Choose “Delete bookmark” to enter bookmark view mode.
Press [▲CAPS] [▼EDIT] to move the highlight bar on a bookmark, then press [輸入], a dialogue box that prompts you to confirm delete will appear.
Press [Y] or touch [YES] to remove the highlighted bookmark.
Press [N] or touch [NO] to cancel.

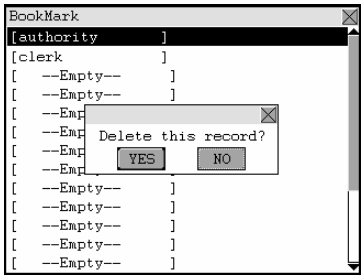

CHAPTER 13 Download

The files that are downloaded from your computer are saved in the Download of the unit. To expand the utility of the unit, you can transmit new files to the unit at any time. Below is a basic description of general operations in Download.

13.1 Methods for downloading data

You can synchronize data in your computer with the unit by connecting to the web site http://www.instant-dict.com.hk and then downloading the relevant files suitable for use with MD8200.

Note: *For installations of download program and operations of downloading, please refer to Chapter14.1 and Chapter14.2.*

If downloaded TruVoice files fail to be transferred to the unit, no data will be displayed in the Download. If files are successfully transmitted, they will automatically sort by categories and be saved in the corresponding folder. Various categories are included in the unit. Only after a file is successfully downloaded can the relevant category appear on the screen.

e.g. After a file named “職業英語詞彙(卷一)” is transferred to the unit, the unit will auto-judge which category the file is classified into. If it belongs to “Say with me”, the screen will display “Say with me”.

In Download menu, press [CAPS] [EDIT] [AC] [AC] to select a category,

e.g. “Say with me”,

then press [輸入] to select the desired file.

Press [SHIFT] [DEL] to delete the selected category.

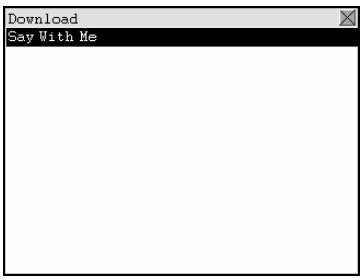

In a category mode, press ▲ ▼ ◁ ▷ to select a file, then press 輸入 to confirm.

e.g. Choose “職業英語詞彙(卷一)”.

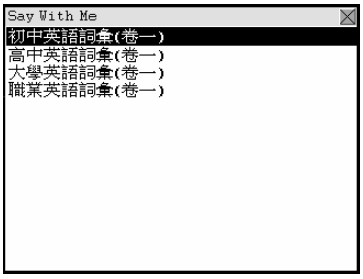

Note: *If a file that can be executed is selected, the system will automatically execute its relevant application once 輸入 is pressed . If opening screen is selected, you can preview the opening screen after you press 輸入. After you start up the unit, you can access “System Setting” in “System” to make relevant settings.*

13.2 Viewing Data

In Data View mode, press ▲ ▼ to view the detail line by line.

Press ◁ ▷ to view the previous or next record.

Press 真人女聲 發音 or touch [R.V.] to listen to the TruVoice pronunciation.

Highlight an English word or a Chinese character, then press 真人女聲 發音 德語 國語 粵語 粵語 to listen to the relevant pronunciation.

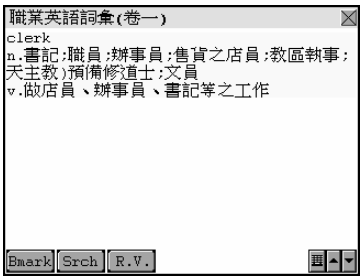

Note: *In View mode, highlighting an English word or a Chinese character can perform cross-search function unlimitedly. For details, refer to the relevant operations in Dictionary section.*

13.3 Deleting Data

After a file is highlighted, you can delete it by pressing .

Press [Y] or touch [YES] to delete;

Press [N] or touch [NO] to cancel.

13.4 Functions of Bookmark

In View mode, press [SHIFT] [標記 儲存] or touch [Bmark] to bring up the Bookmark screen.

Press [▲ CAPS] [▼ EDIT] to select the desired item, then press [輸入] to confirm.

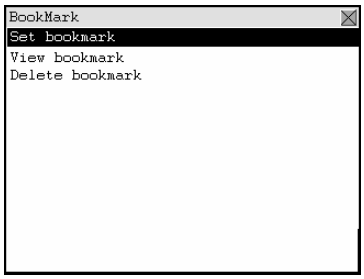

After highlight “Set bookmark”, press [輸入] to add the bookmark to a record.

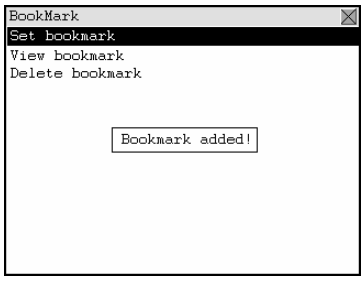

Choose “View bookmark” to enter bookmark view mode.

Press [▲ CAPS] [▼ EDIT] [Δ C] [▽ AC] to select a bookmark, then press [輸入] or touch the selected bookmark to view its details.

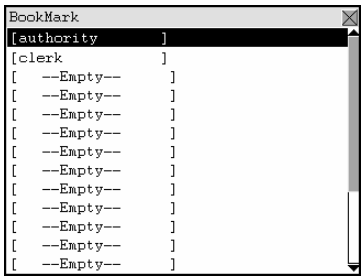

Choose “Delete bookmark”

to enter bookmark view mode.

Press to select a bookmark,

then press , a dialogue box that prompts

you to confirm delete will appear.

Press or touch [YES] to remove the

highlighted bookmark.

Press or touch [NO] to cancel.

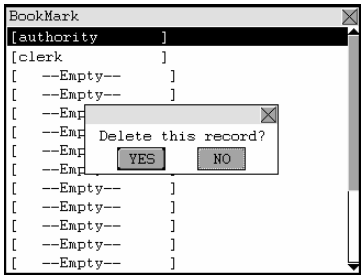

CHAPTER 14 APPENDIX

14.1 PC Sync.

When enabled, it allows you to transfer data between the electronic dictionary and your computer by connecting them.

Note: *Before launching synchronization, make sure that PC Sync program has been installed.*

14.1.1 Installation

1. System Requirements: Suggest to use Pentium or above, or to use other 100% compatible PC, and run under Windows® 98, Windows® Me, Windows® 2000, Windows® XP operating system.
2. Enter Chinese or English Windows® 98, Windows® Me, Windows® 2000 operating system, Windows® XP, then insert PC Sync. Program compact disk into the CD-ROM.
3. Look for the file named "Setup.exe" in the compact disk and double-click it to execute the installation program.
4. Click "Cancel" to cancel and exit program installation screen; Press "Next" or "Continue" to continue, then follow the instructions on the screen until the installation is complete and restart the computer.

Note: User can install PC Sync. program and download program when the file named "Setup. exe" is being executed.

5. Turn on the unit and connect it to a computer, a message will prompt you to search the driver path, e.g. "E: \driver". Follow the on-screen directions to complete the installation.

-- For details, please refer to "Readme" file in Compact Disk.

14.1.2 Uninstallation

If you are sure to remove the program from your computer, just run "Uninstall" to remove it. The screen is as below:

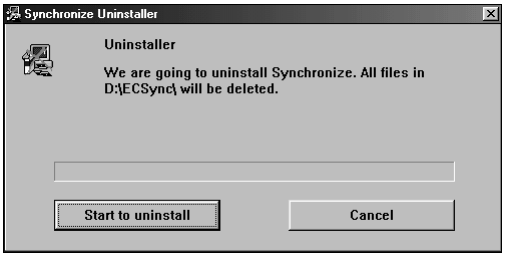
Synchronize Uninstaller
Uninstaller
We are going to uninstall Synchronize. All files in D:\ECSync\ will be deleted.
Start to uninstall
Cancel

14.1.3 Start-up

When the installation is completed, you can find the PC Sync. program files in the "Program" menu. Click "PC Sync. icon", which appears on the taskbar to run the program.

PC Sync. Icon

14.1.4 General Operation

1. Function Table

Click "PC Sync.icon", a screen similar to the following will appear:

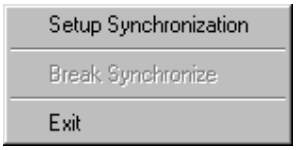

a. Setup Synchronization: refer to "2. Setup Synchronization" for details.

b. Exit: close PC Sync. program

2. Setup Synchronization

Click "Setup Synchronization", the following screen will appear:

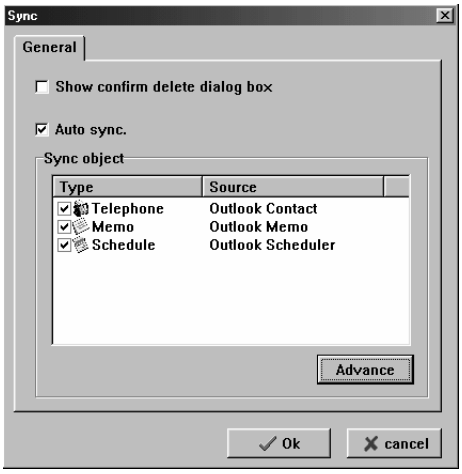

a. Show confirm delete dialog box:

During synchronizing, it will show a dialog box for you to confirm the deletion if a certain record was deleted in either side of the unit or PC, but was not modified in another side.

b. Auto-sync:

Set PC Sync. to auto-detect the unit to enter synchronization or not, and auto-handle it; if not confirmed, the synchronization can not be launched.

c. Please click the items for synchronization.

Note: *Only the selected objects can be synchronized.*

Advance

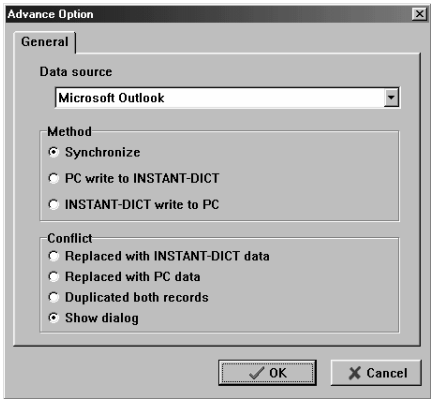

[General]

Data Source:

Microsoft Outlook

a. Method:

-- Synchronize

When the same record is modified on both PC and Dictionary, you can select either one of them, but there will be the following conflict items:

(1) Replaced with INSTANT-DICT data

(2) Replaced with PC data

(3) Duplicated both records

(4) Show dialog

Note: *Since last synchronization, if records are added, deleted, modified on either one of INSTANT-DICT or PC, when synchronizing, new data will be added to the other side, or the relevant data on the other side will be deleted or overwritten (Records on the other side haven't been modified). If the same record is modified on both sides, the conflicts will be displayed.*

-- PC write to INSTANT-DICT:

When transmitting data from PC to INSTANT DICT, there are two items as below:

(1) PC data join to INSTANT-DICT

(2) Clear INSTANT-DICT data first, then copy PC data.

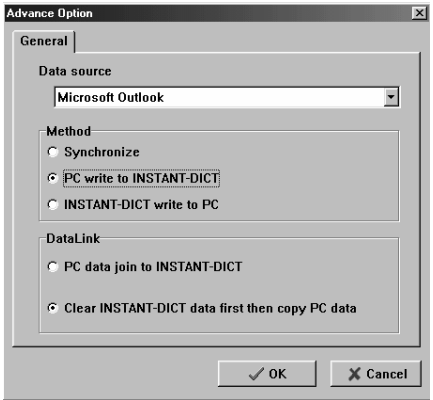

-- INSTANT-DICT write to PC

When transmitting data from Dictionary to PC, there are two items as below:

(1) INSTANT-DICT data join to PC

(2) Clear PC data first, then copy INSTANT-DICT data.

Note: *When choosing one-way transfer, e.g. transfer data from INSTANT-DICT to PC, there are two items for choosing (see the two graphics above). If there is no data in INSTANT-DICT, and "Clear PC data first, then copy INSTANT-DICT data" is selected, all of the data will be deleted.*

14.1.5 Synchronization

1. Before the synchronization, you should connect both terminals of the transmission cable to the unit, one is for data link jack and the other is for USB port in PC.
2. Run PC Sync. program and enter "PC Sync." in System menu. Click "Start", the following screen will be shown on the PC:

3. The appearance of dialogue box "Completed transmission!" indicates that synchronization is complete.

14.1.6 Corresponding Table of the Unit & Outlook

The table shows the corresponding names used in Dictionary and PC.

Unit	OUTLOOK
Telephone	Contacts
Memo	Notes
Schedule	Calendar

Note: *You are strongly recommended to use Outlook97/98/2000 versions.*

1. Telephone

a. Operations in the unit

-- Enter Telephone Directory, input data and save it.

-- Click “INSTANT-DICT Sync.” icon on the taskbar of PC, and select “Setup Synchronization”, click the item “Telephone”, and select the method and the conflict in “Advance”.

-- Choose “PC Sync.” from System menu of the unit, then press or touch [Start] to start it.

b. Corresponding operations in Outlook:

-- Enter Outlook, and move the mouse to the place indicated as below, then click the left key of the mouse.

-- Click “Contacts”.

-- If you have transferred or input data before, please click the pull-down arrow in the following screen, and choose “Phone List”.

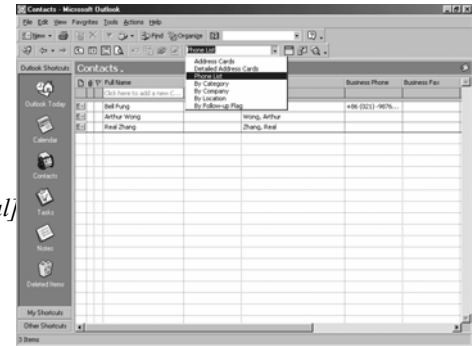

After choosing, the following screen will appear:

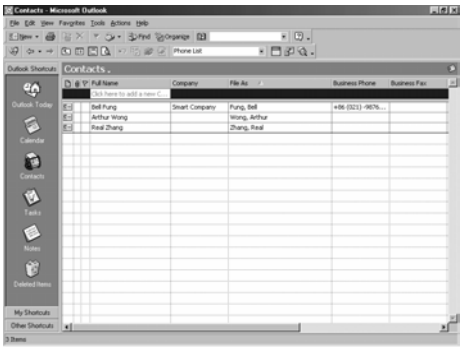

Double click “王大明(DaMing Wang)” with the left key of the mouse to view its details.

c. The table shows the corresponding names used in INSTANT-DICT and PC.

Name	Full Name
Category	File as
Email	E-mail
Mobile	Mobile
Pager	Pager
H. Tel	Home
H. Fax	Home Fax
H. Adr.	Home Address
Company	Company
Title	Job Title
D. Line	Business 2
Co. Tel	Business
Co. Fax	Business Fax
Co. Email	Business E-mail
Co. Adr.	Business Address
Notes	Notes

Note: *1) Data can be input or modified in either INSTANT-DICT or PC.*

2) Data can be transferred “from PC to INSTANT-DICT”, “from INSTANT-DICT to PC” or “Synchronization”.

2. Memo

a. Operations in the unit:

-- Enter Memo, input data and save it.

-- Click “INSTANT-DICT” icon on the taskbar of PC, and select “Setup Synchronization”, click the item “Memo”, and select the method and the conflict in “Advance ”.

-- Choose “PC Sync.” from System menu of the unit, then press or touch [Start] to start it.

b. Corresponding operations in Outlook:

-- Enter Outlook, and move the mouse to the place indicated as follows, then click the left key of the mouse.

-- Click “Notes”.

-- Or click the icon of left hand indicated as follows.

-- If you have transferred or input data before, the

following screen will appear:

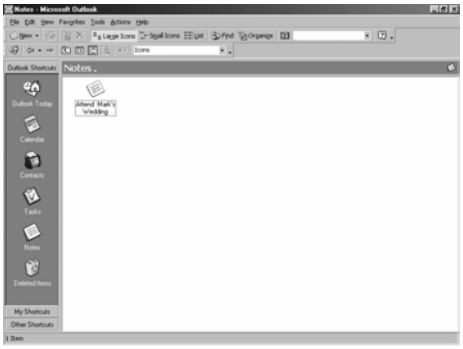

-- Open Notes, the following screen will appear:

Note: *1) Data can be input or modified in either INSTANT-DICT or PC.*

2) Data can be transferred "from PC to INSTANT-DICT", "from INSTANT-DICT to PC" or "Synchronize".

3. Schedule

a. Operations in the unit:

-- Enter Schedule, input data and save it.

-- Click "INSATANT-DICT Synchronization" icon on the taskbar of PC, and select "Setup Synchronization", click the item "Schedule", and select the method and the conflicts in "Advance".

-- Choose "PC Sync." from System menu of the unit, then press or touch [Start] to start it.

b. Corresponding operations in Outlook:

-- Enter Outlook, and move the mouse to the place indicated as follows, then click the left key of the mouse.

-- Click “Calendar”

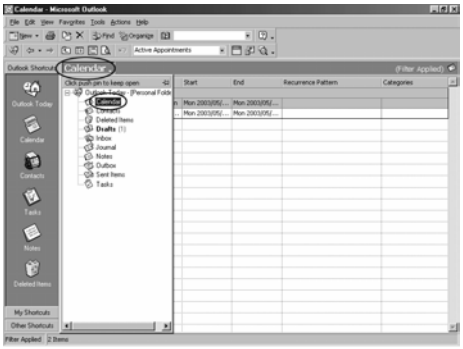

-- Select “Active appointments” as the following screen.

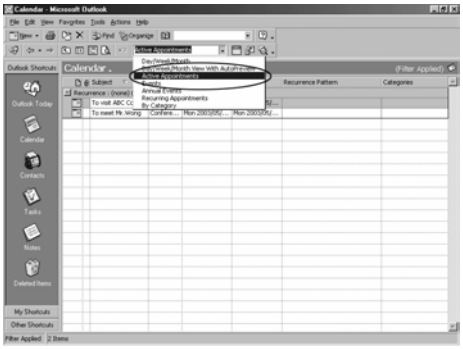

-- If you have transferred or inputted data before, the following window will appear:

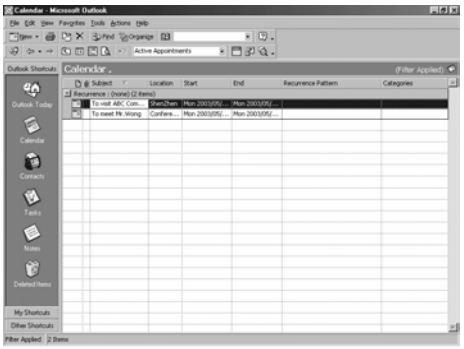

-- Double click “與王先生有約(Make an appointment with Mr. Wang) ” with the left key of the mouse to view its details.

c. The table shows the corresponding names used in Dictionary and PC.

Unit	Outlook
Date	Start date & Due date
Time	Start date & Due date
Alarm	Reminder
Content	Notes Field

Note: *1) Data can be input or modified in either INSTANT-DICT or PC.*

2) Data can be transferred “from PC to INSTANT-DICT”, “from INSTANT-DICT to PC” or “Synchronize”.

14.2 Download

You can transmit it/them to the unit by downloading desired files to your computer from our web site and then running download program, or directly download it/them to your unit.

Note: *Before downloading, make sure that download program has been installed.*

14.2.1 Installation

1. Chinese or English Windows System: Suggest to use Pentium or above, or to use other 100% compatible PC, and run under Windows® 98, Windows® Me, Windows® 2000, Windows® XP operating system.
2. Enter Chinese or English Windows® 98, Windows® Me, Windows® 2000, Windows® XP, then insert PC Sync. Program compact disk into the CD-ROM.
3. Look for the file named “Setup.exe” in the compact disk and double-click it to execute the program.
4. Click “Cancel” to cancel and exit installation window; Click “Next” or “Continue” to confirm, then follow the instructions on the screen until installation is complete.

Note: *User can install PC Sync. program and download program when the file “Setup. exe” is being executed.*

5. Turn on the unit and connect it to a computer, a message will prompt you to search the driver path, eg. “E: \driver”. Follow the on-screen directions to complete the installation.

-- For details, please refer to “Readme” file in Compact Disk.

14.2.2 Uninstallation

If you are sure to remove the program from your computer, just run “Uninstall” to remove it. The screen is displayed as follows:

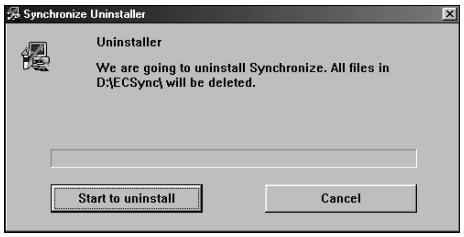
Synchronize Uninstaller
Uninstaller
We are going to uninstall Synchronize. All files in D:\ECSync\ will be deleted.
Start to uninstall
Cancel

14.2.3 Start-up

When the installation is complete, you can find download program in the “Programs” menu. Click “MD8200 Color” to run the program.

14.2.4 Operations in Download

The option enables you to transfer the data in Download to electronic dictionary to expand its utility.

1. In Download window, click “Download” button, the following screen will appear.

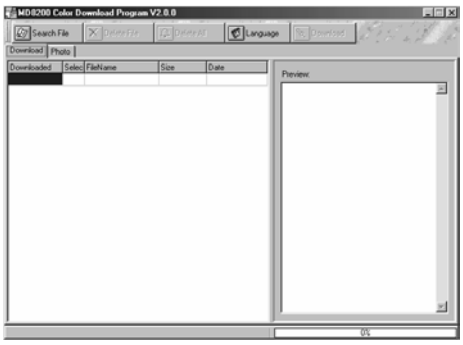

   a. Text files can be previewed in “Preview” area, located on the right part of the screen.
   b. On the left part of the screen displays file list. User can view the desired files and its attributes.
   c. Click “Search File”, “Delete File”, “Delete All”, “Language ”and “Download” to add, delete and set a transfer parameter respectively.

2. The following functions are supported in the Download:

   a. Add File

   Click “Search File”, the following screen will appear:

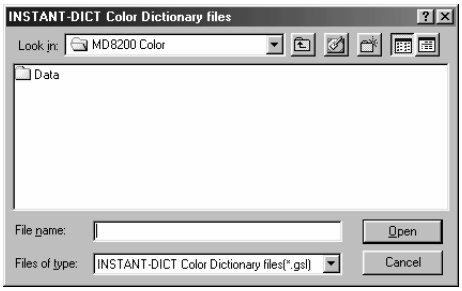

After a downloaded file(*.gsl or *.txt file) is selected, click “Open” to add it to the file list. The name, size and download date of the file will be shown on the screen.

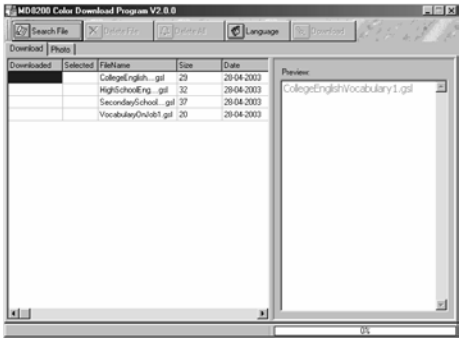

Note: *The files can be downloaded from our web site* http://www.instant-dict.com.hk *or opened in the add-on compact disk coming with MD8200.*

b. Delete File

Click “Select”(The symbol “*”will appear when an item is selected, click again to cancel it.) to select the file that you want to delete (More than one file can be selected), then click “Delete File” button, a confirmation dialogue box will appear on the screen:

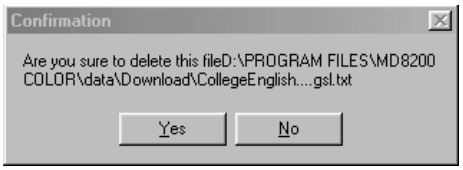

Click “Y” to delete the selected file from the file list; click “No” to cancel.

c. Delete All

No matter whether all files are selected or not, click “Delete All” button, then a confirmation message will appear:

Click “Y” to delete all files; click “N” to cancel.

d. Language setting

Click “Language ”, “Chinese” and “English” will be shown on the upper left corner of the screen.

Choose “English” to switch to English display mode, Otherwise, the display is in Chinese mode.

e. Transfer data

Click “Select”(The symbol “*”will appear when an item is selected, click again to cancel it.) to select the file that you want to transmit (More than one file can be selected), then click “ download” button to start downloading.

Note: *Before downloading, access “PC Sync.” System menu in the unit and click “Start”, then click “ Download” button in download program to download.*

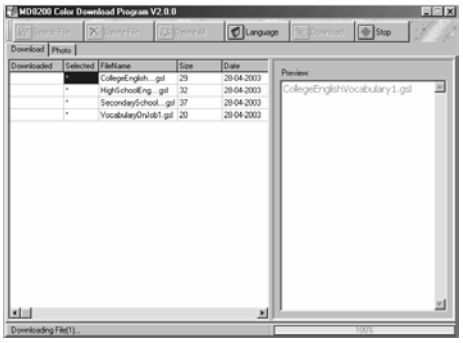

i) To break transmission, just click the “Stop” button either in the download program or in the unit.

ii) If a file is successfully transferred, a relevant message that indicates that transmission is successful will appear on the unit and your computer. If it fails to transmit, you will see a message that indicates that transmission failed.

Note: *1.The long latency time between clicking “Download” and pressing* 輸入 *(or clicking “Start”) may lead to transmission failure.*

2. After a file is downloaded, “Y” will be shown in the “Downloaded” column.

(For operations in “Photo”, please refer to Chapter 14.2.4 “Operations in Download”. All downloaded pictures are saved in the “Photo Album” of the electronic dictionary and can be configured as wallpaper and opening screen. To view them, enable the “Photo Album” function.)

14.3 Important

Congratulations on purchasing our PC Sync. and download software. Our company is dedicated to improving the software quality and releasing upgraded versions continuously. therefore, some features in the User’s Manual are subject to change without notice. If you require any product support, please contact our Customer Service Center.

14.4 Chart of Cangjie Input Method

哲理類		筆劃類		人體類		字形類	
日	𠃌	竹	丿 厂	人	𠆢 𠂉	尸	彐 匚
	A	斜	H		O	側	S
月	冂 一	戈	丶 厶	心	忄 乛	廿	艹 廿
	B	點	I		P	並	T
金	丷 八	十	宀	手	扌 扌	山	凵 屮
	C	交	J		Q	仰	U
木	十	大	乂 𠂇	口		女	𠂉 乚
	D	叉	K		R	紐	V
水	又	中	丨	難字	重字	田	口 母
氵	E	縱	L	X		方	W
火	灬 灬	一	工 厂	造字	片語	卜	亠 讠
灬	F	橫	M	Z		卜	Y
土	土	弓	亅 乛				
扌	G	鉤	N				

14.5 Radical Table for Difficult Radicals

亻 同 人	夂 同 攴	皿 同 目
刂 同 刀	灬 同 火	氵 同 水
巳 同 卩	爫 同 爪	冂 同 网
兀 同 尤	允 同 尢	歹 同 歹
互 同 彐	王 同 玉	足 同 足
忄 同 心	罒 同 网	正 同 足
扌 同 手	冗 同 网	母 同 毋
氵 同 水	冈 同 网	羊 同 羊
犭 同 犬	月 同 肉	襾 同 襾
阝 右 邑	艹 同 艸	
阝 左 阜	辶 同 辵	

14.6 Chart of WangMa-5 Input Method

區	位代碼	字母	基本字根
1 橫起類	1 11	G	王主一五夫丰牛步
	2 12	F	土士干二十寸申寸未甘雨
	3 13	D	大犬三戊古厂厂ナ石
	4 14	S	木木丁西西甫
	5 15	A	工匚匸戈七廿七艹廾甘艹艹
2 豎起類	1 21	H	目且丨卜卜上止止少虍
	2 22	J	日曰曰冂刂刂刂刂早虫
	3 23	K	口川川儿
	4 24	L	田口罒甲車车四罒罒罒皿
	5 25	M	山由贝冂冂勹几鼠
3 撇起類	1 31	T	禾𠂉丿灬夂彳攵
	2 32	R	白厂氵斤丘气乂扌手手
	3 33	E	月月罒彡用力豸豕毛仪氏𠂉臼
	4 34	W	人亻八𠂆𠂉几几
	5 35	Q	金钅𠂤勹夕𠂇𠂇𠂉勹𠂉𠂉鸟儿儿犭
4 捺起類	1 41	Y	言讠丶乀文亠一方圭
	2 42	U	立艹丷冫氵辛羊羊扌扌六门冊疒
	3 43	I	水氵氺氺氺氺氺氺氺氺灬灬小
	4 44	O	火灬业小小米广声米
	5 45	P	之冖宀辶廴礻礻
5 折起類	1 51	N	已己巳已卩乙耳コ尸尸心忄水羽
	2 52	B	子子了孑阝耳尸巴卩也乃口皮
	3 53	V	女巛刀九艮艮彐彐彐
	4 54	C	又ス马厶巴牛马
	5 55	X	幺纟纟母互毋弓七匕匕

14.7 Contrastive Chart between Pinyin and Zhuyin

1. Chart of Initial Consonant of a Chinese syllable

b	p	m	f	d	t	n	l
ㄅ玻	ㄆ坡	ㄇ摸	ㄈ佛	ㄉ得	ㄊ特	ㄋ訥	ㄌ勒
g	k	h		j	q	x	
ㄍ哥	ㄎ科	ㄏ喝		ㄐ基	ㄑ欺	ㄒ希	
zh	ch	sh	r	z	c	s	
ㄓ知	ㄔ蚩	ㄕ詩	ㄖ日	ㄗ資	ㄘ雌	ㄙ思	

2. Chart of Compound Vowel of a Chinese syllable

	i ㄧ 衣	u ㄨ 烏	ü ㄩ 迂
a ㄚ 啊	ia ㄧㄚ 呀	ua ㄨㄚ 蛙	
o ㄛ 喔		uo ㄨㄛ 窩	
e ㄜ 鵝	i ㄧㄝ 耶		üe ㄩㄝ 約
ai ㄞ 哀		uai ㄨㄞ 歪	
ei ㄟ 欸		uei ㄨㄟ 威	
ao ㄠ 熬	iao ㄧㄠ 腰		
ou ㄡ 歐	iou ㄧㄡ 憂		
an ㄢ 安	ian ㄧㄢ 煙	uan ㄨㄢ 彎	üan ㄩㄢ 冤
en ㄣ 恩	in ㄧㄣ 因	uen ㄨㄣ 溫	ün ㄩㄣ 暈
ang ㄤ 昂	iang ㄧㄤ 央	uang ㄨㄤ 汪	
eng ㄥ 亨的韻母	ing ㄧㄥ 英	ueng ㄨㄥ 翁	
ong (ㄨㄥ) 轟的韻母	iong ㄩㄥ 雍		

The New Oxford English-Chinese Dictionary
© Oxford University Press 1989,1993,1997,2000.

TruVoice is a registered trademark of Lernout & Hauspie Speech Products N.V. in the U.S.A and other countries.
Copyright © 1996-1998 Lernout & Hauspie Speech Products N.V., All Rights reserved.

The ULC15 voice compression software in this product is owned by and proprietary to Voxware, Inc.

中文手寫輸入法由北京漢王科技有限公司授權使用

九方中文入字法由快碼資訊科技有限公司授權使用

If you have read the user's manual, but you still require product support, you can:

Visit our web site:

http://www.gsl.com.hk

Send an E-mail to:

gsl@gsl.com.hk

Addresses and telephone numbers of GSL branches, please refer to the appendix of the warranty card.

Manufacturer: Group Sense Ltd.

Address: Caiwu Industrial Park, Wusha, Changan Township, Dongguan City, Guangdong Province, People's Republic of China

Due to a huge database, mistakes are inevitable despite the great effort we have made to minimize them while we apologize for any defects. Your invaluable comments are therefore highly appreciated.

We continuously strive for the improvement of product quality and release upgrade versions constantly, so all upgraded versions are subject to changes in their features, specification and design without further notice.